

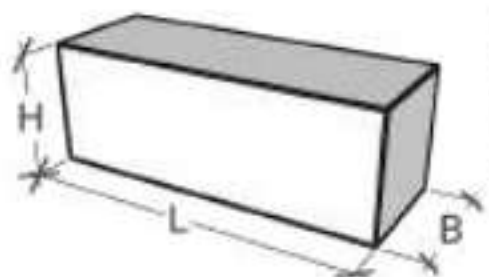
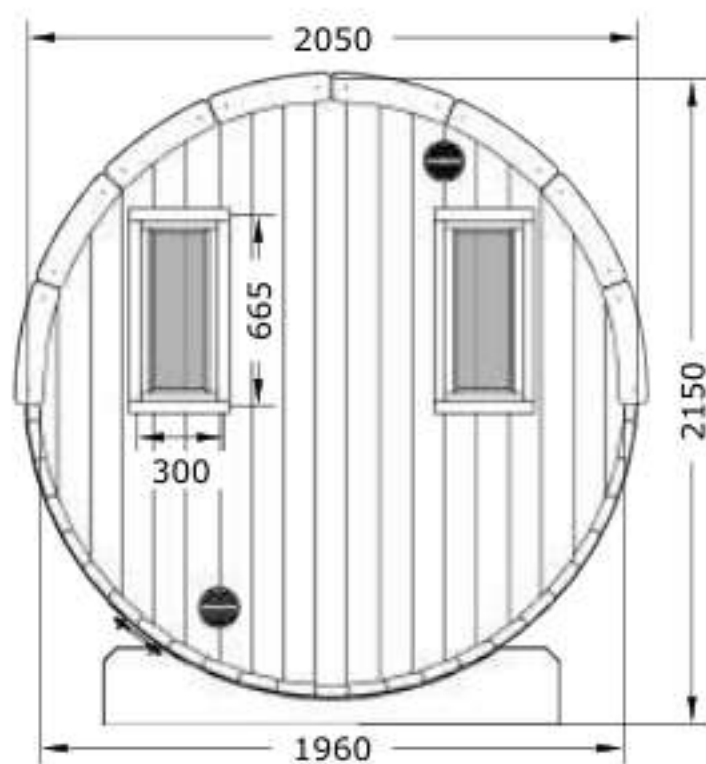


# COUNTRYWOOD

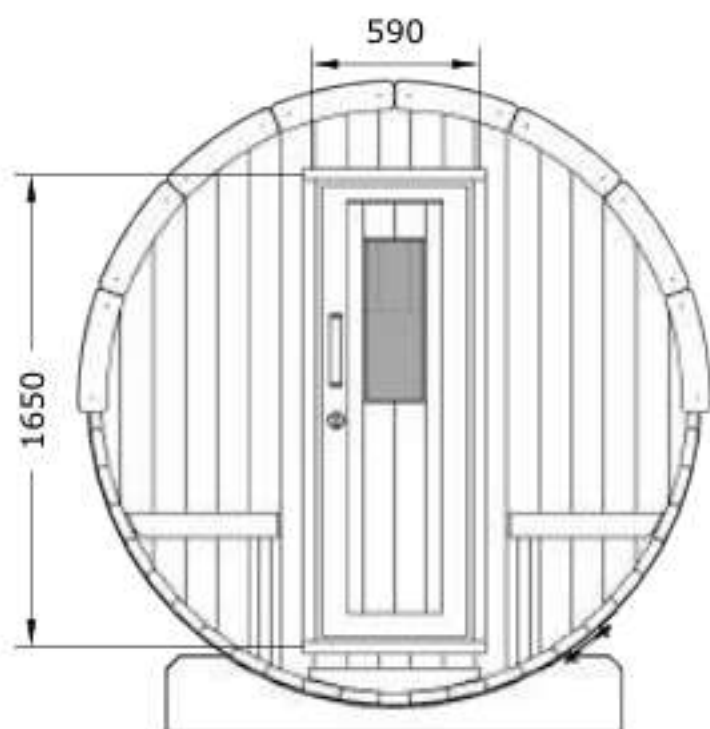

# Sauna 350, Ø205

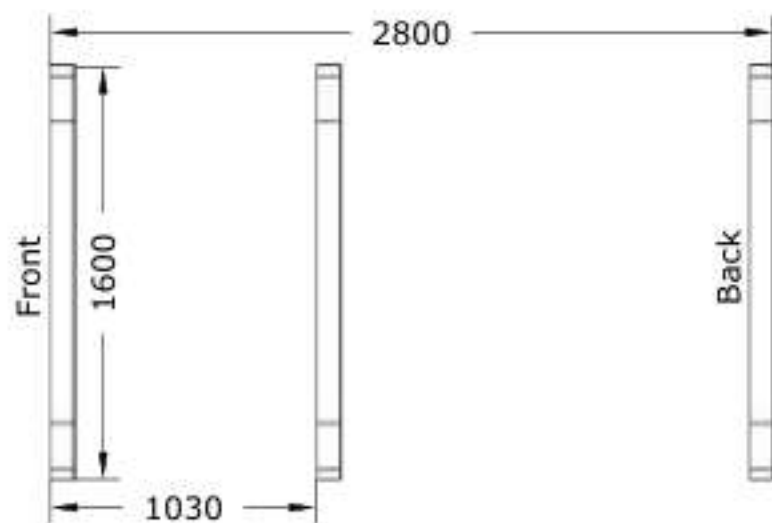


(LxBxH) 355x120x120 cm.

960 kg.



kg

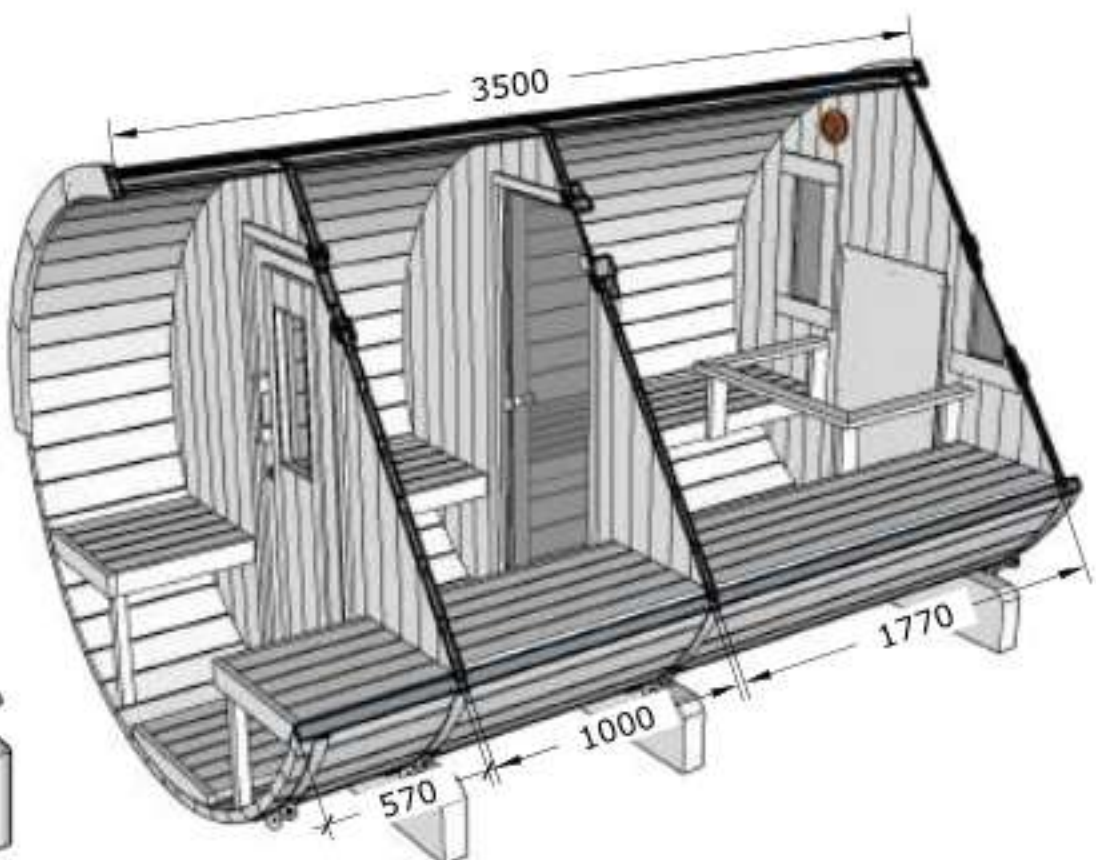

## Sauna 250, D205 (spruce)


**Please read the whole manual  
before You start.**

**All given measurements  
are in millimeters.**




# SAUNA 250, D205

## Details list Nr. 1


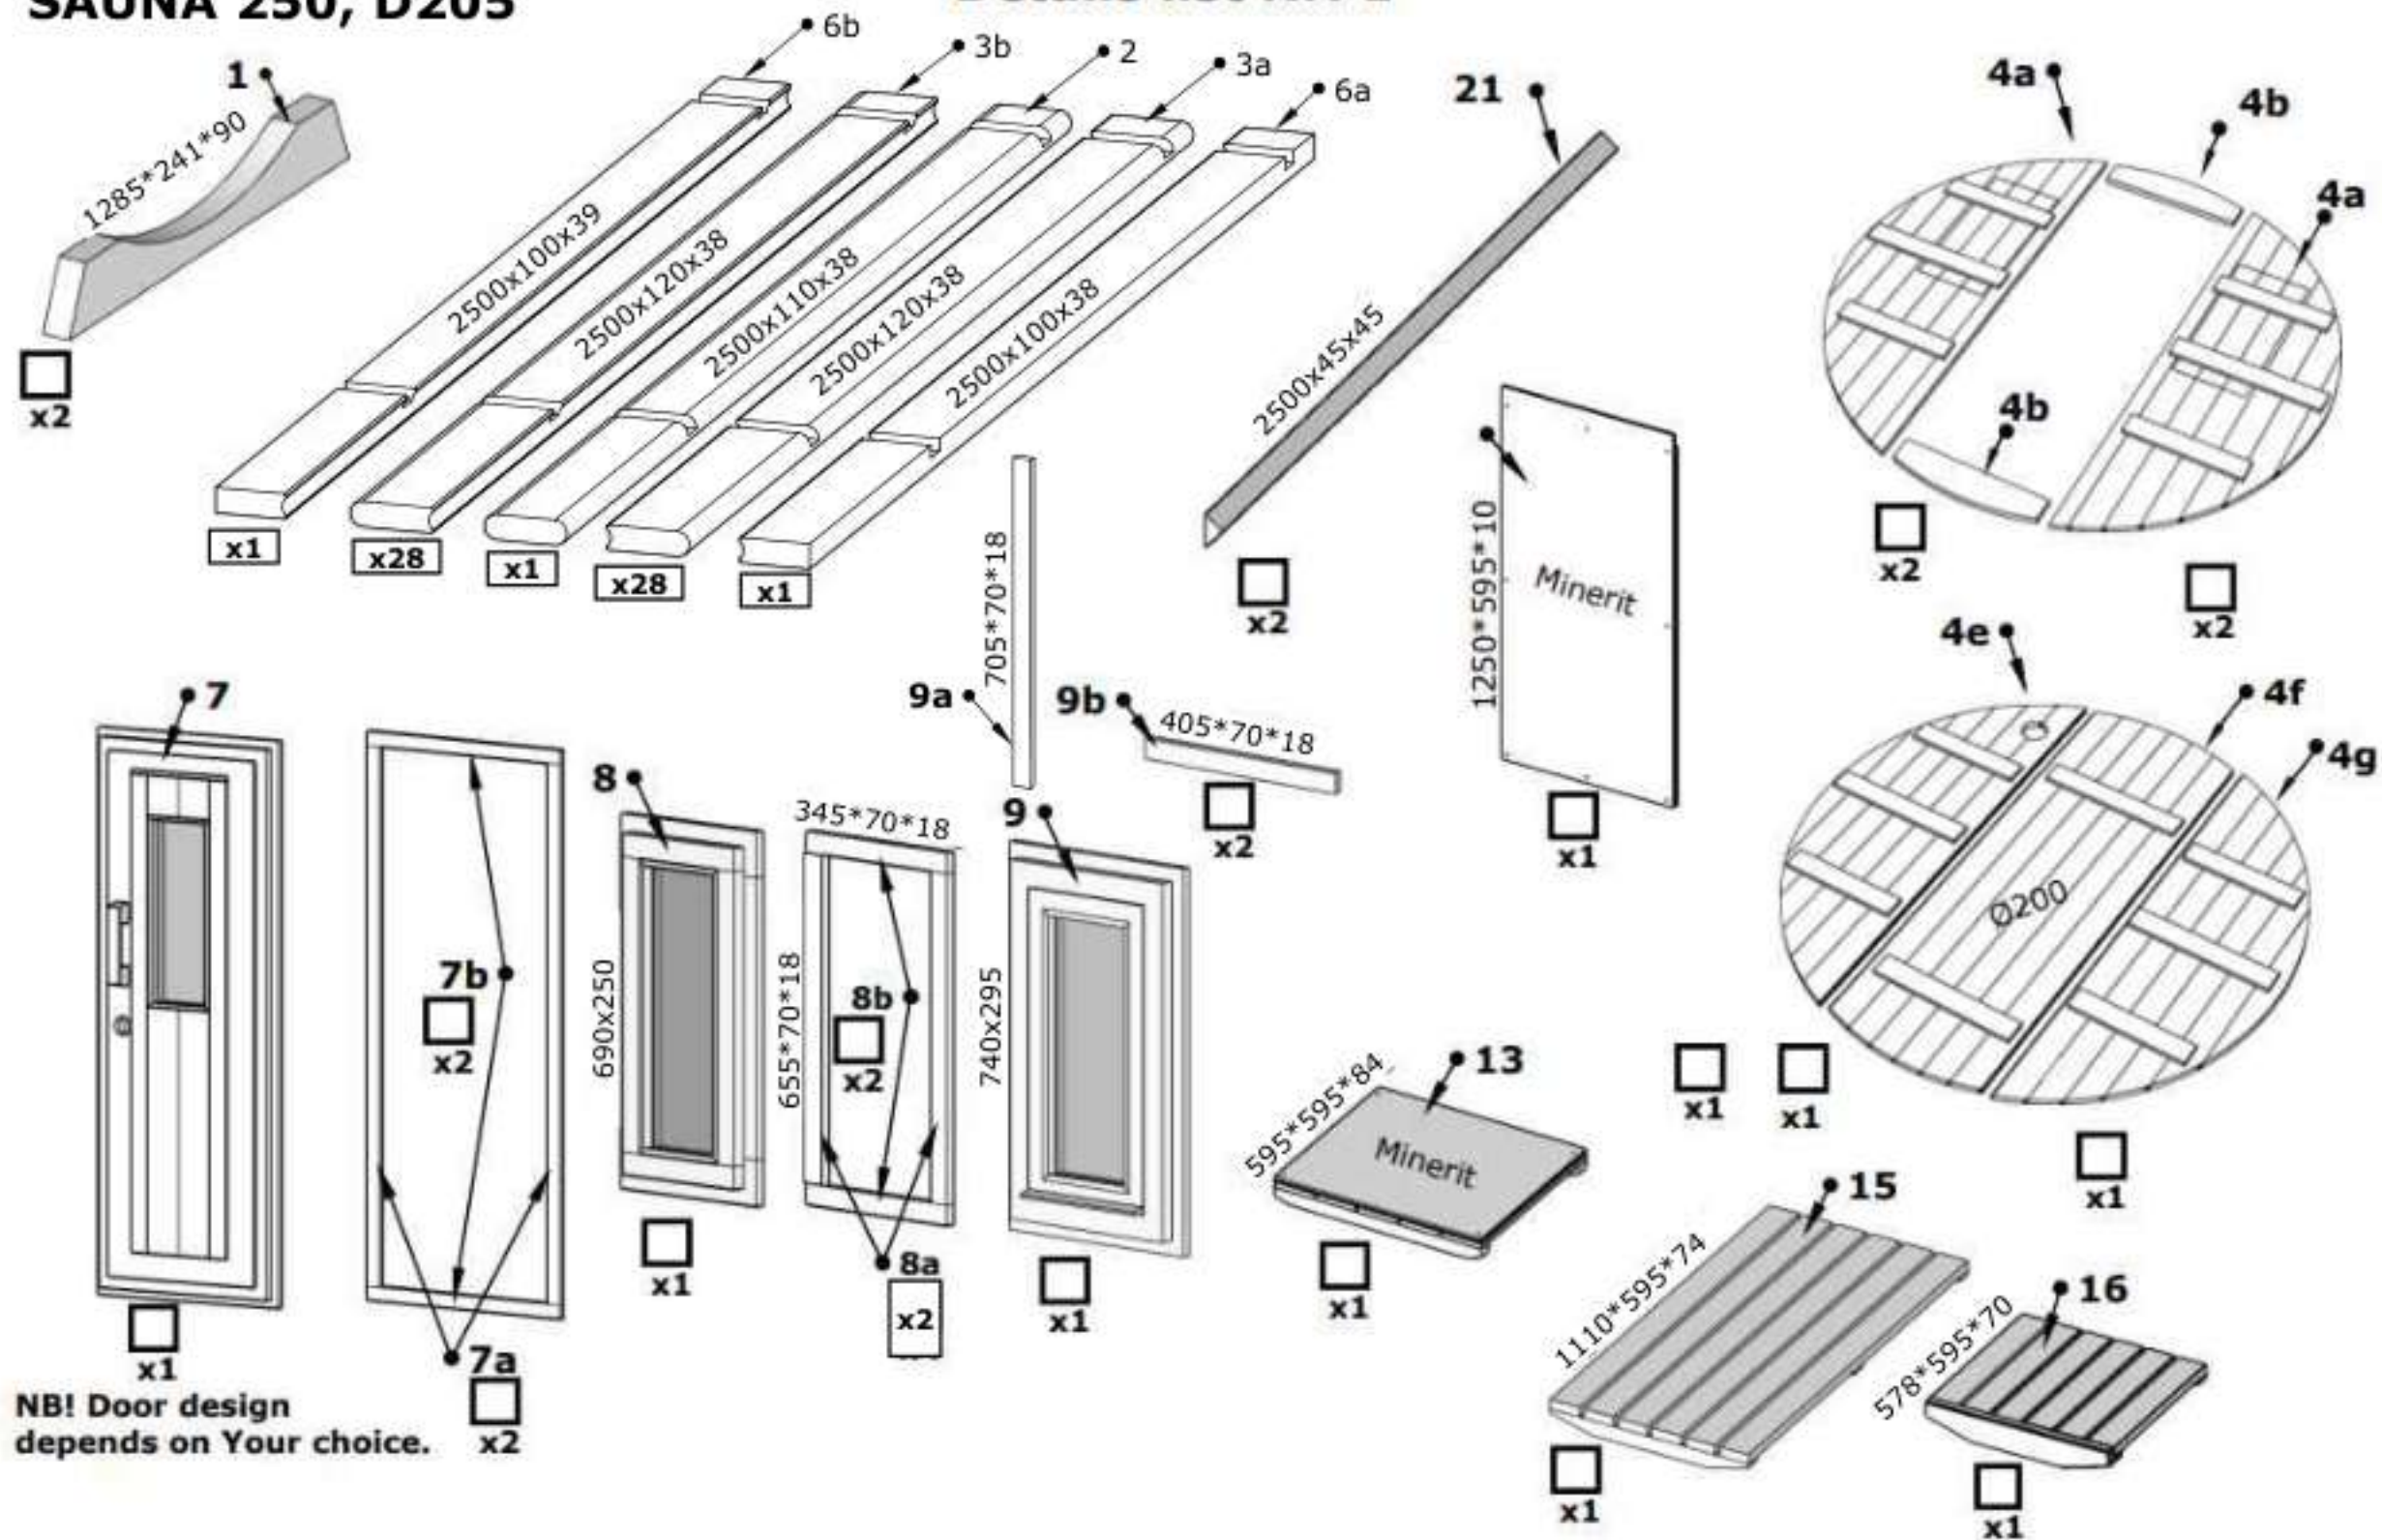


# SAUNA 250, D205

## Details list Nr. 2




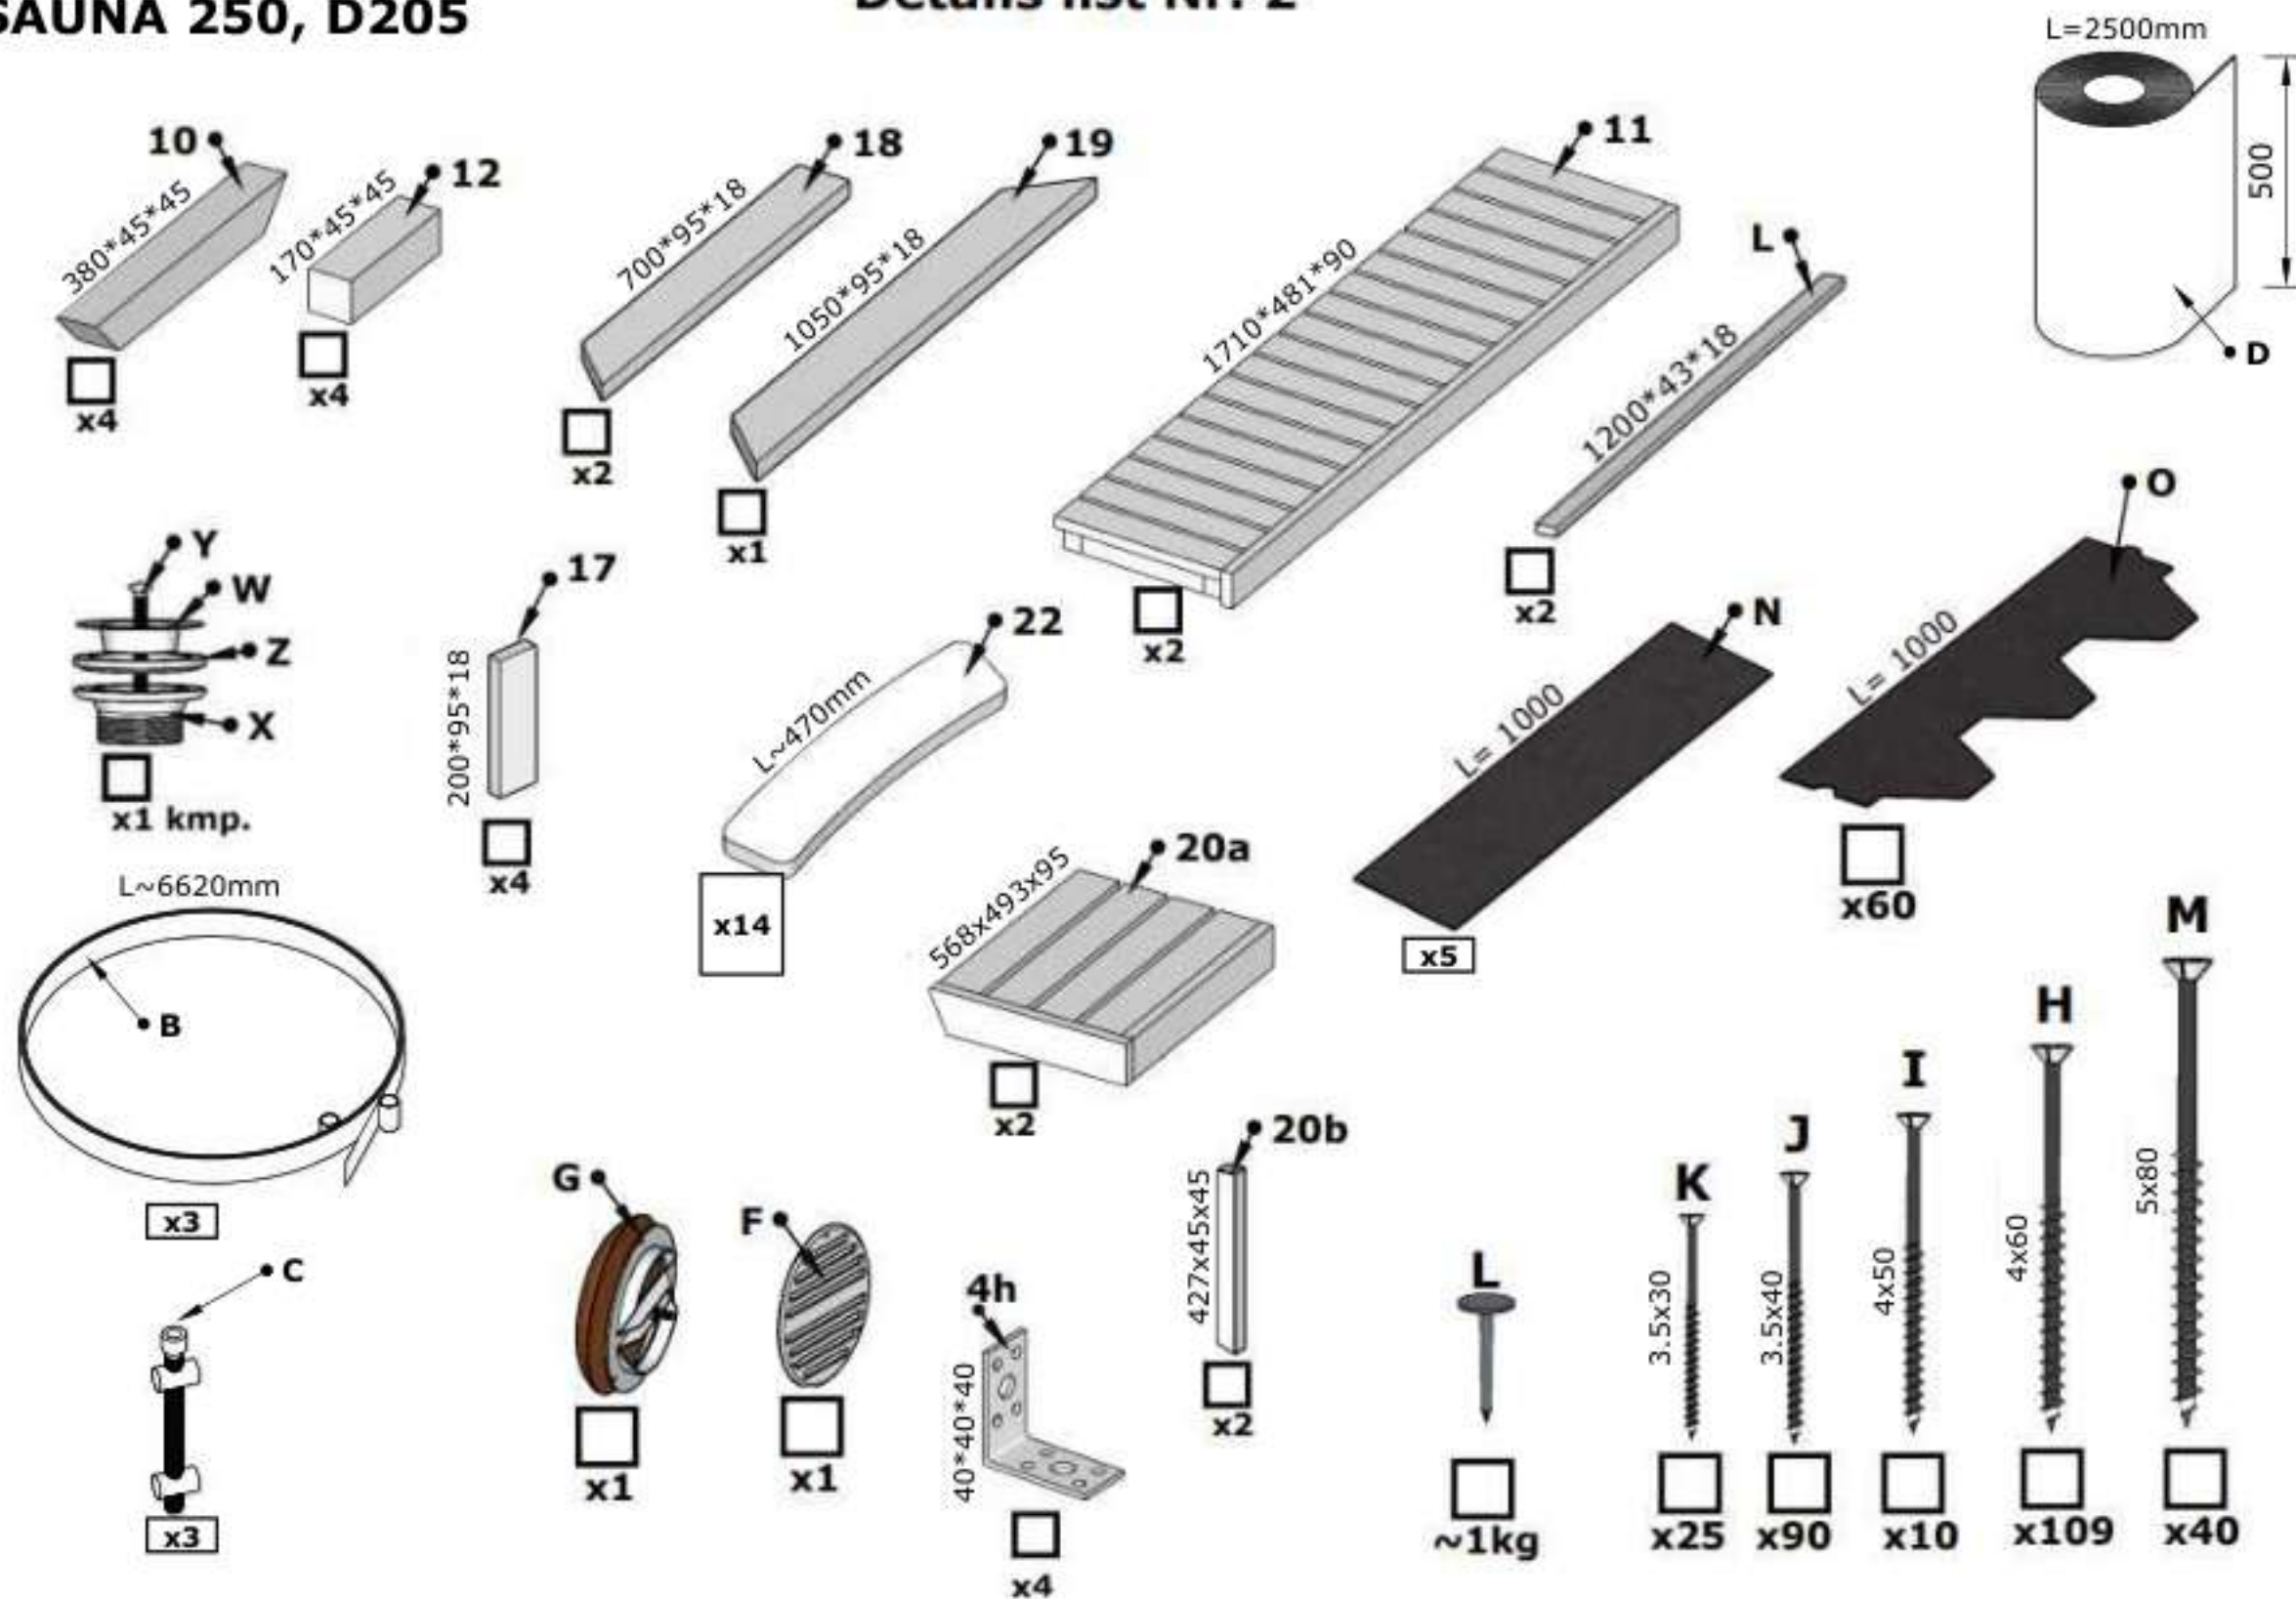


# SAUNA 250, D205

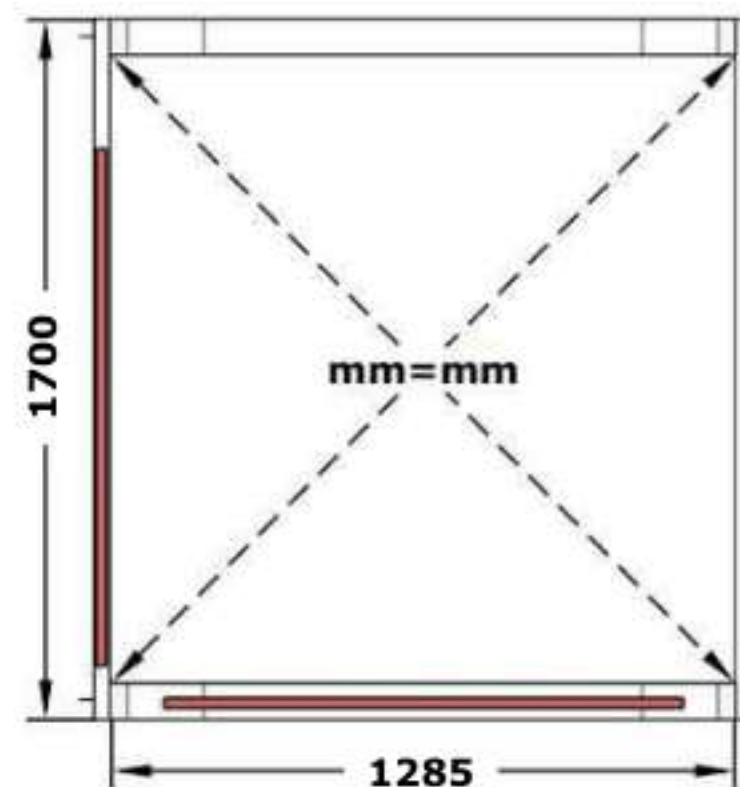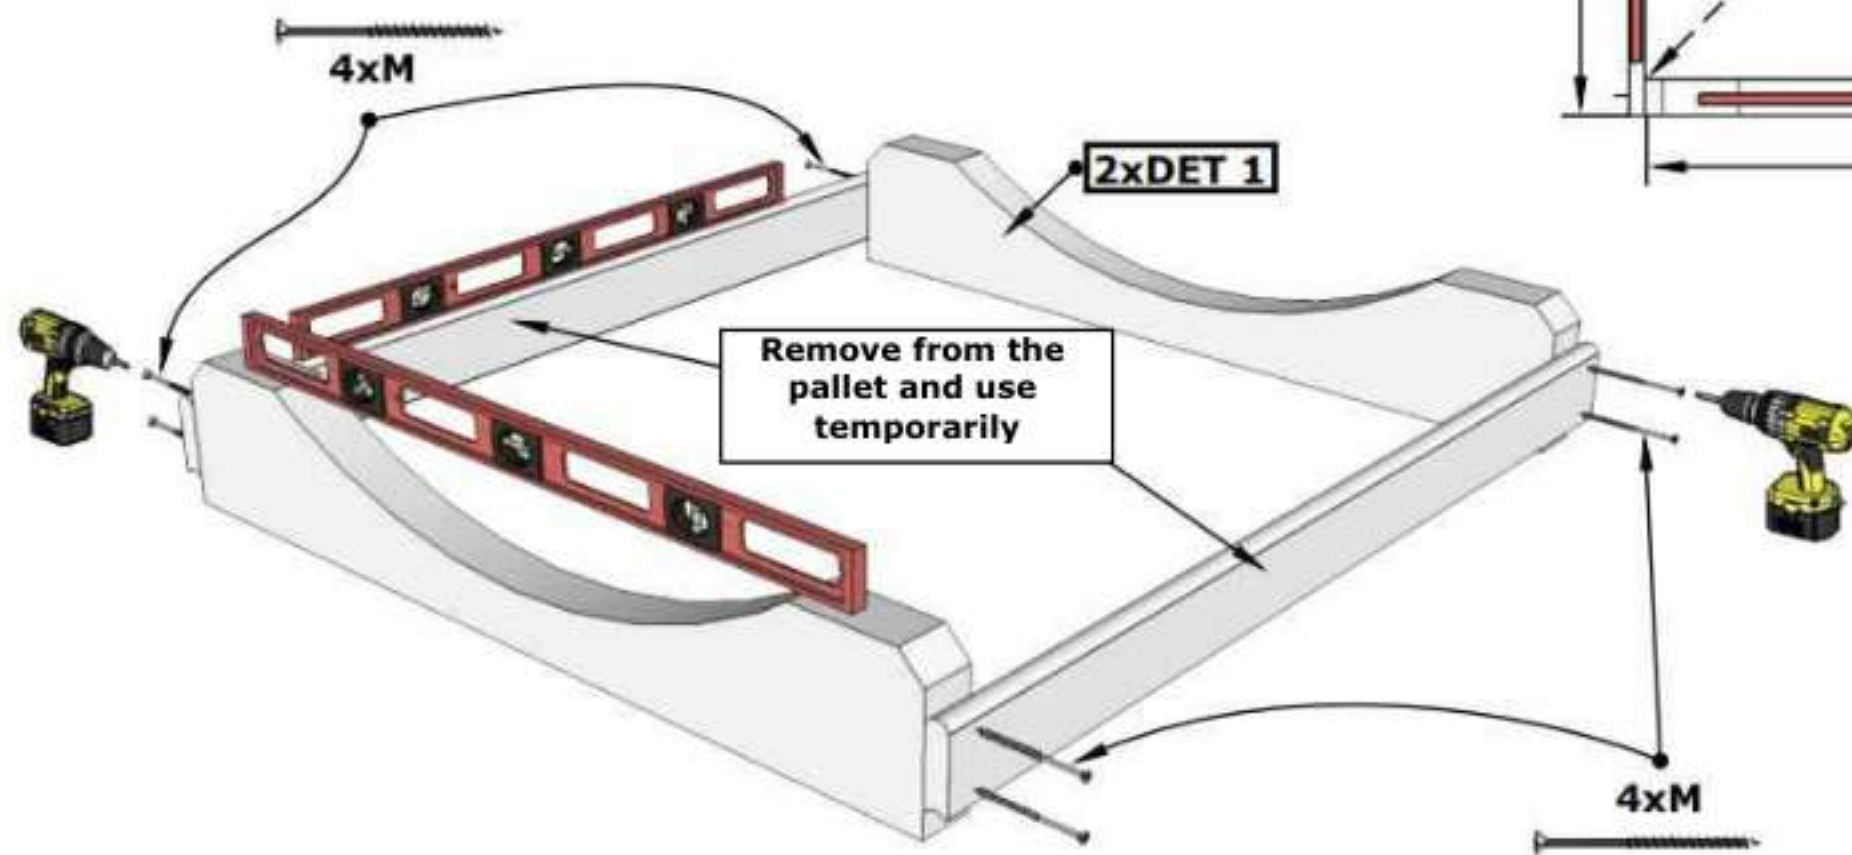


1.

# SAUNA 250, D205

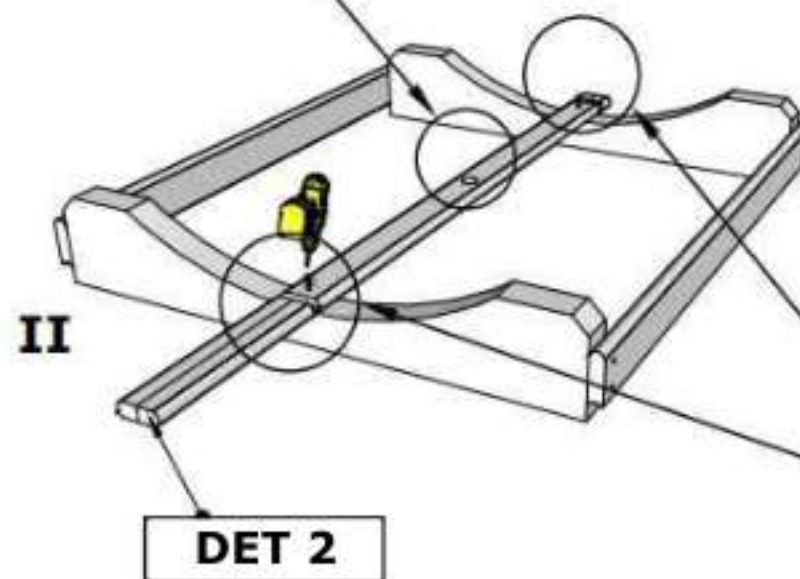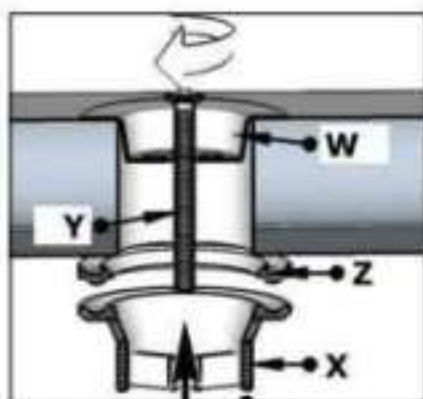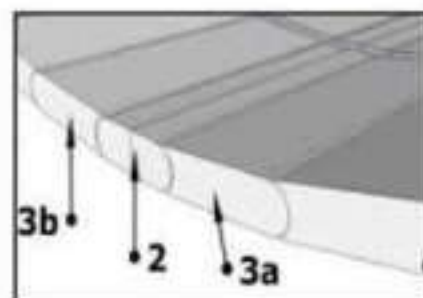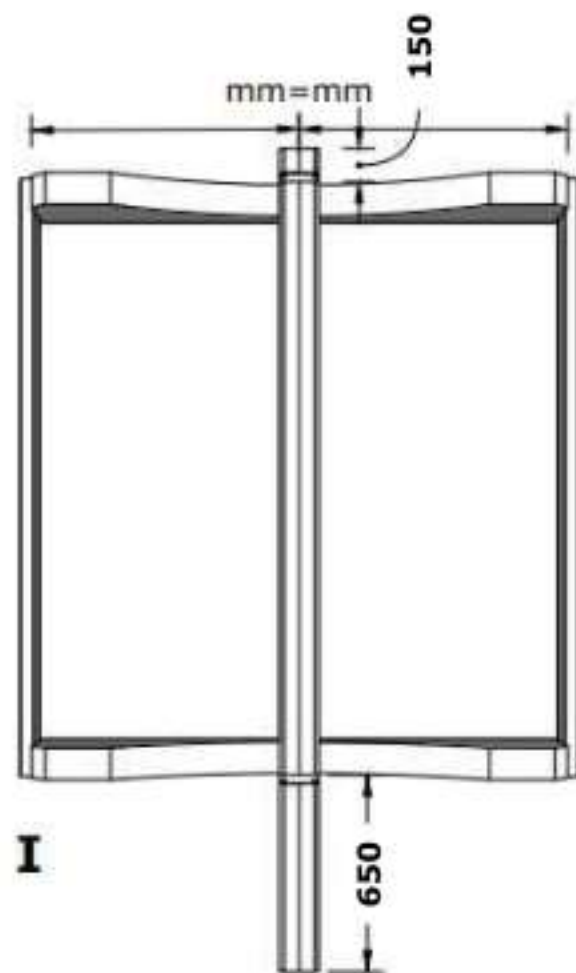


III

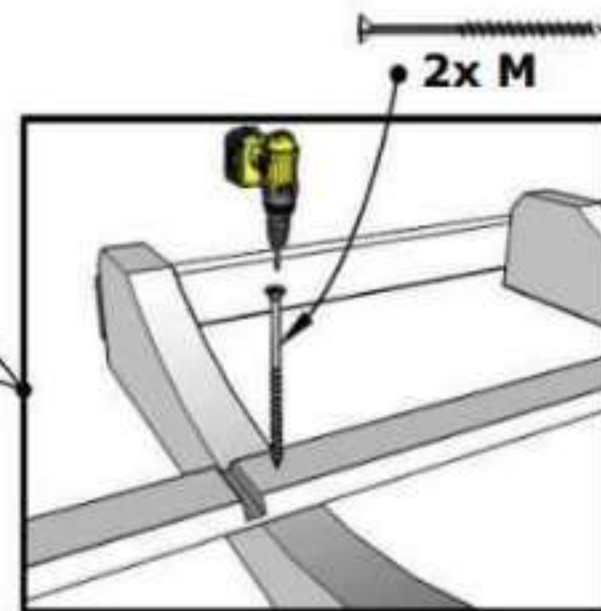



# SAUNA 250, D205



II

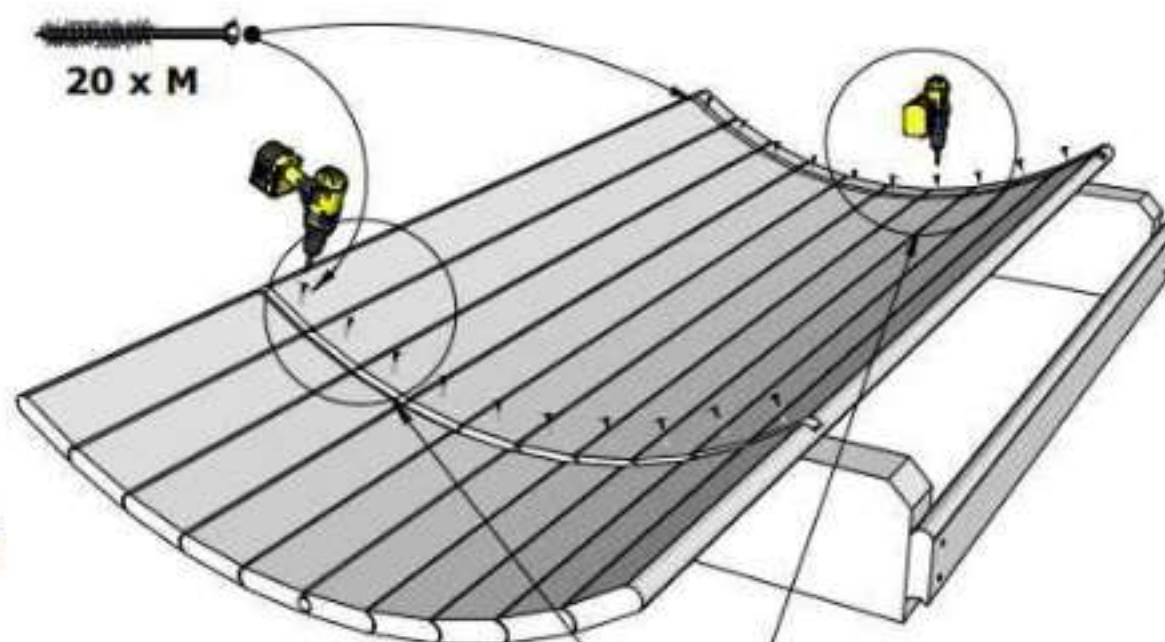


I

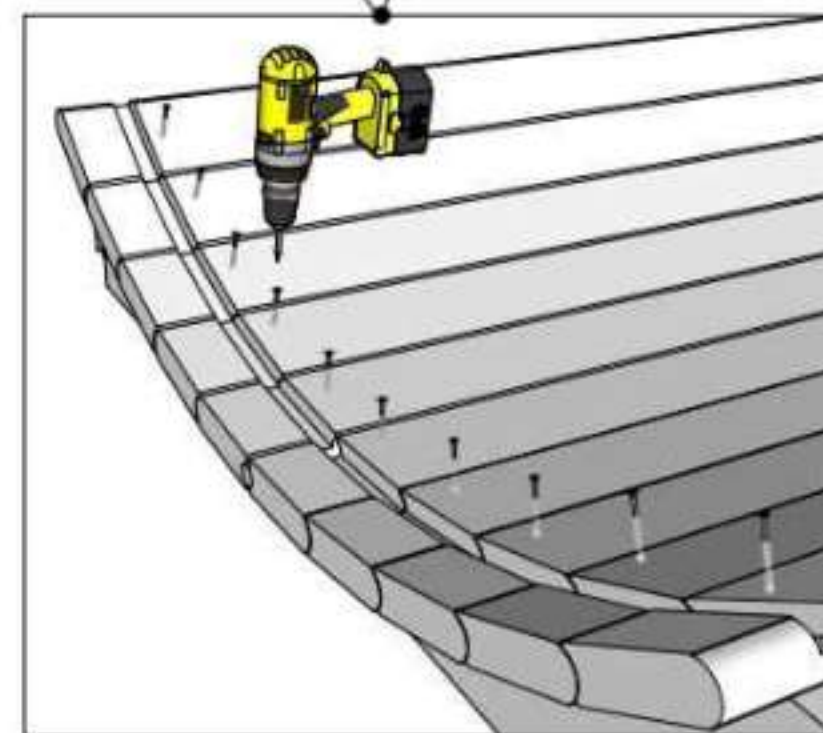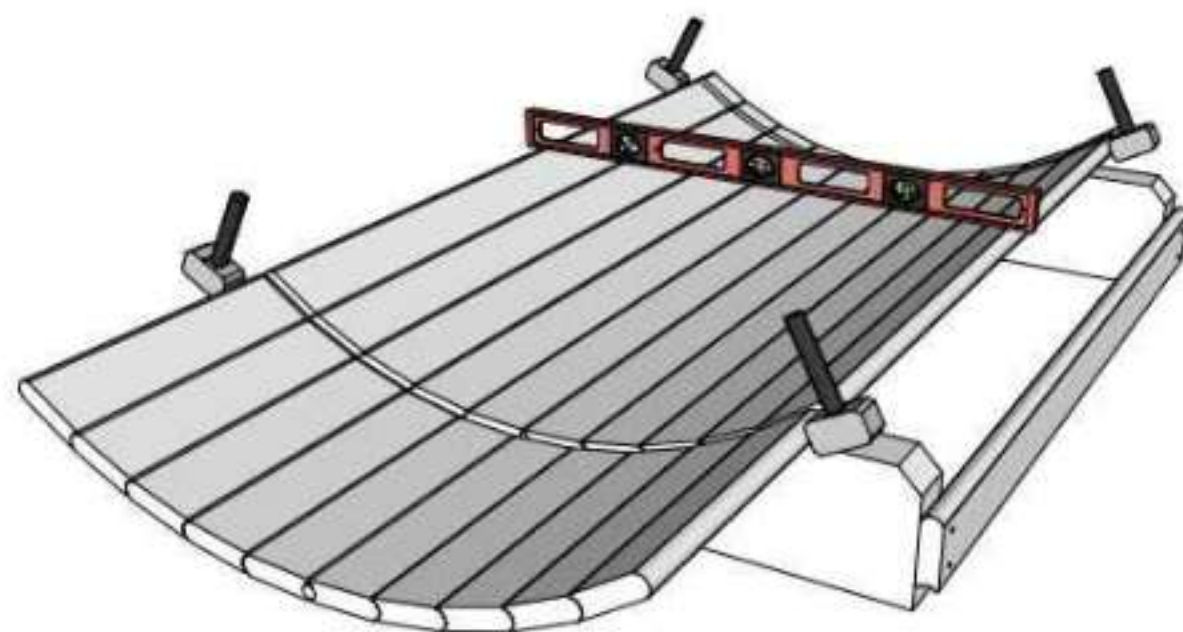


3.

# SAUNA 250, D205

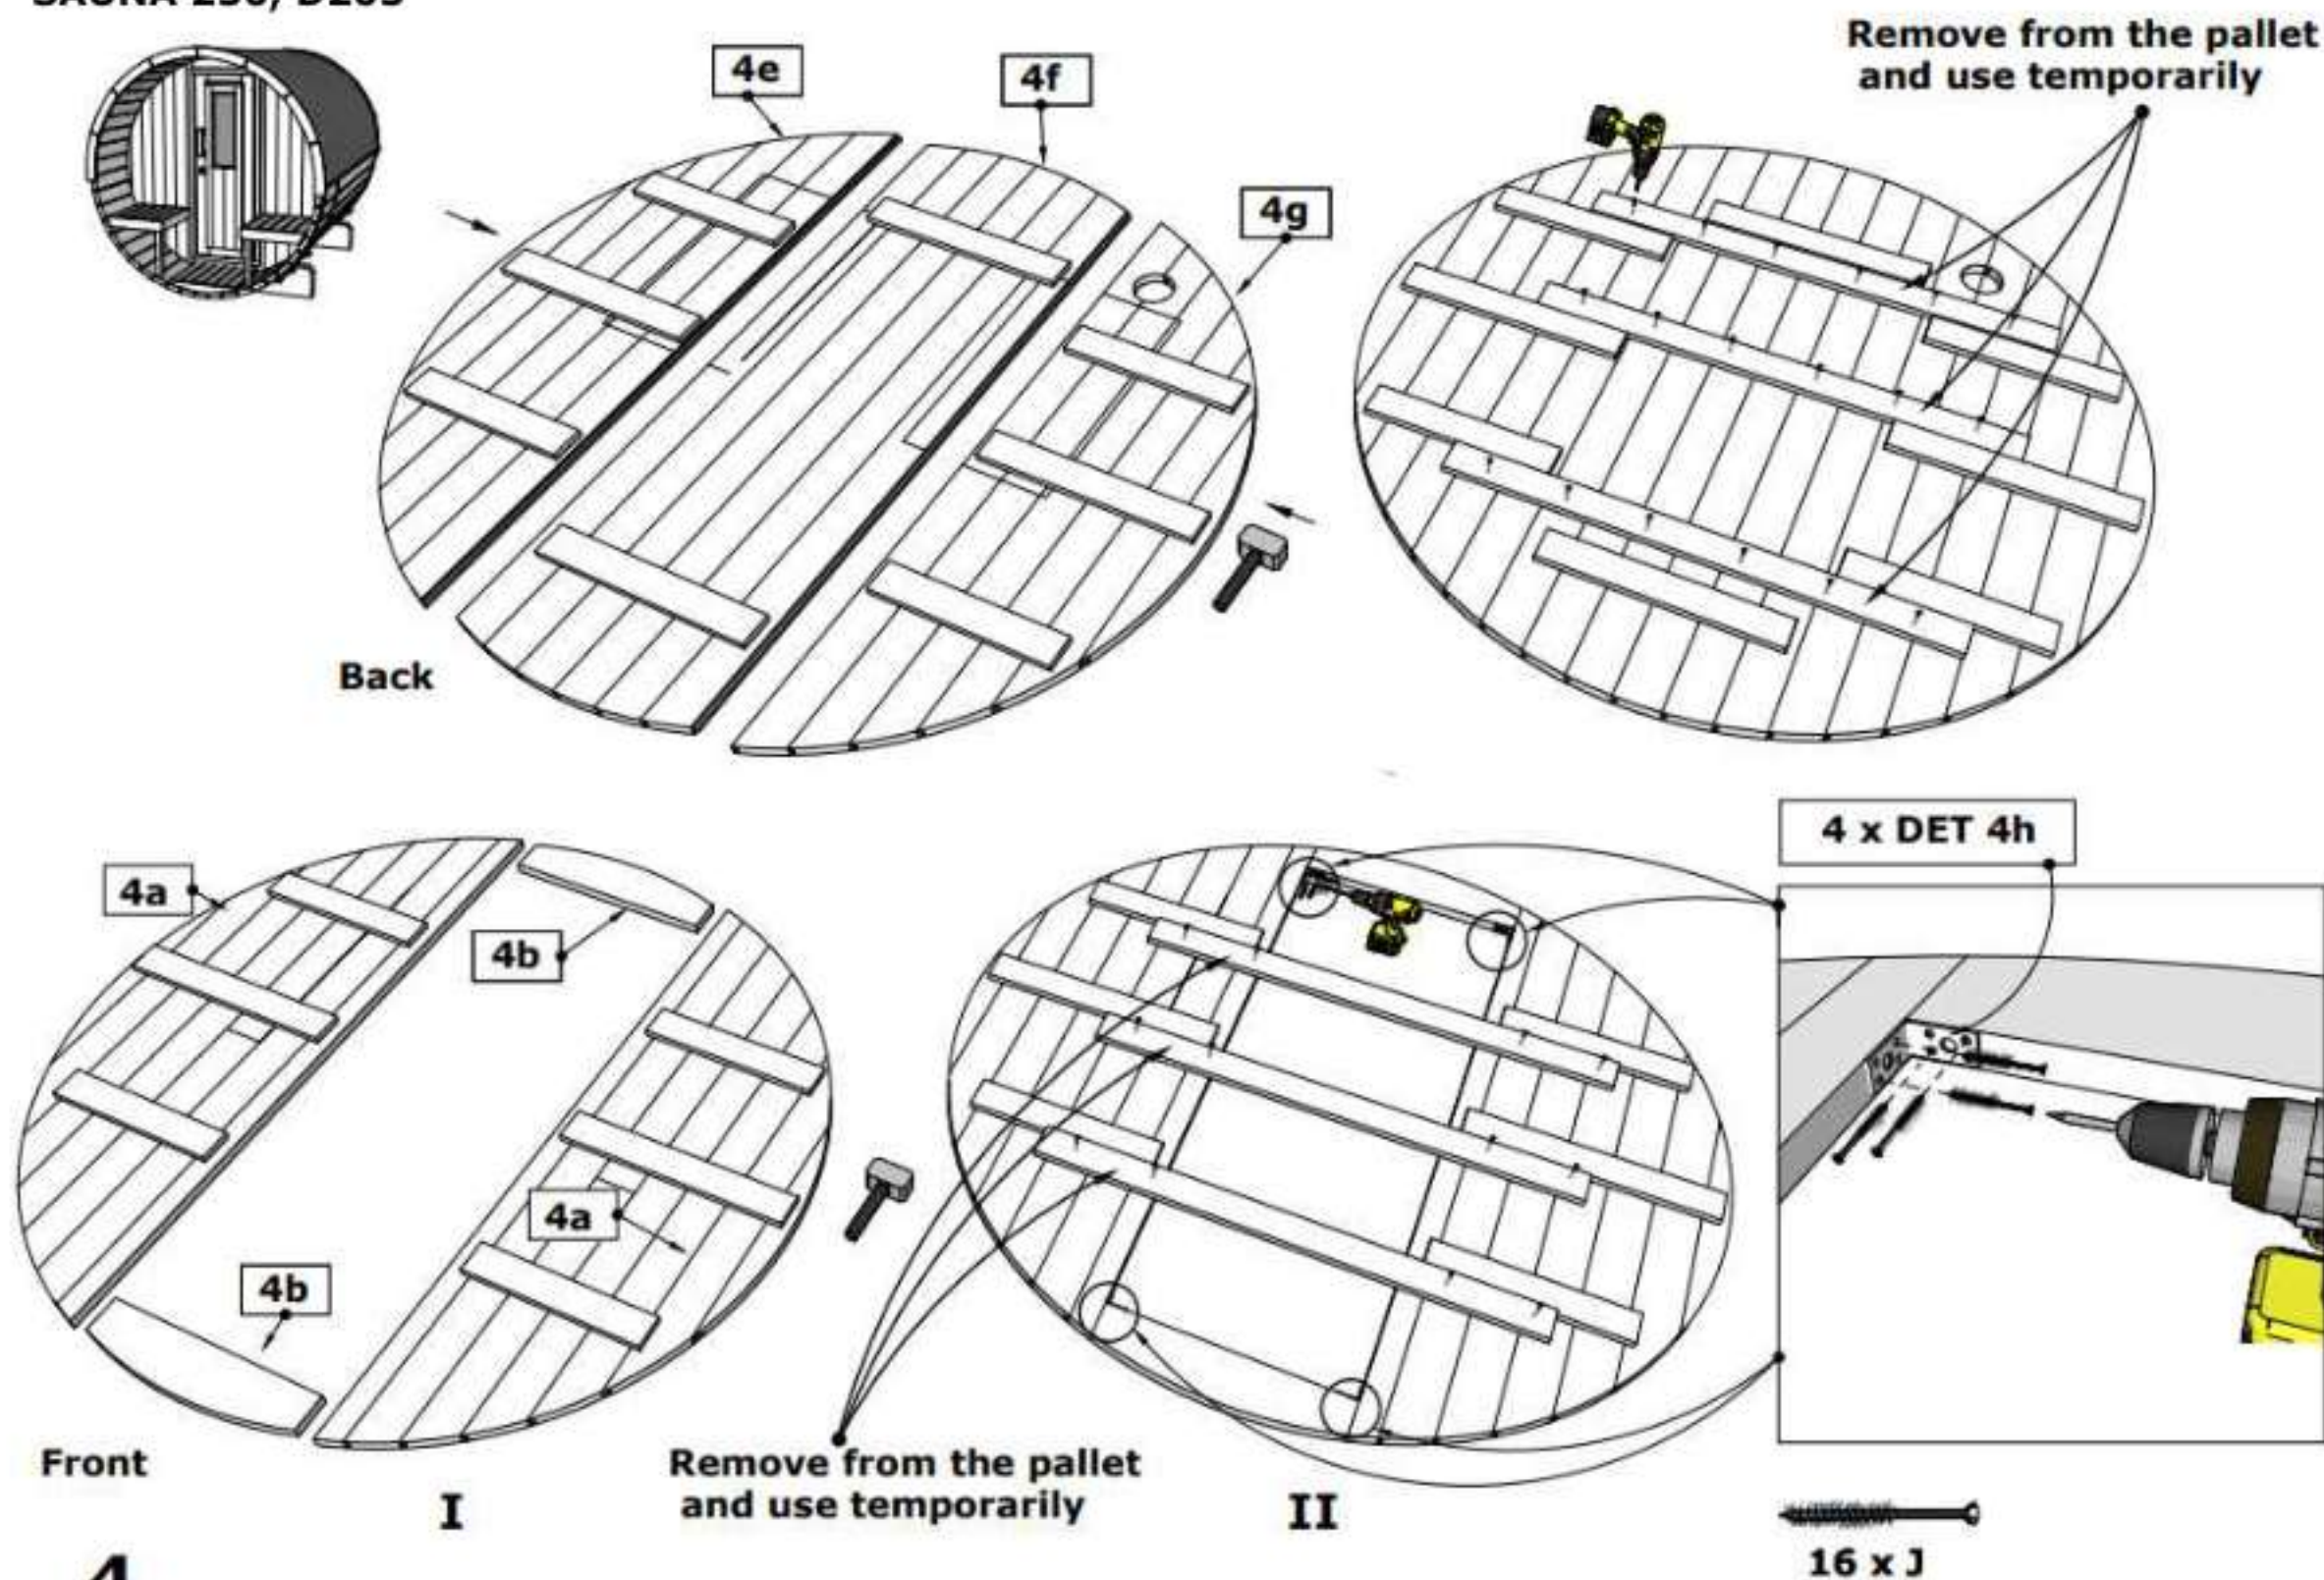

## SAUNA 250, D205

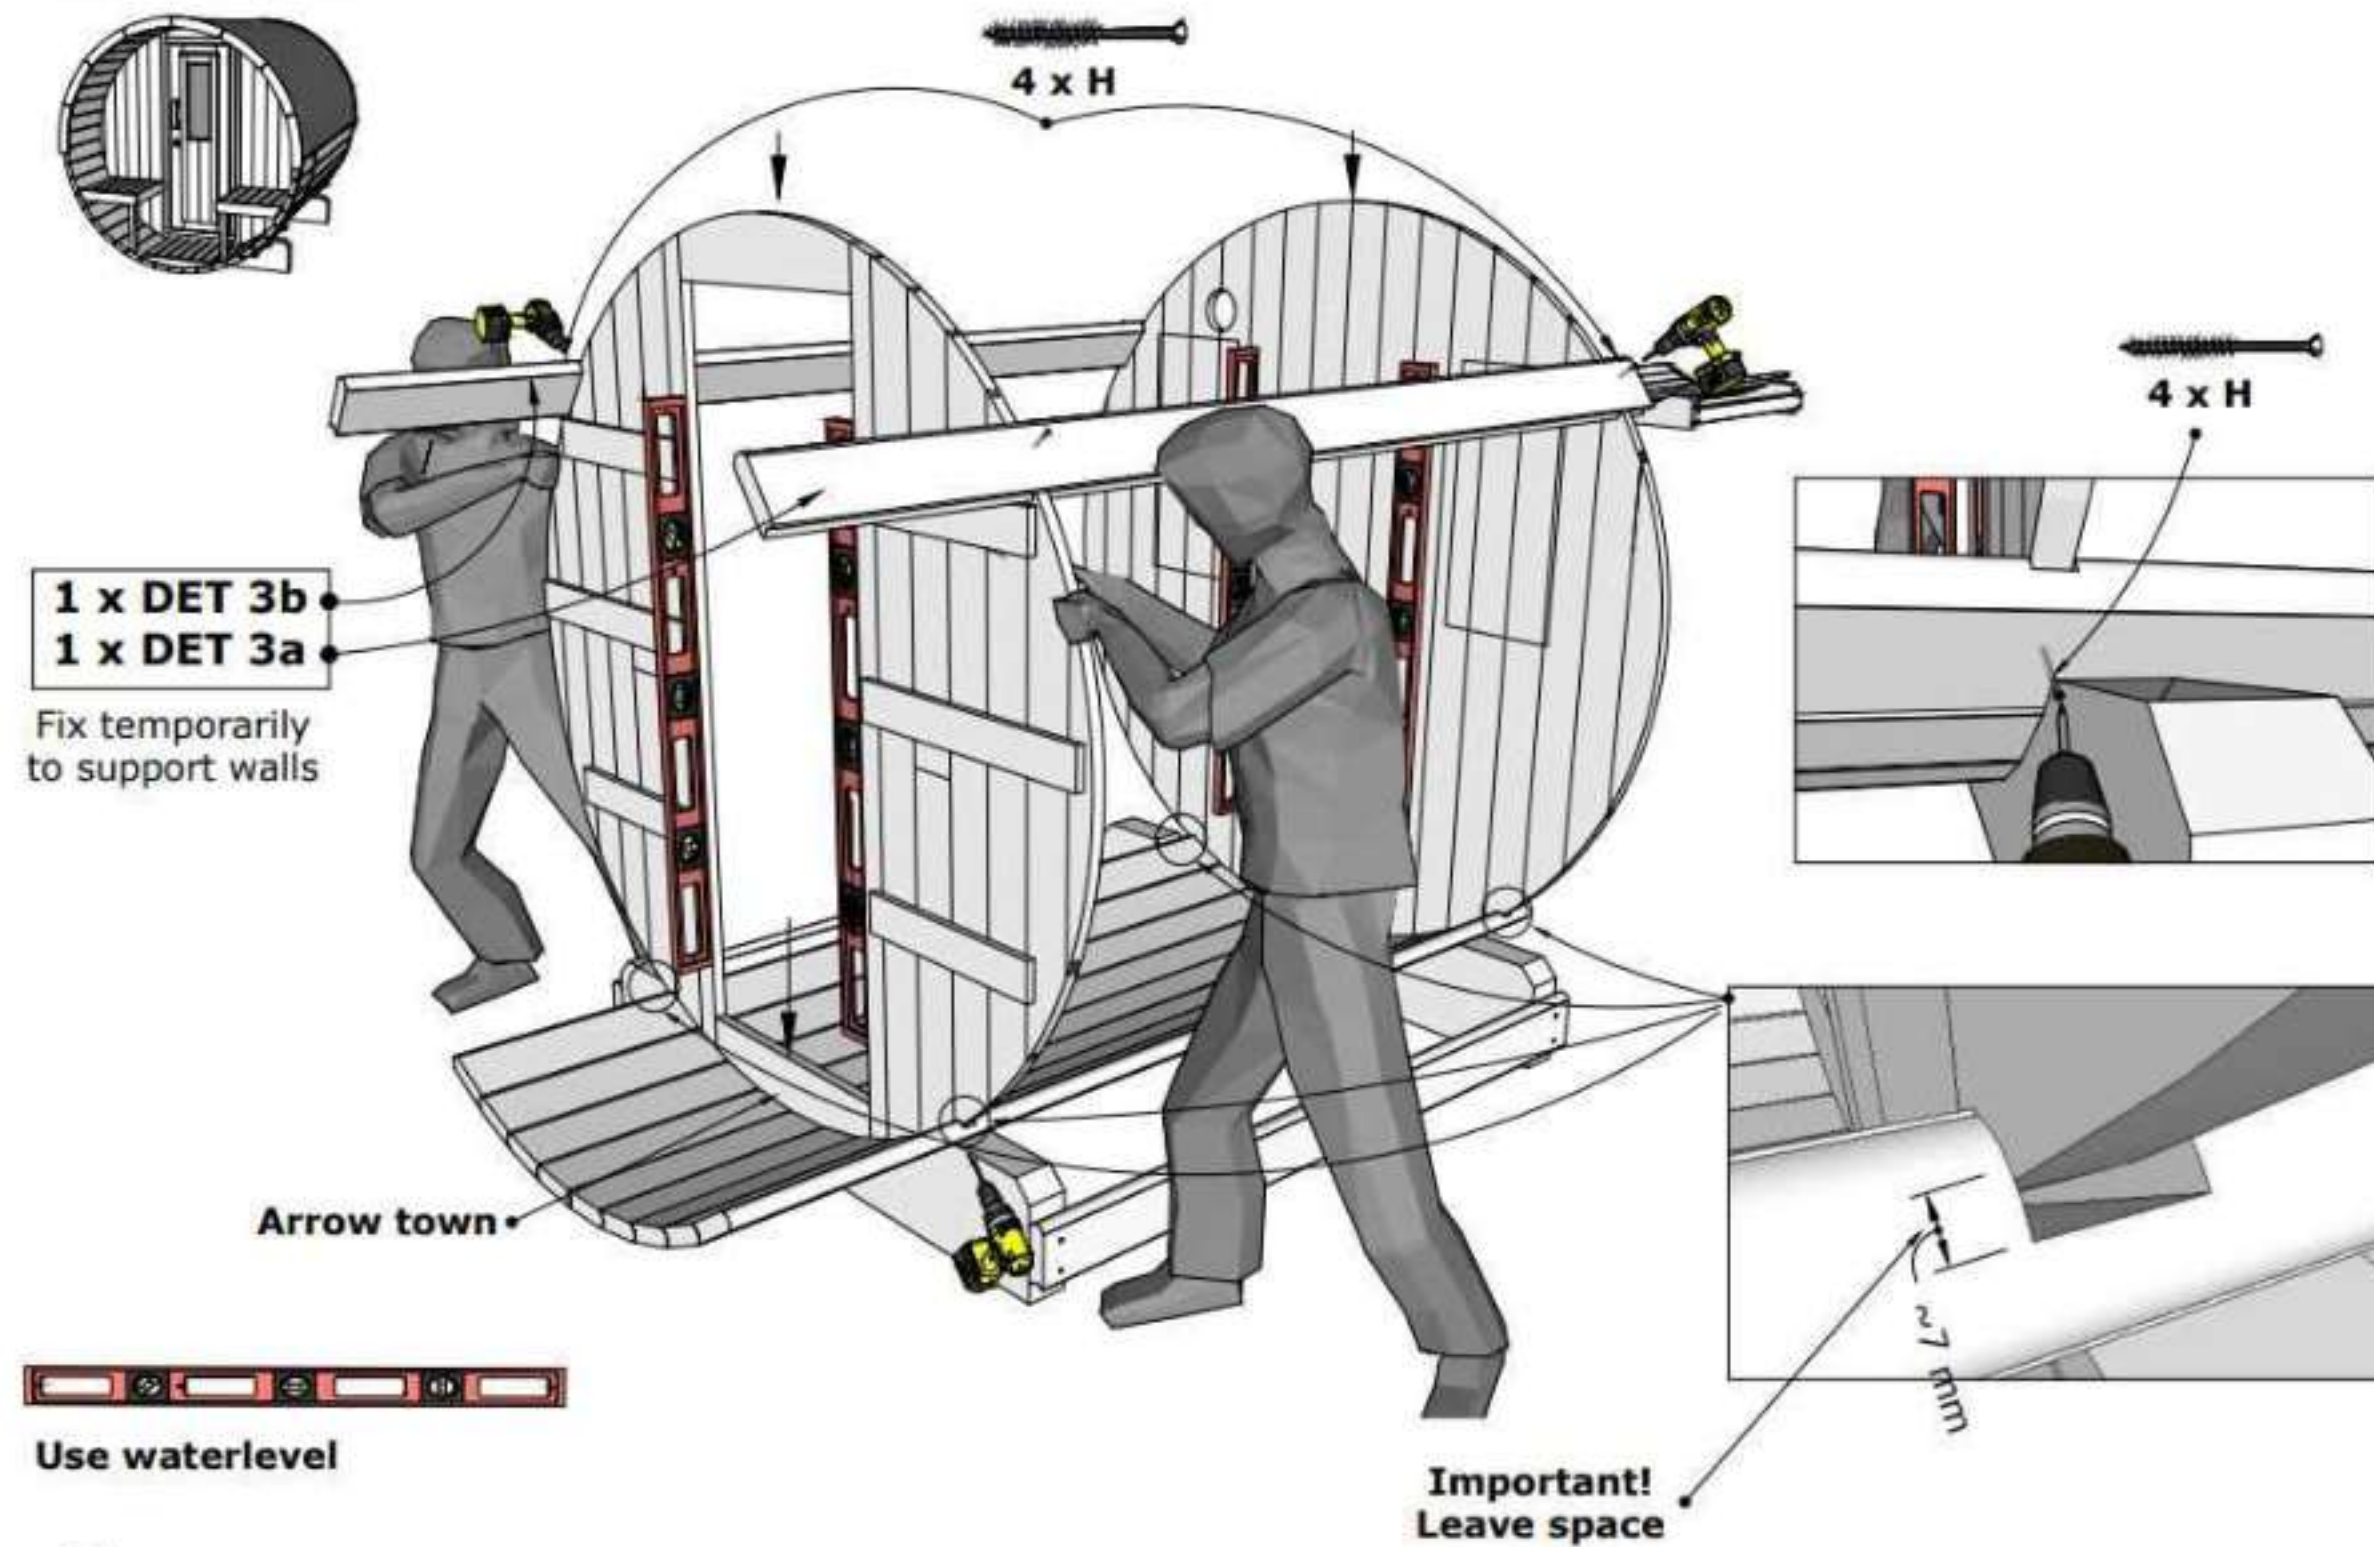


**5.**

# SAUNA 250, D205




Remove


See page 6A

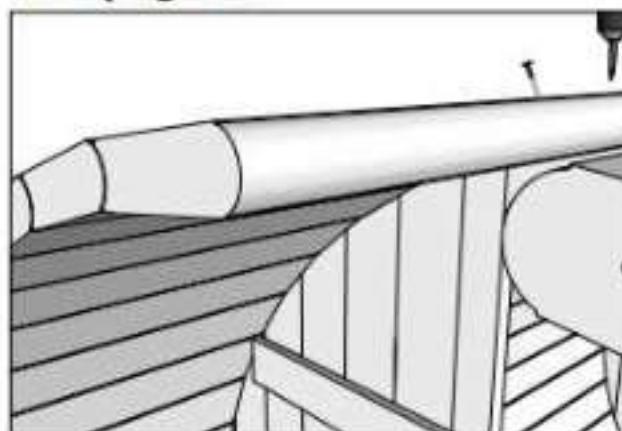

10 x DET 3b  
9 x DET 3a

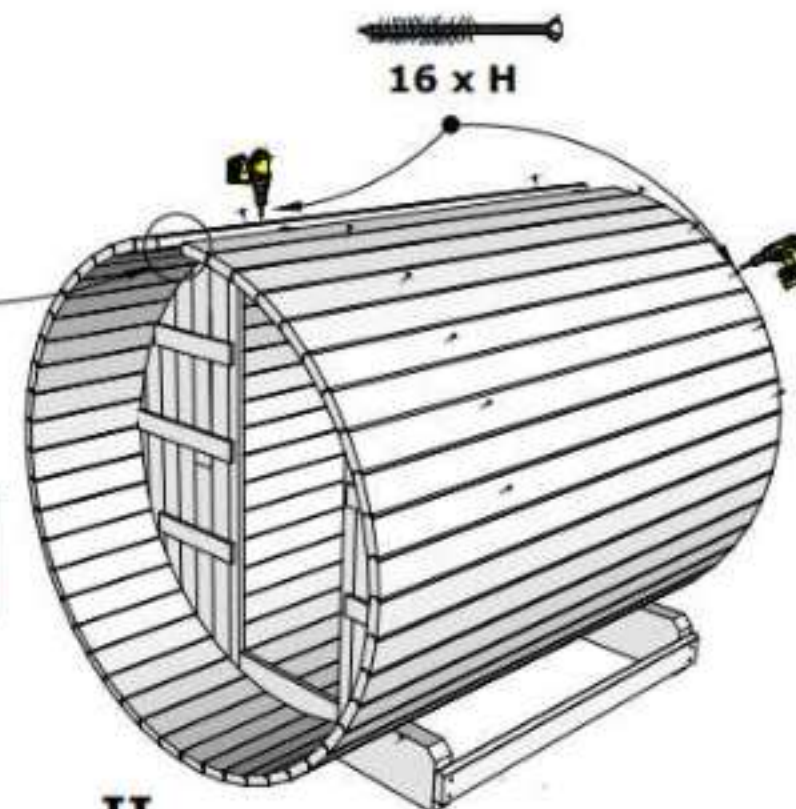


II

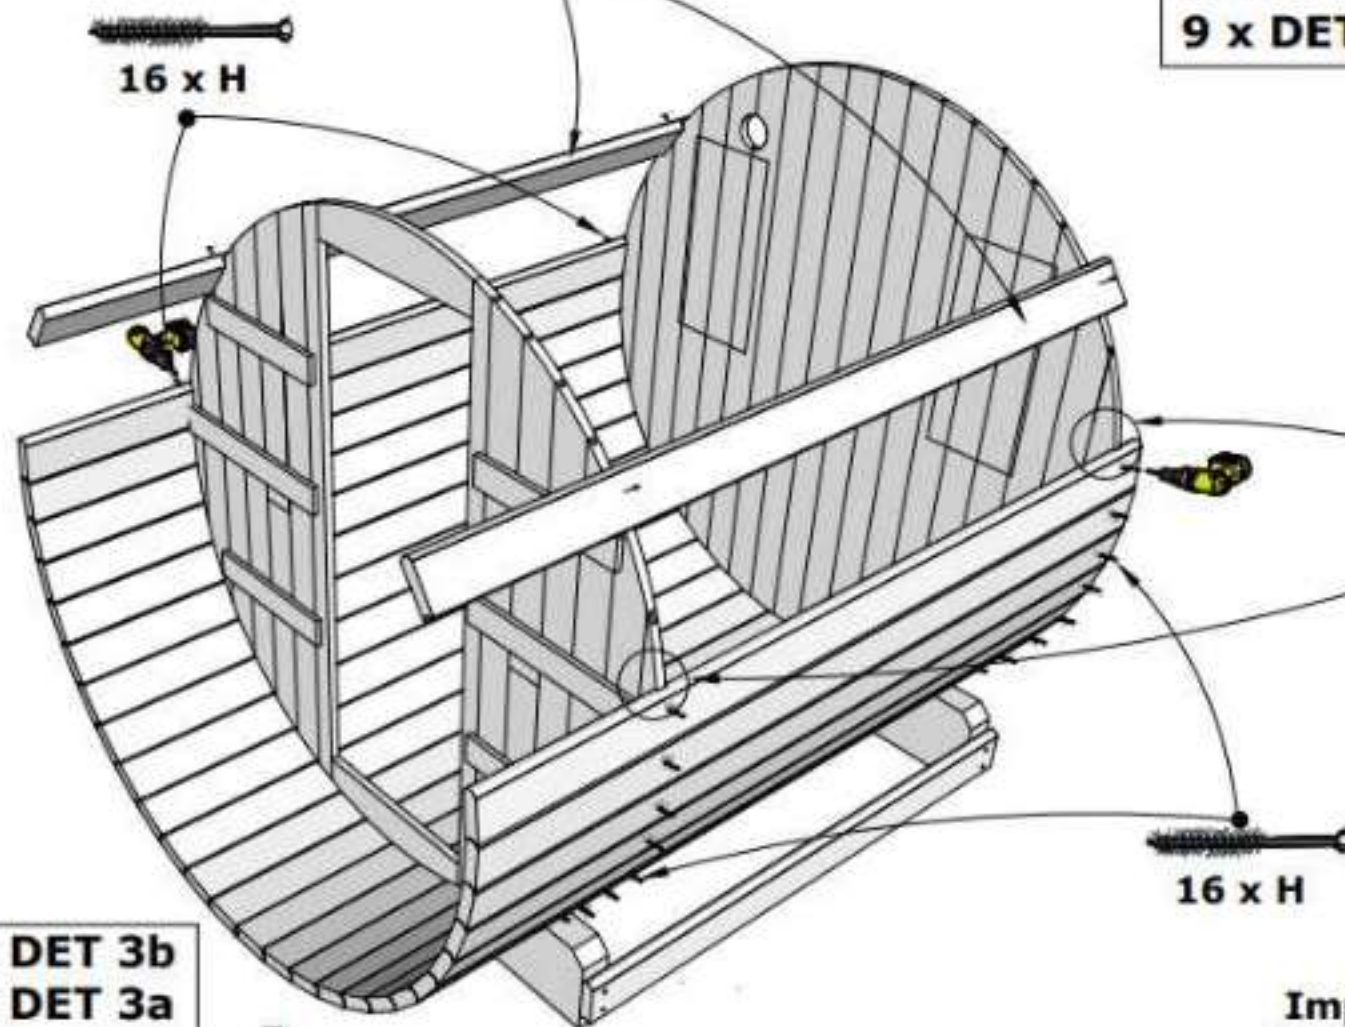

8 x DET 3b  
8 x DET 3a






I

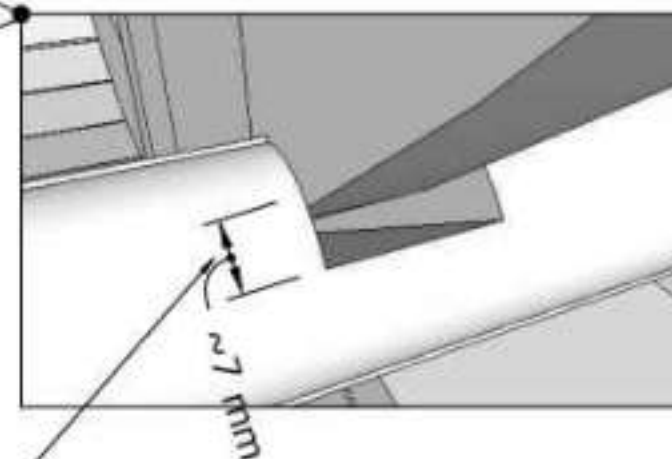

Important!  
Leave space


6.

# SAUNA 250, D205

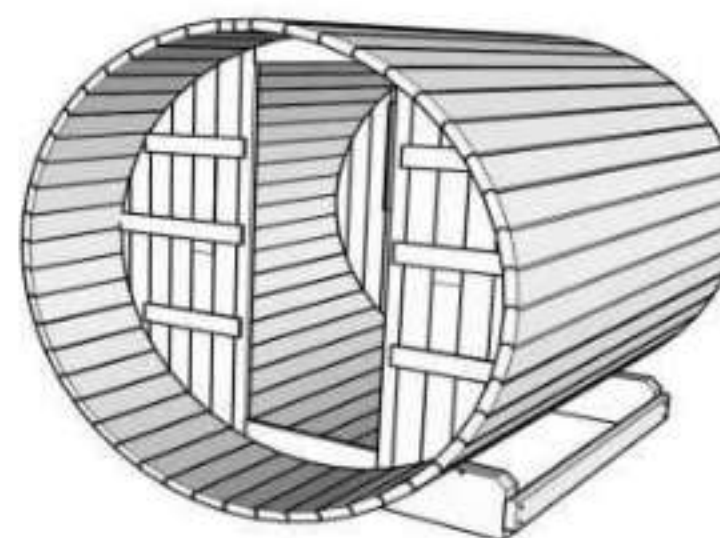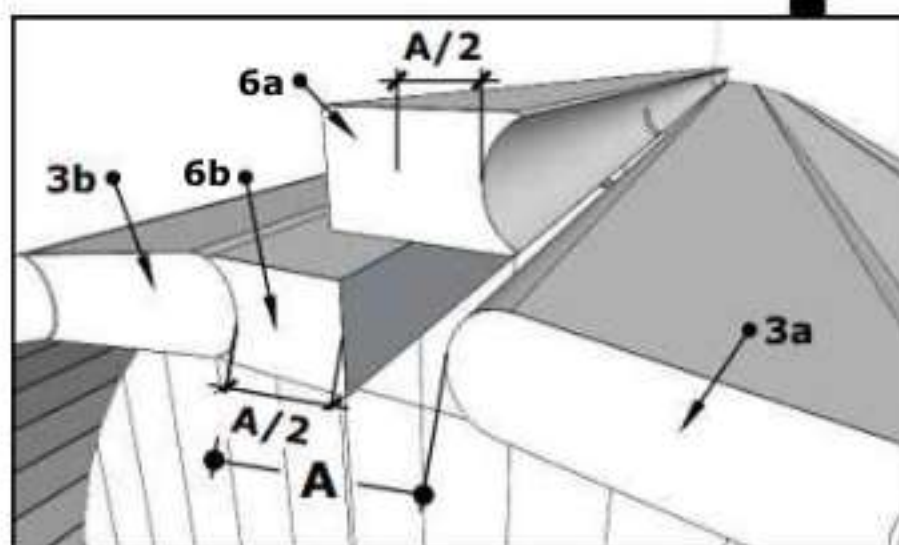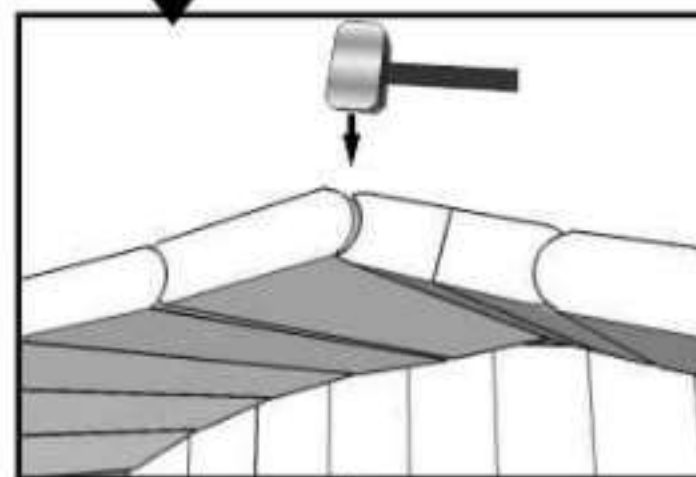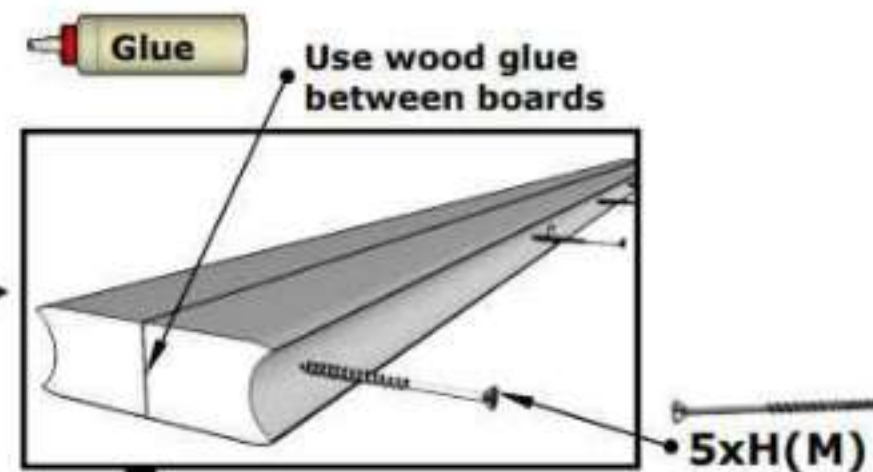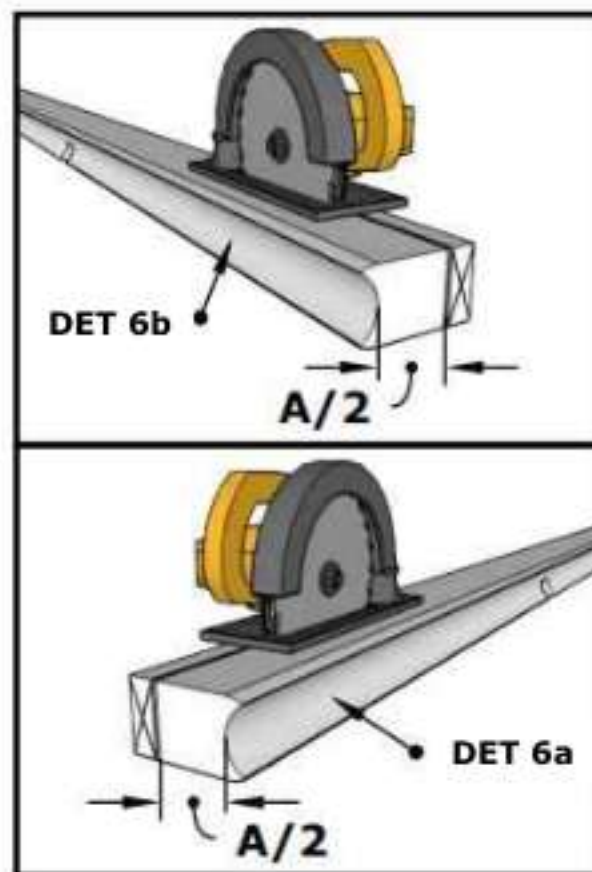

**6A.**

# SAUNA 250, D205



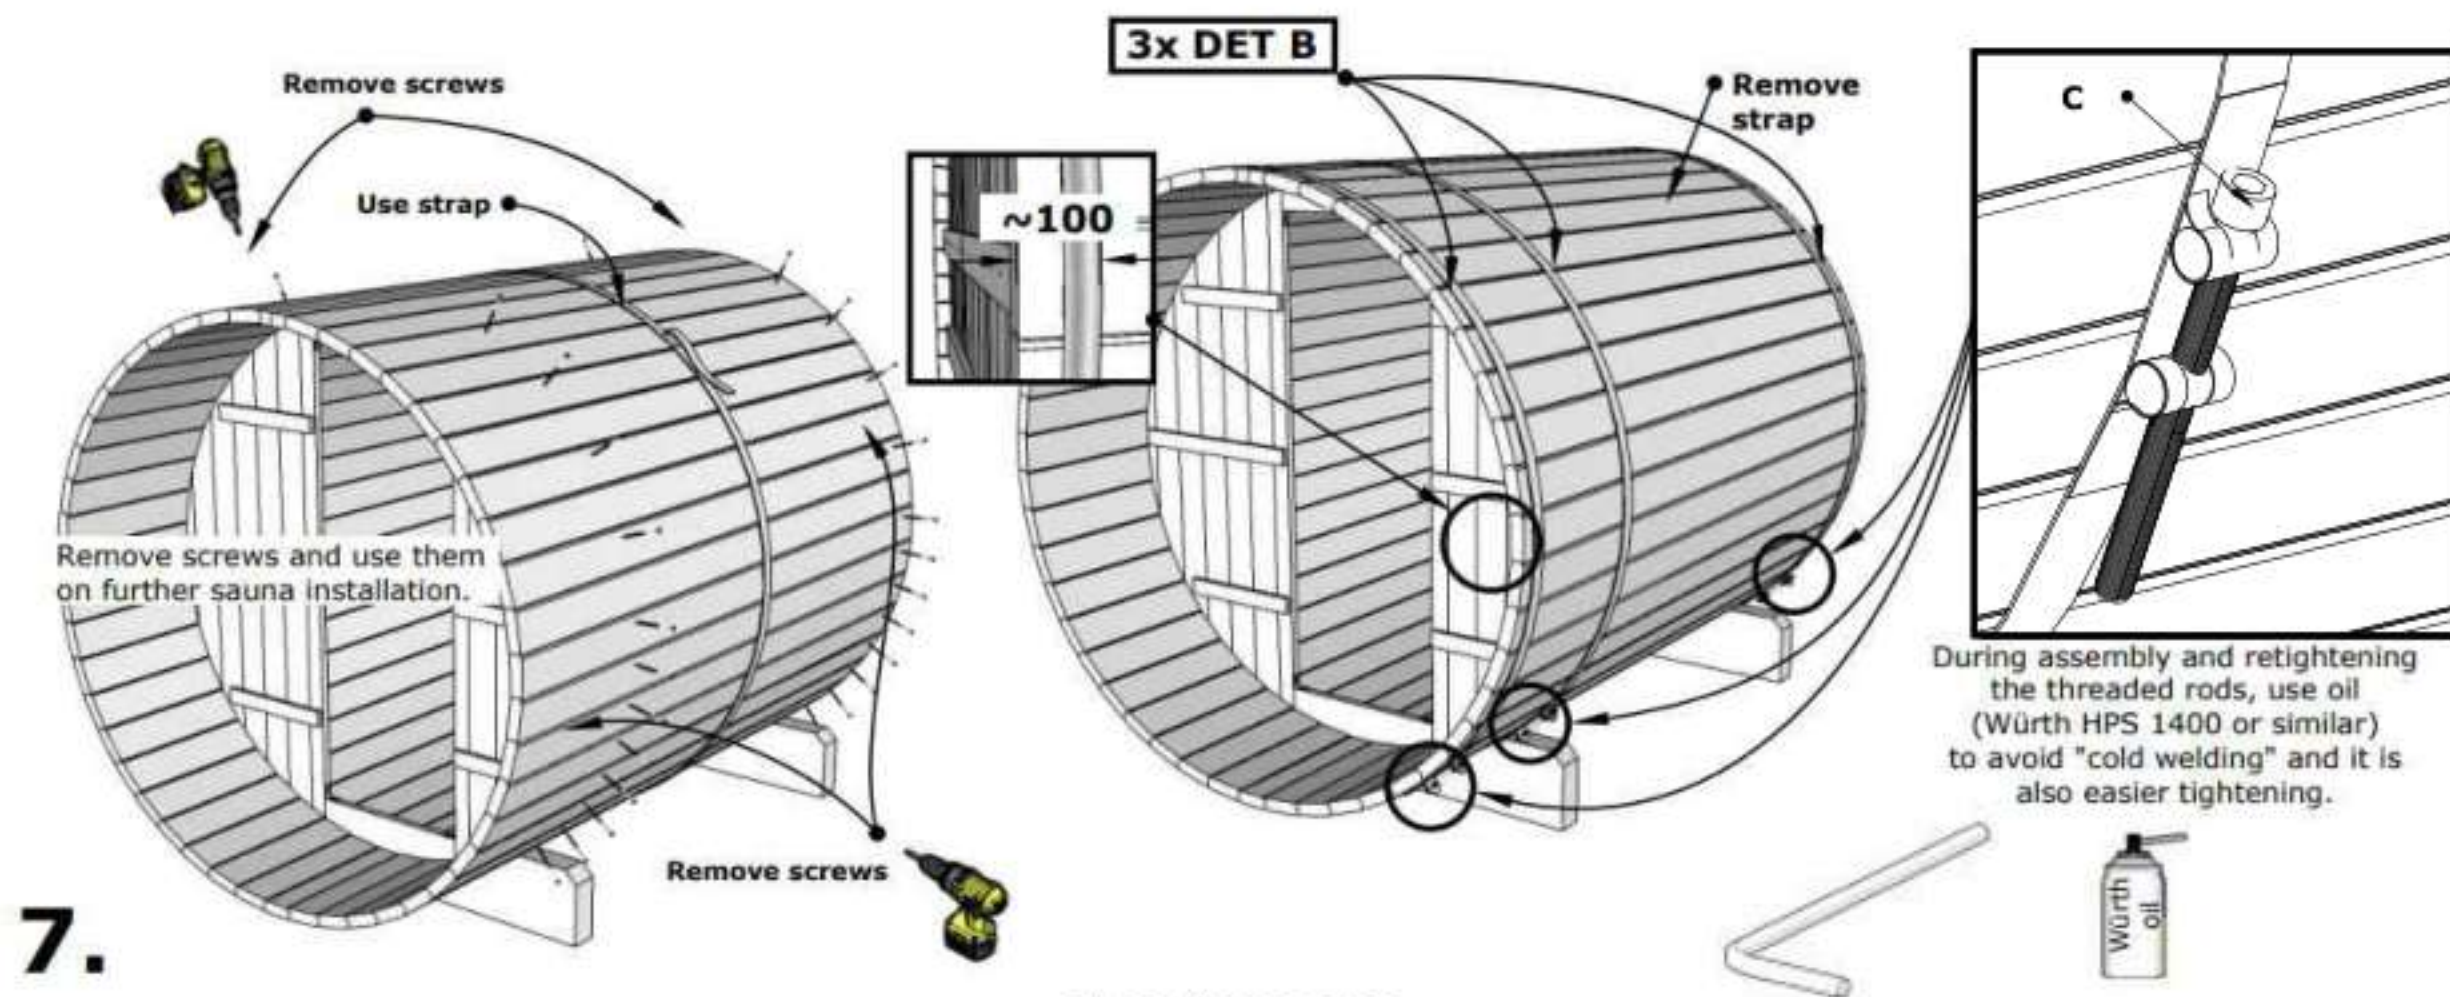


# SAUNA 250, D205



Mark windows openings.

Wall midpoint

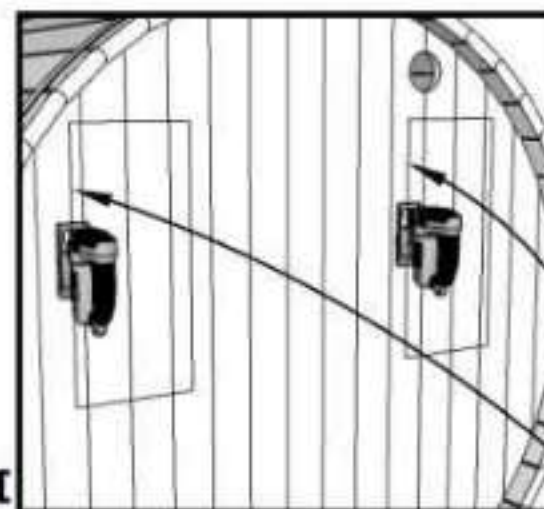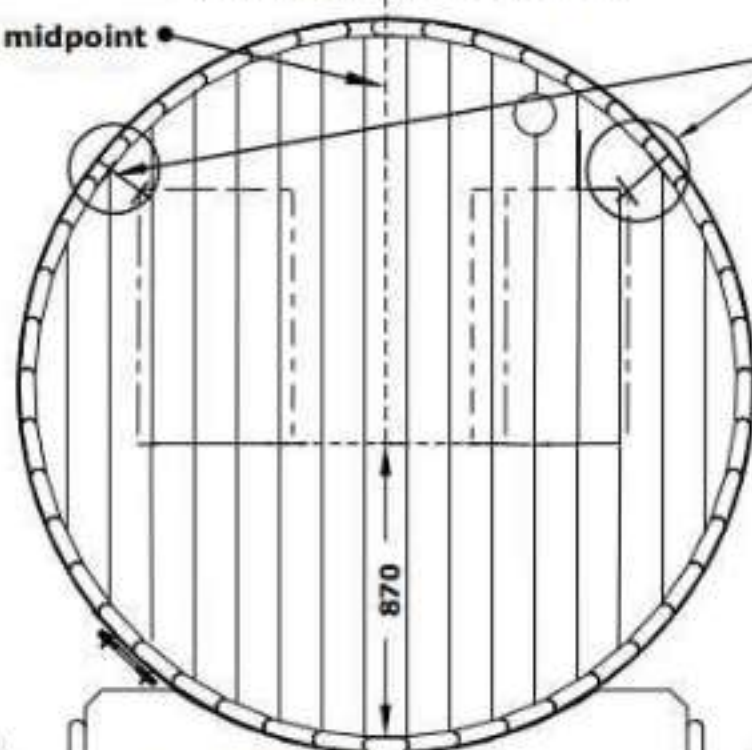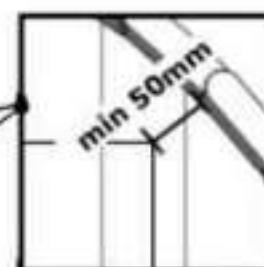

Before cutting, check windows opening and measure the windows! Add 10 mm to each side of the window and cut.

Cut out, follow the guidelines.



Remove all brackets

II

Back wall


III

Remove all brackets

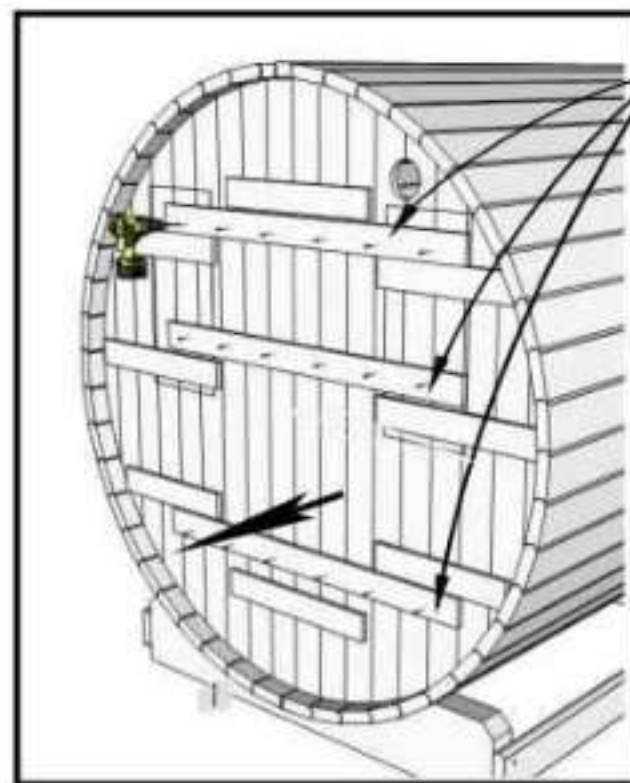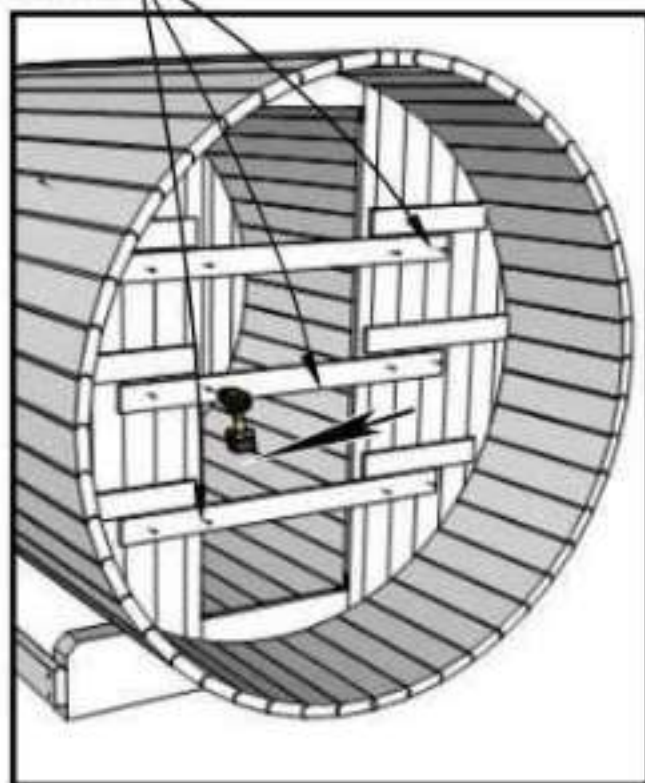

IV

Front wall

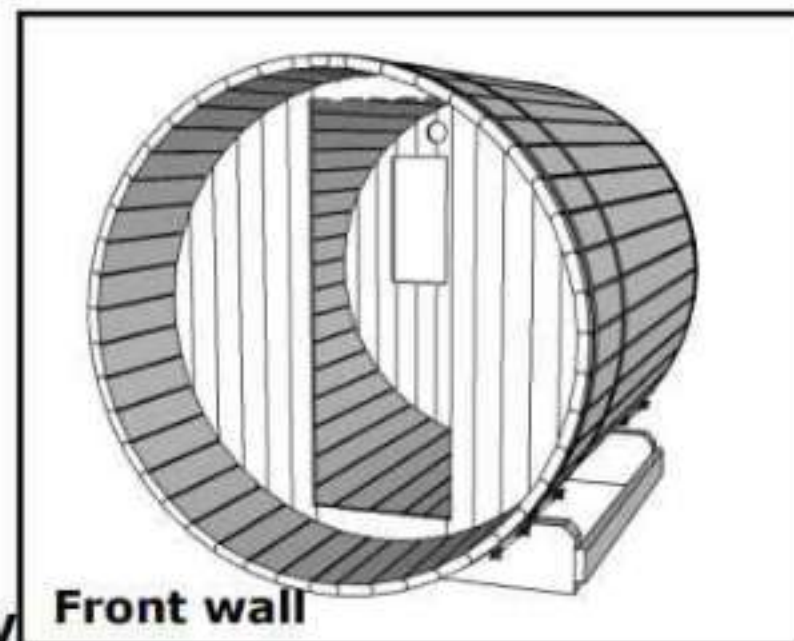

8. I


# SAUNA 250, D205




Use waterlevel for windows installation

NB! Place windows from inside.


2x DET 9a  
2x DET 9b

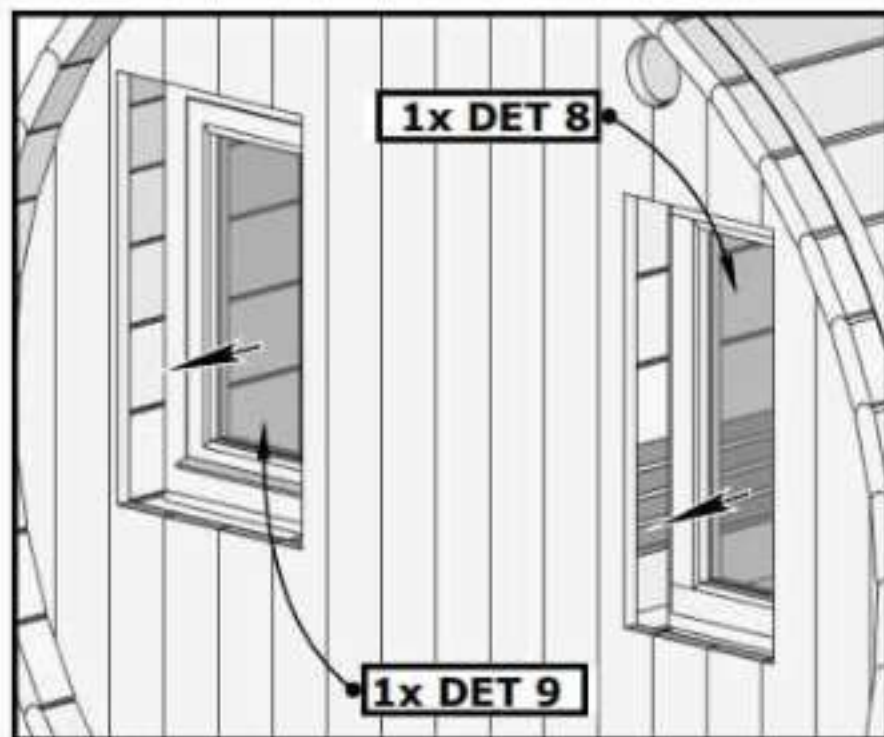


I

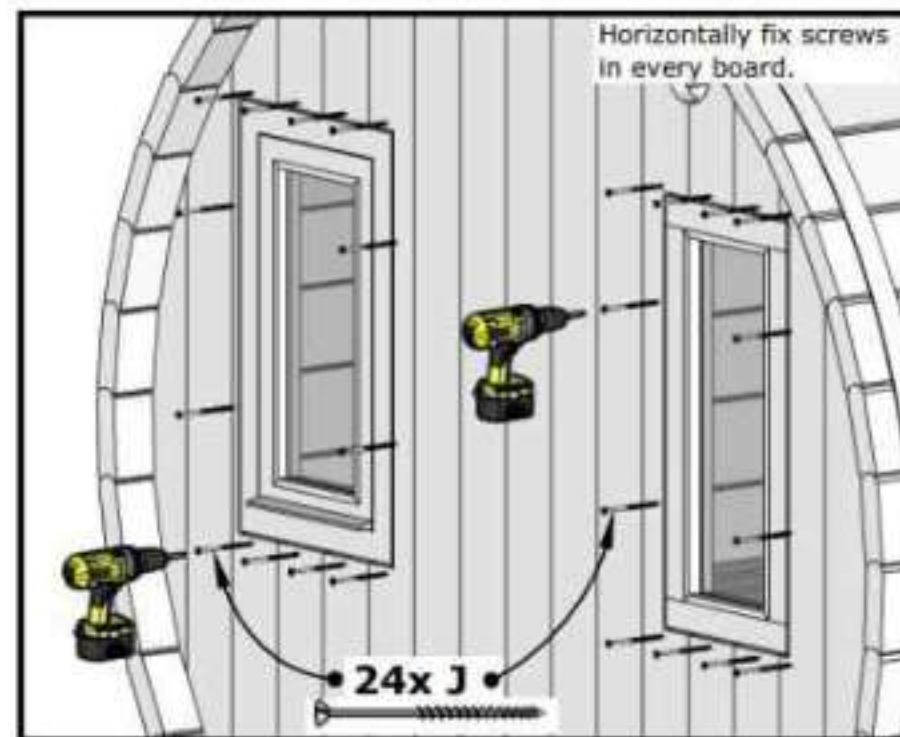


II

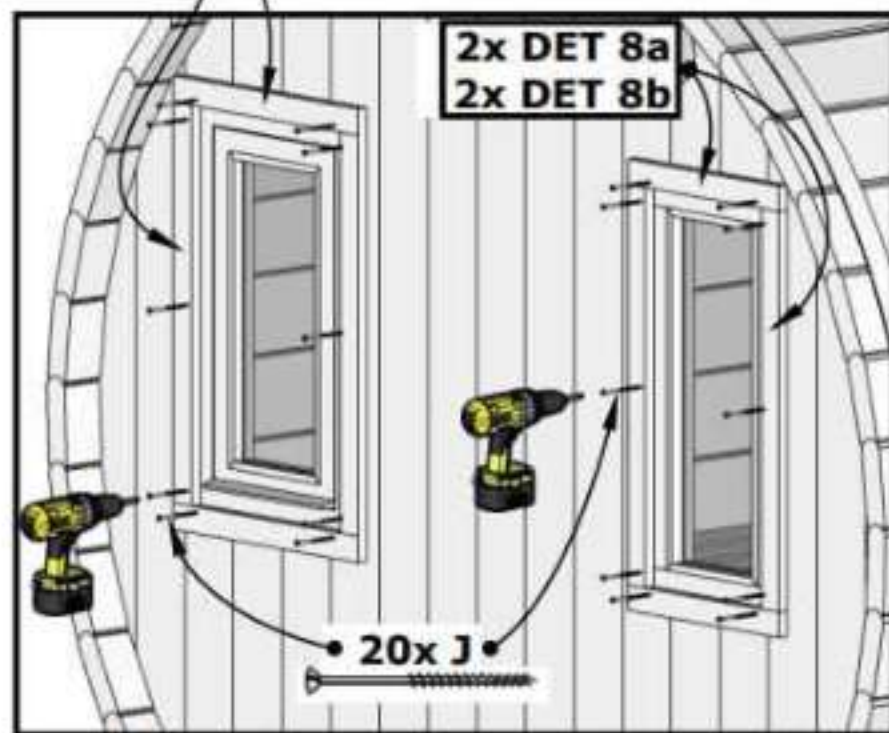

III

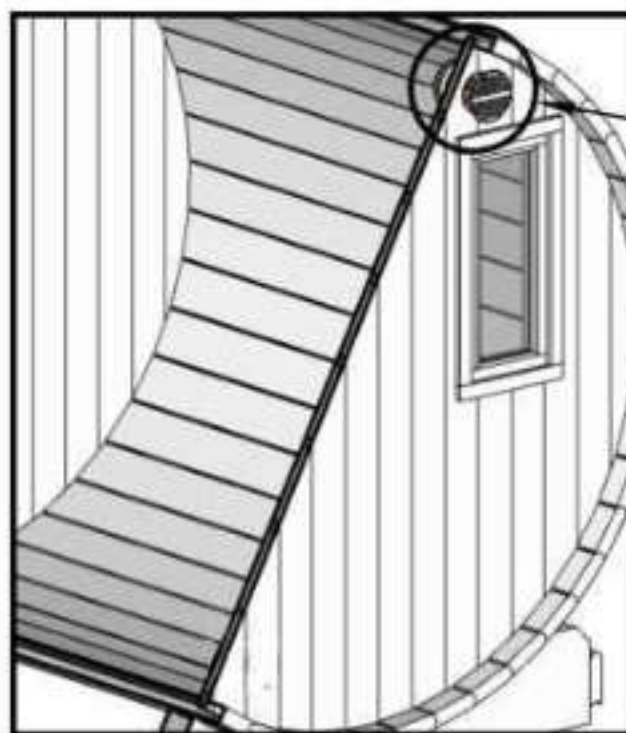




IV

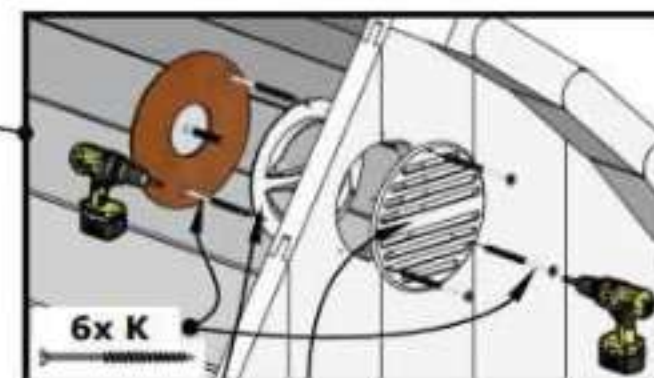

1x DET G

1x DET F



# SAUNA 250, D205

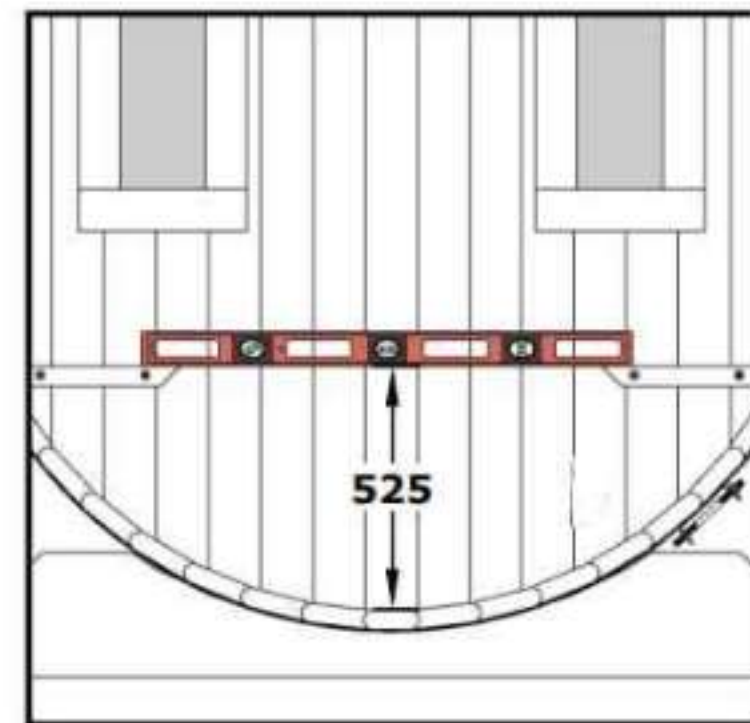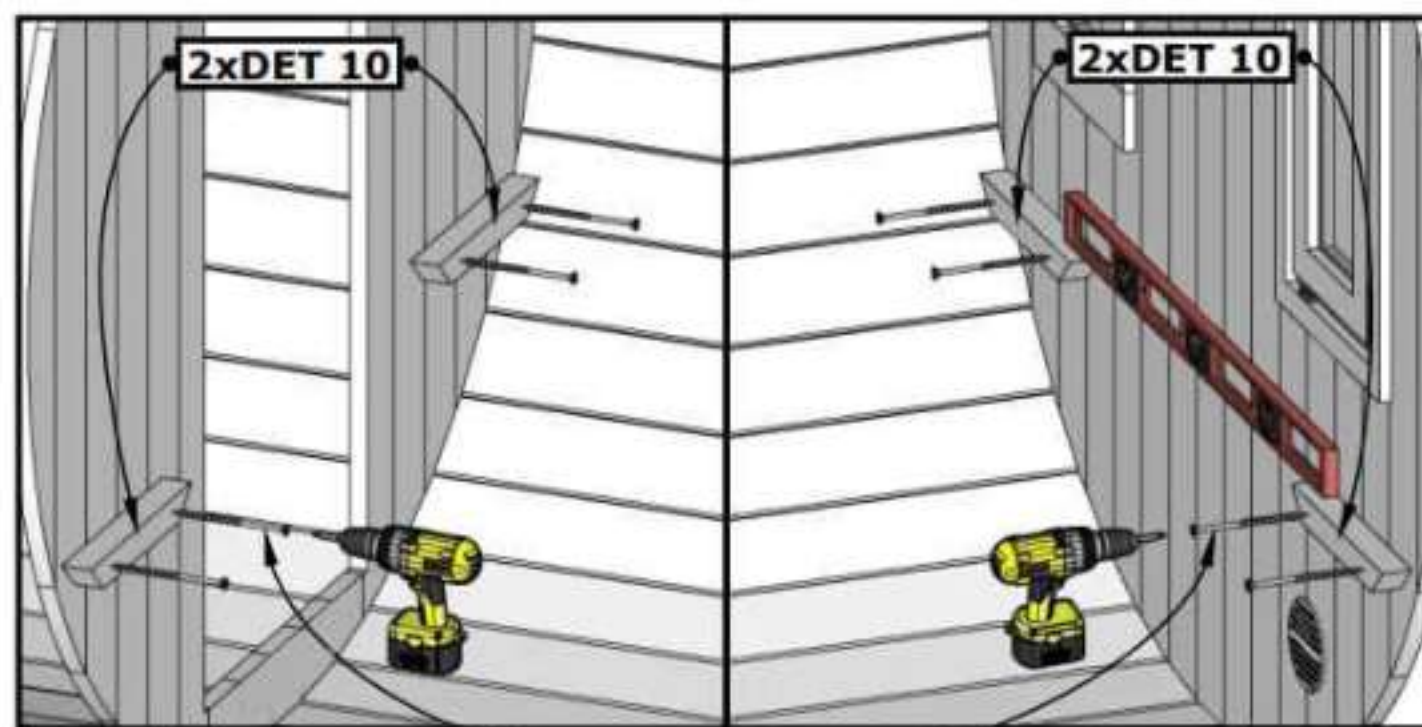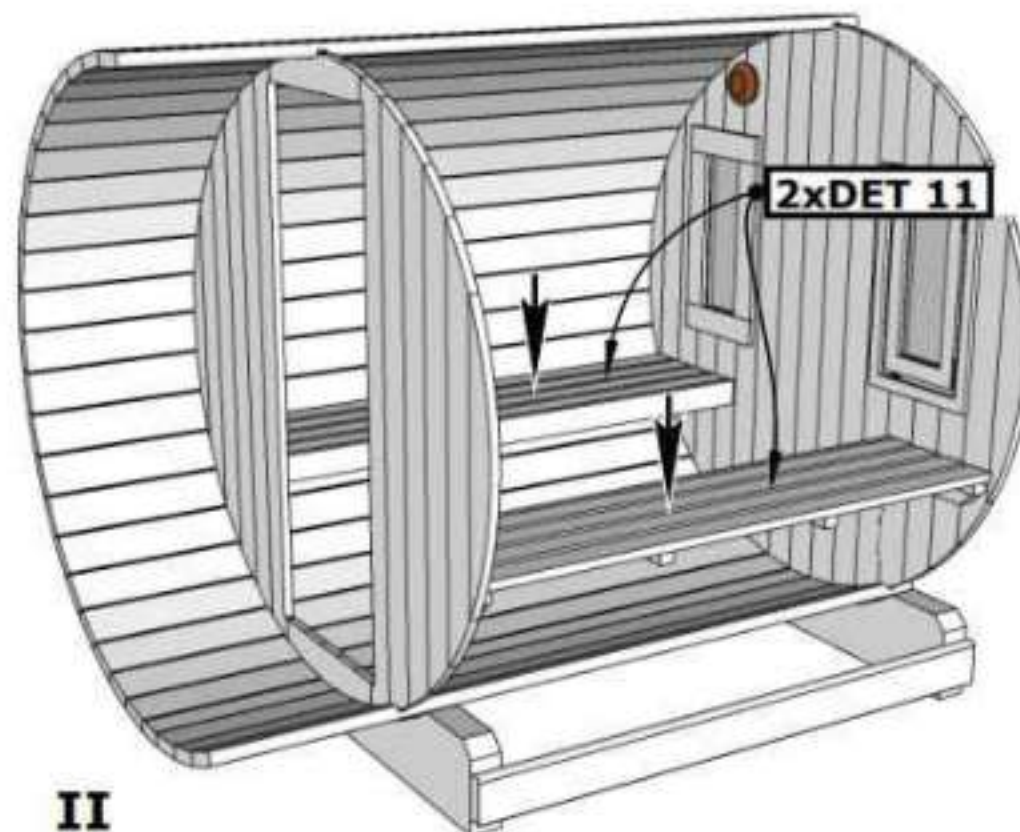




10. I







# SAUNA 250, D205

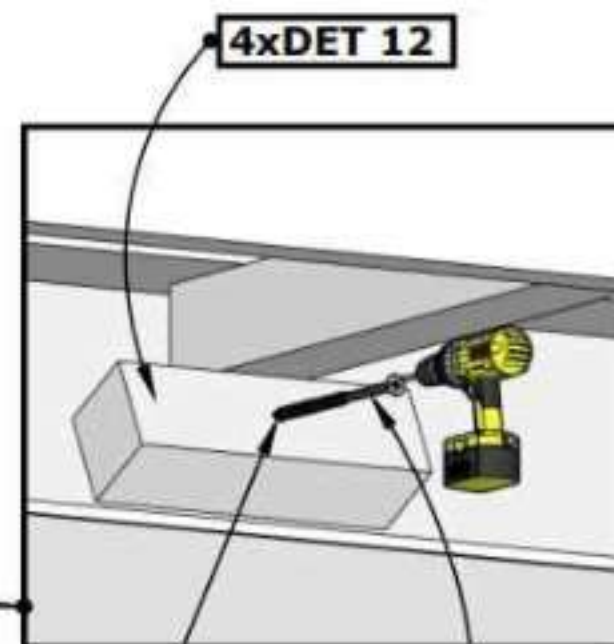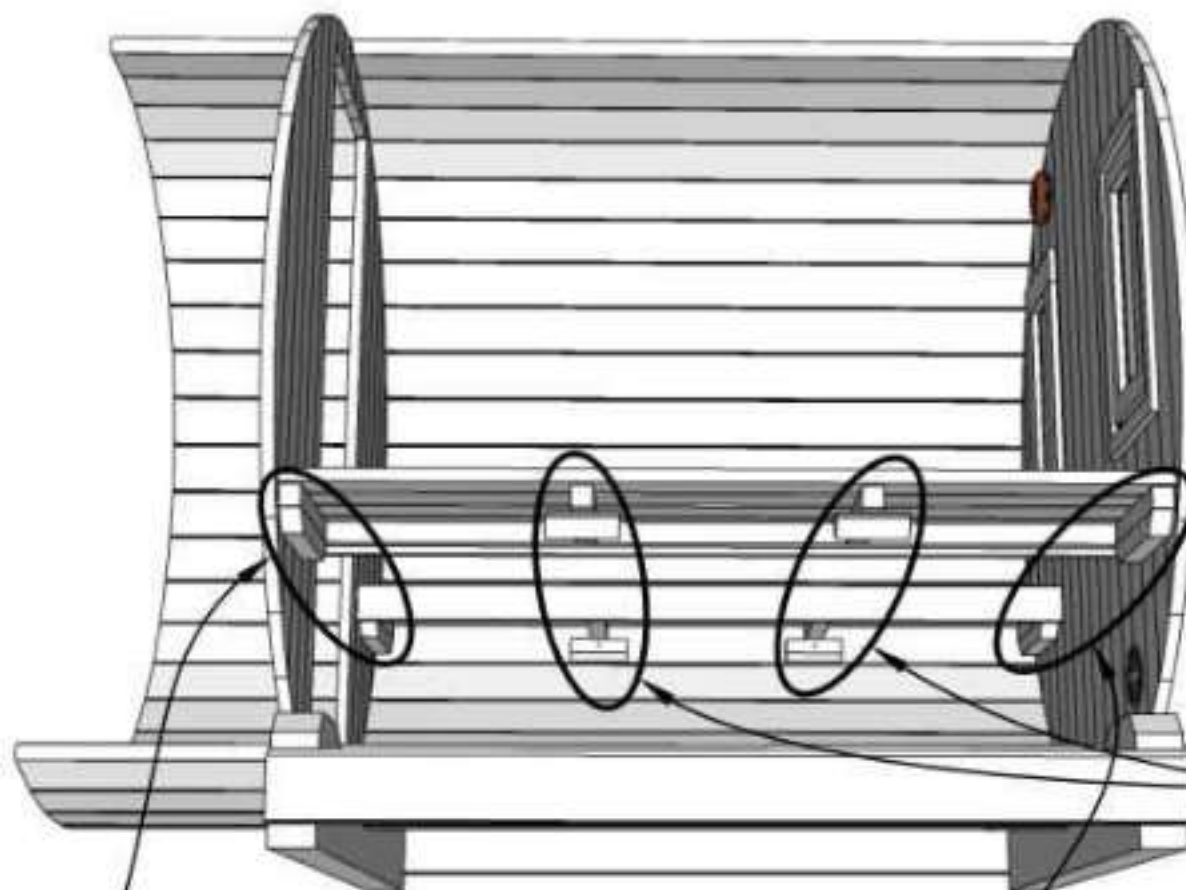

Drill holes  $\varnothing 4\text{mm}$  before screws

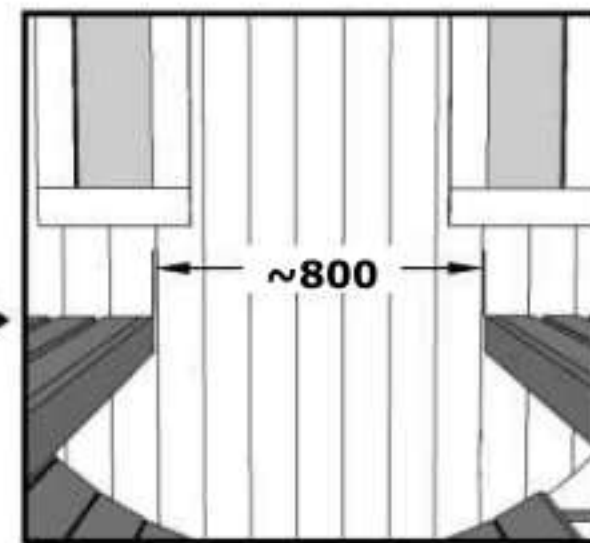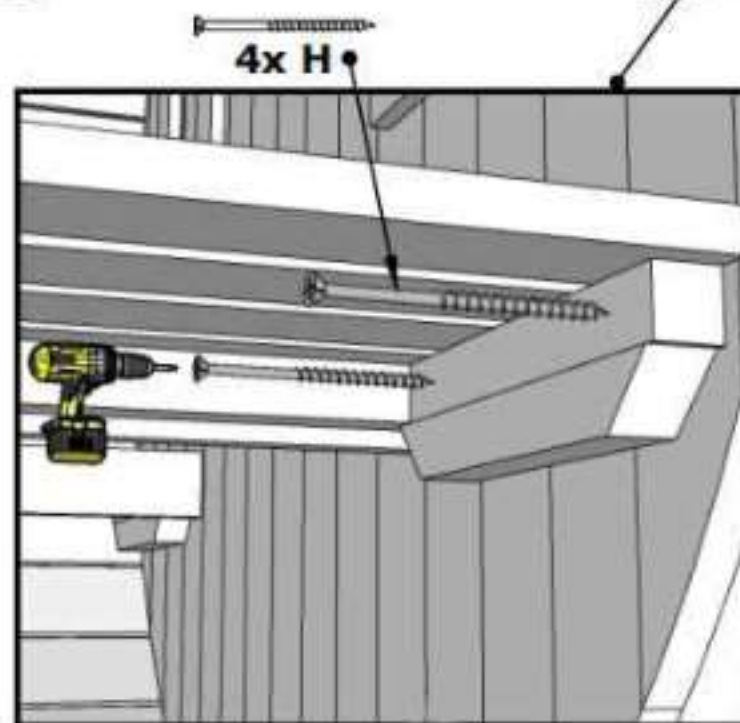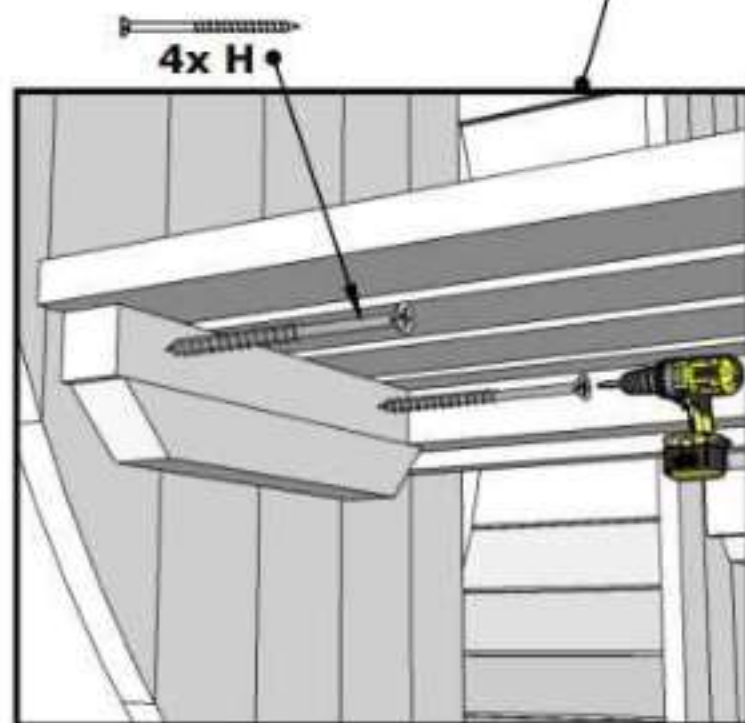


# SAUNA 250, D205

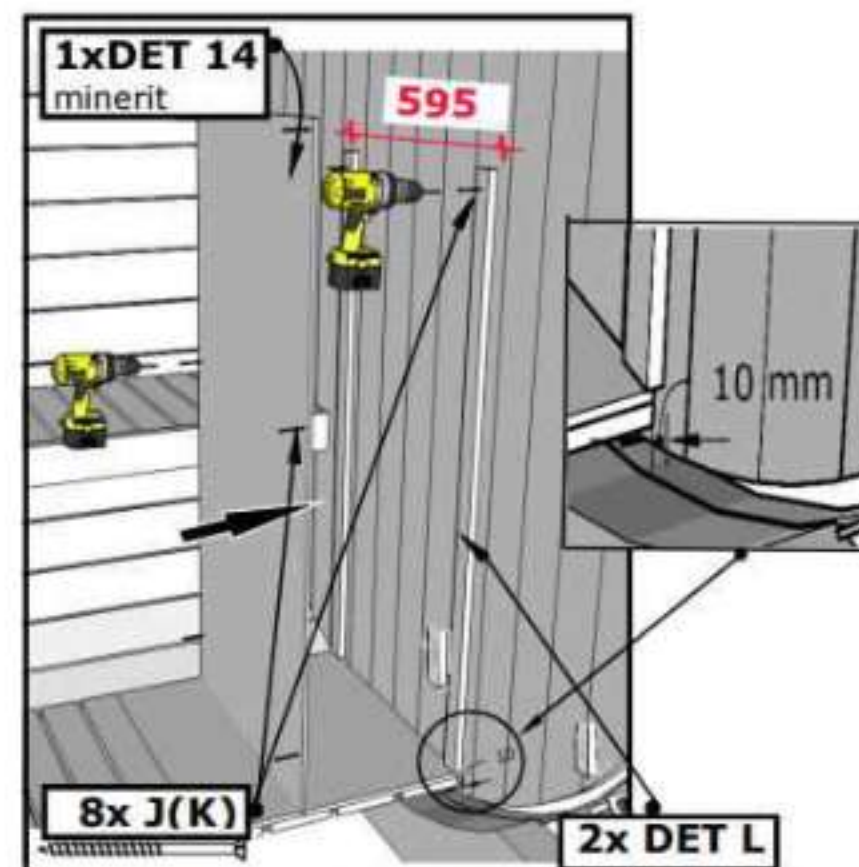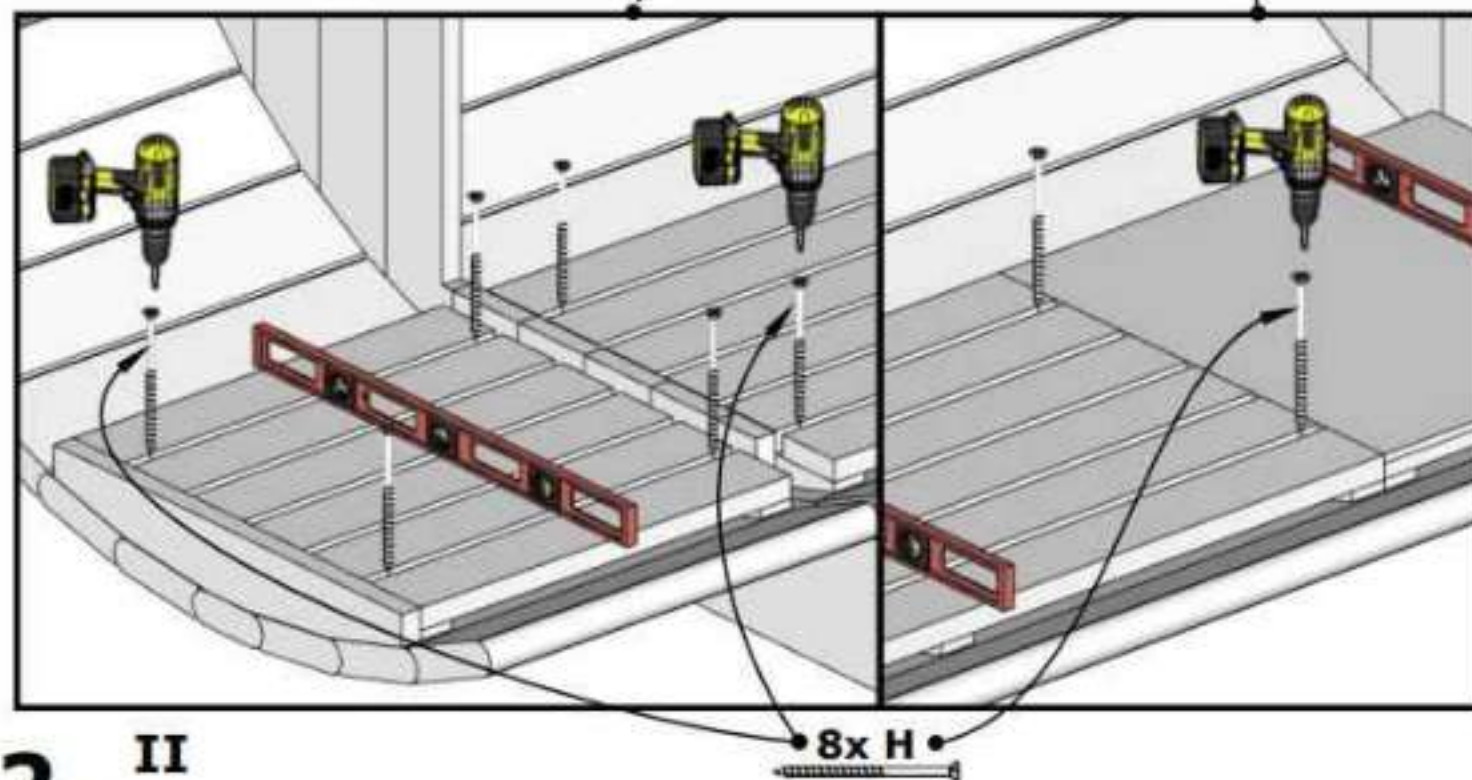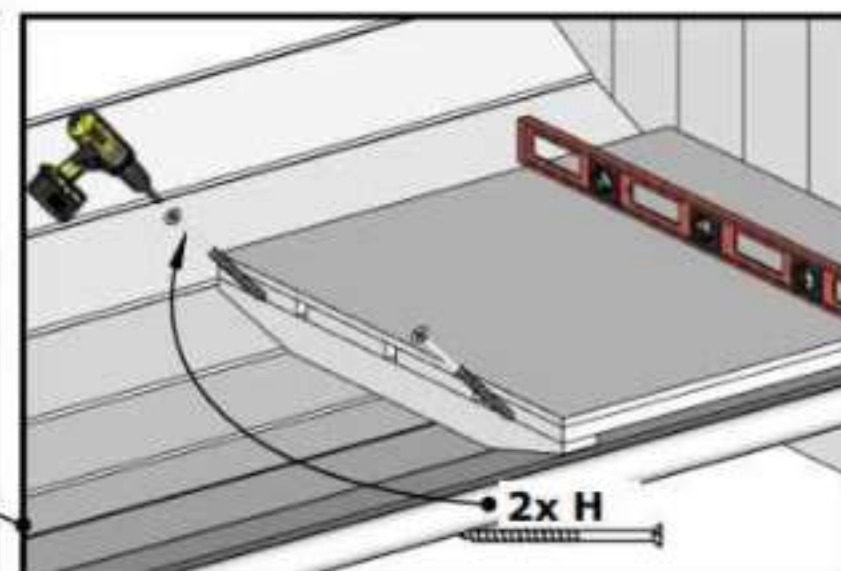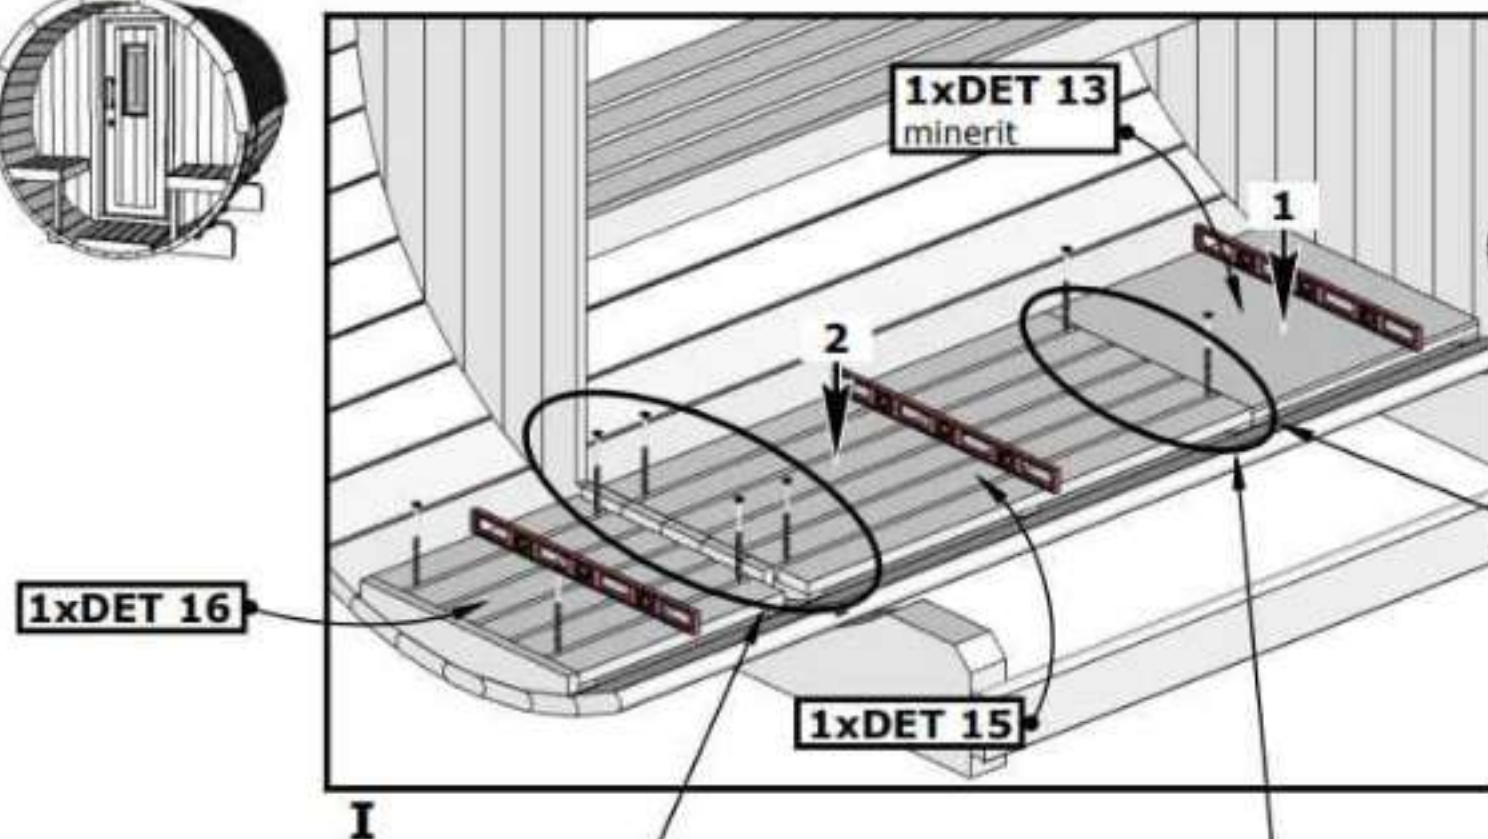


NB! If Your Sauna equipped with electrical heater, then fix DET 14 directly to the wall without DET L. Then use screws K.


12. II

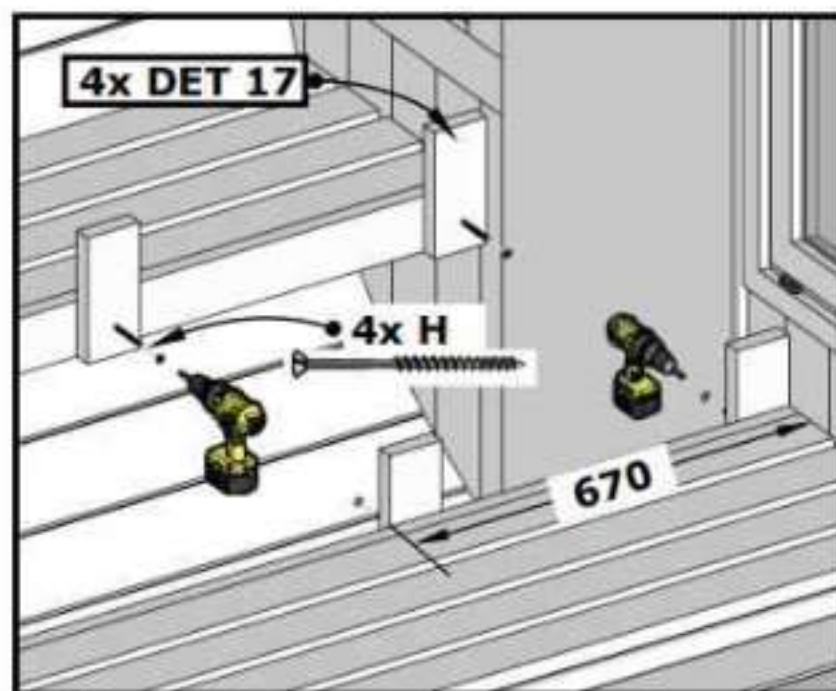

I

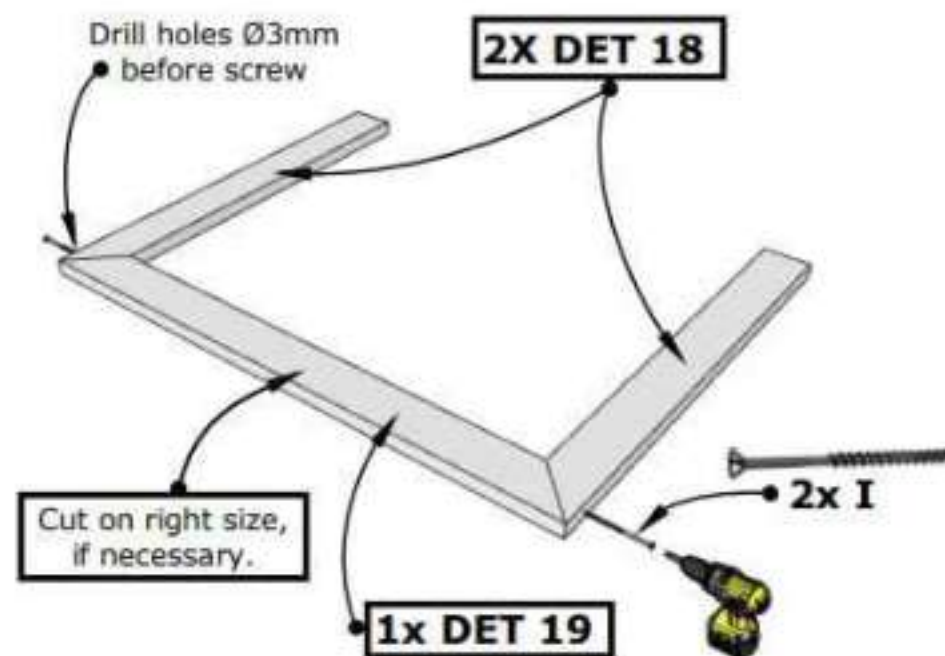


II

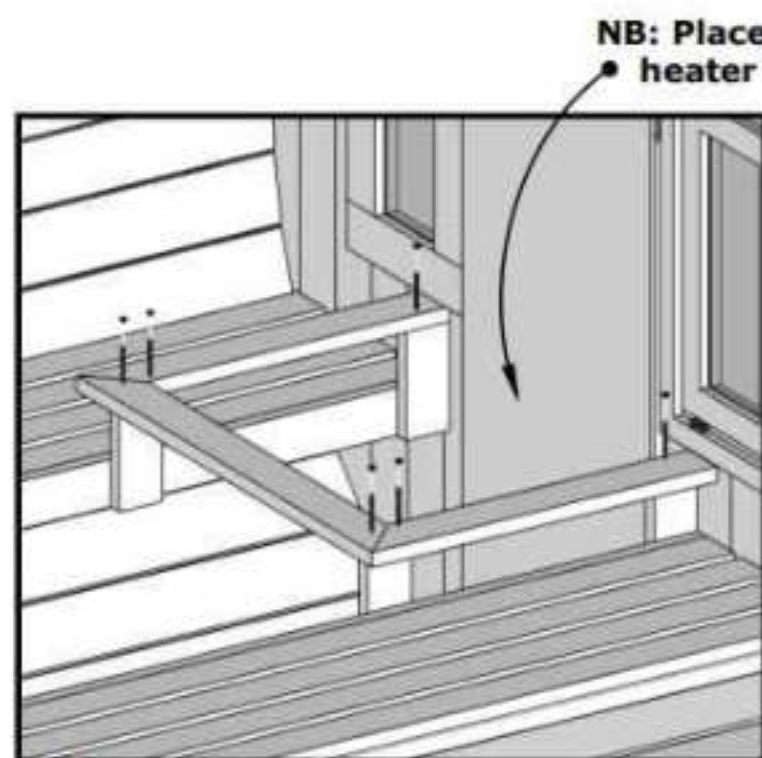

III

Drill holes Ø4mm before screws

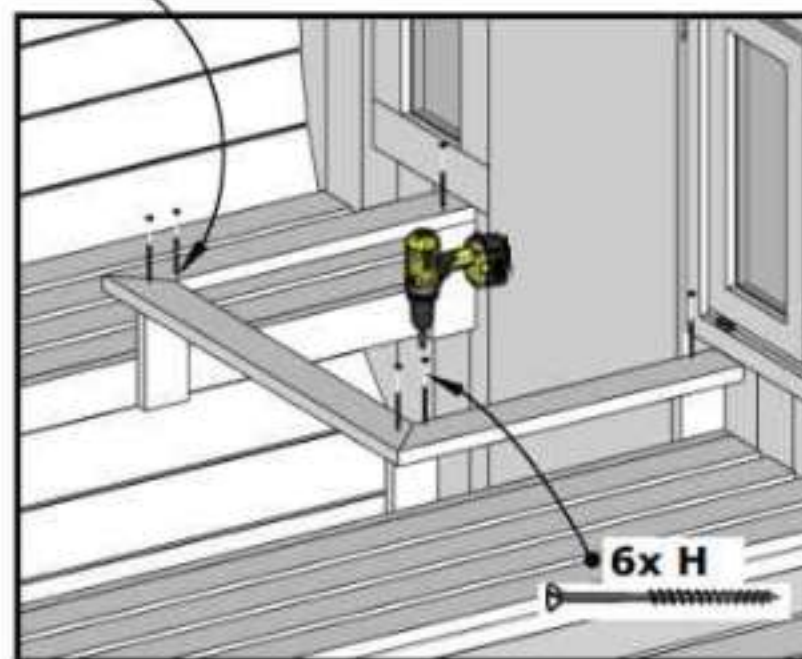

IV

# SAUNA 250, D205





Drill holes Ø4mm  
before screw.




Use waterlevel for  
door installation.


NB! Place door  
from inside.

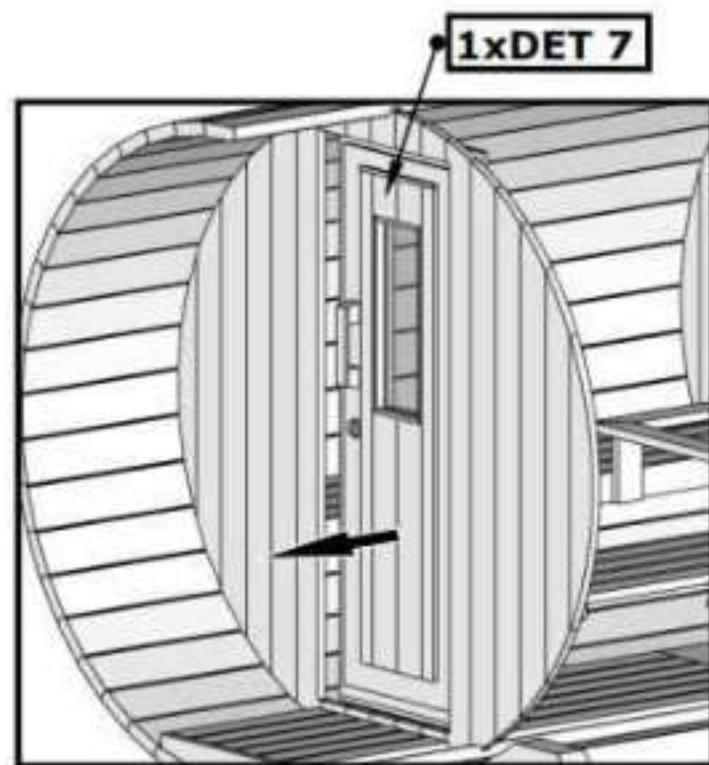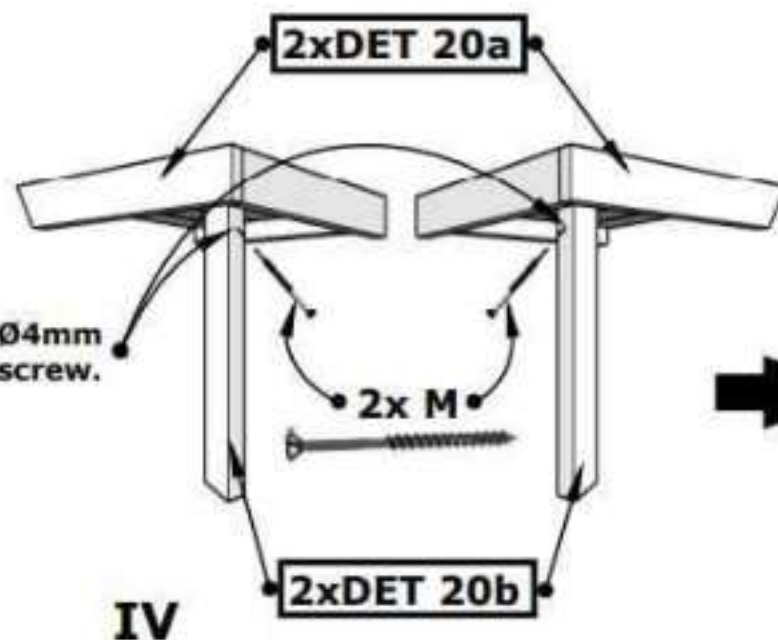

I



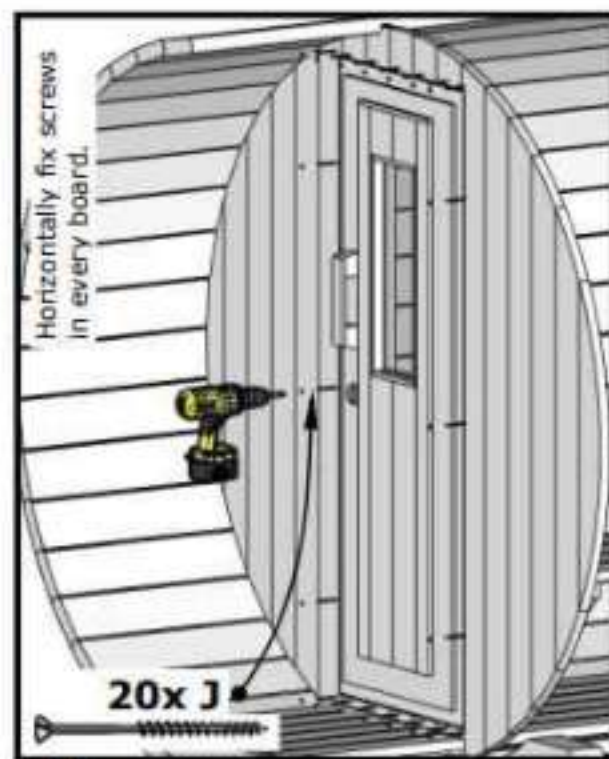


II

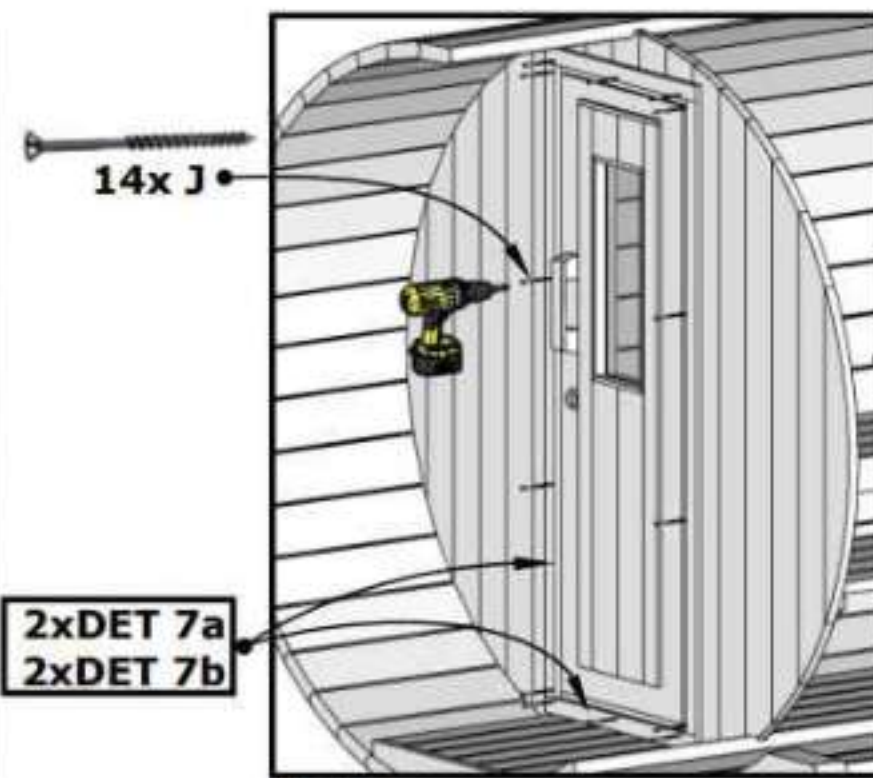


III

# SAUNA 250, D205

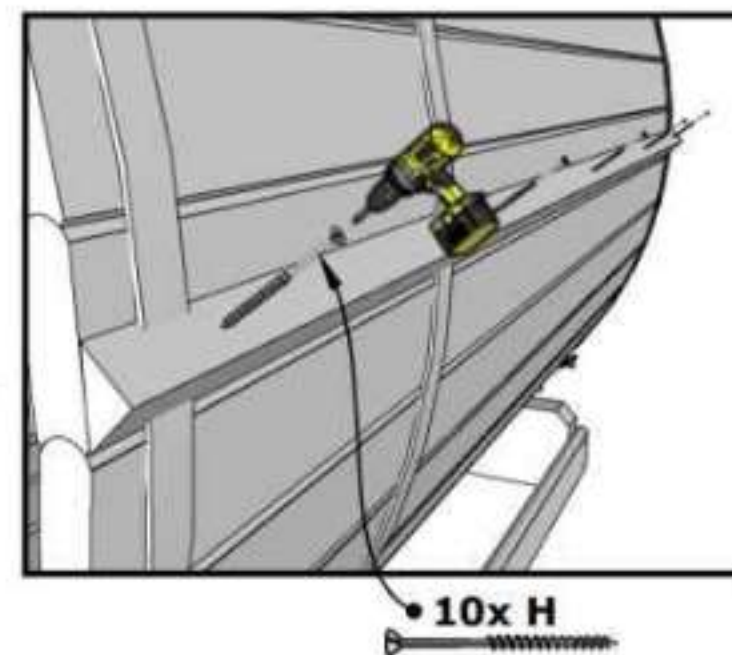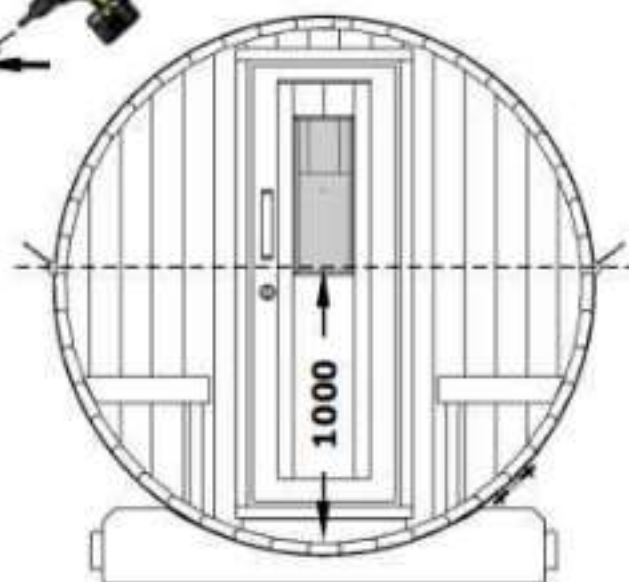
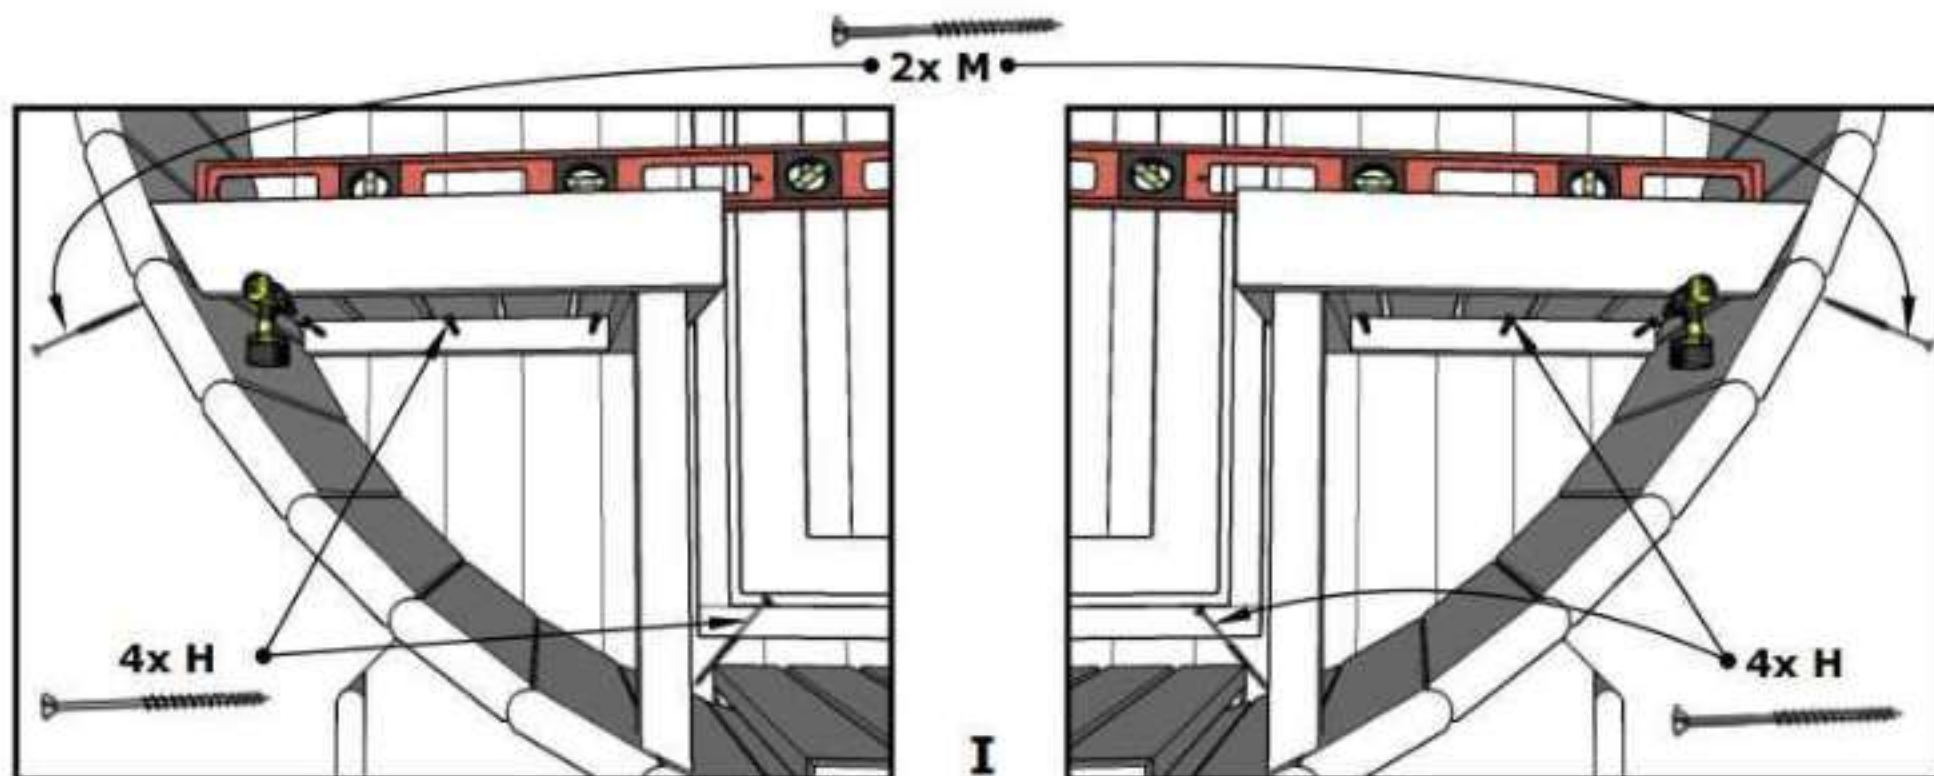


15.


# SAUNA 250, D205

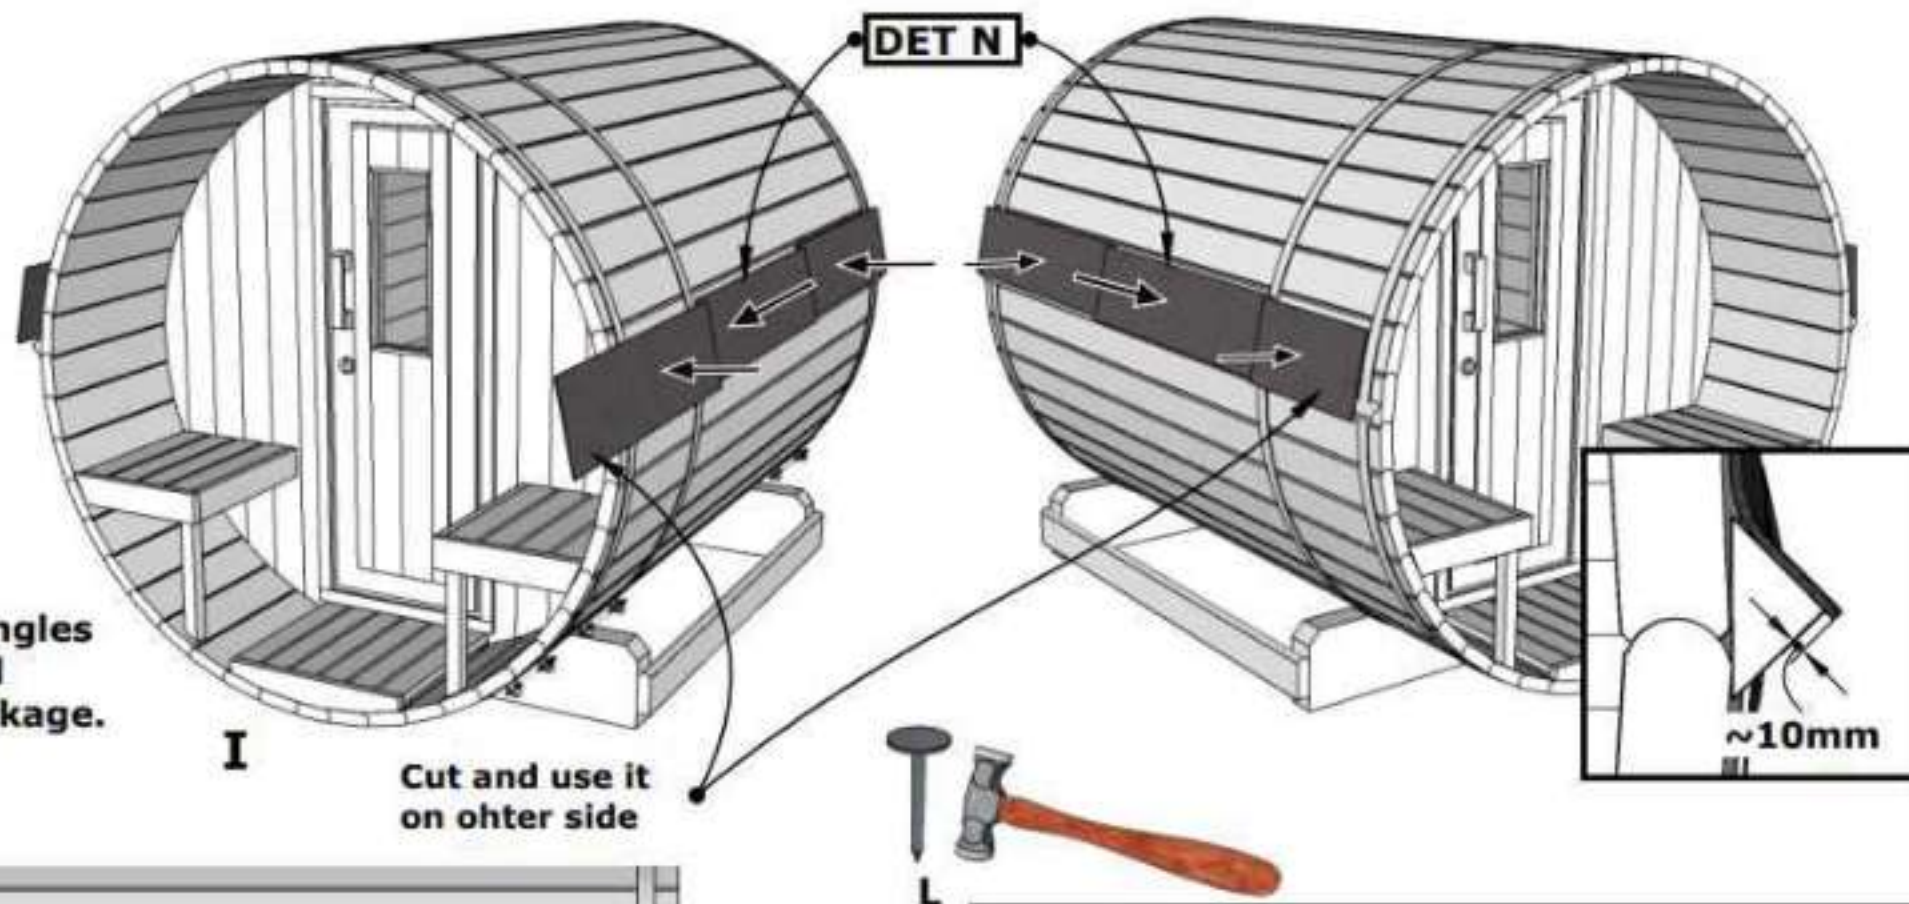

**NB! Check also shingles installation manual inside shingles package.**

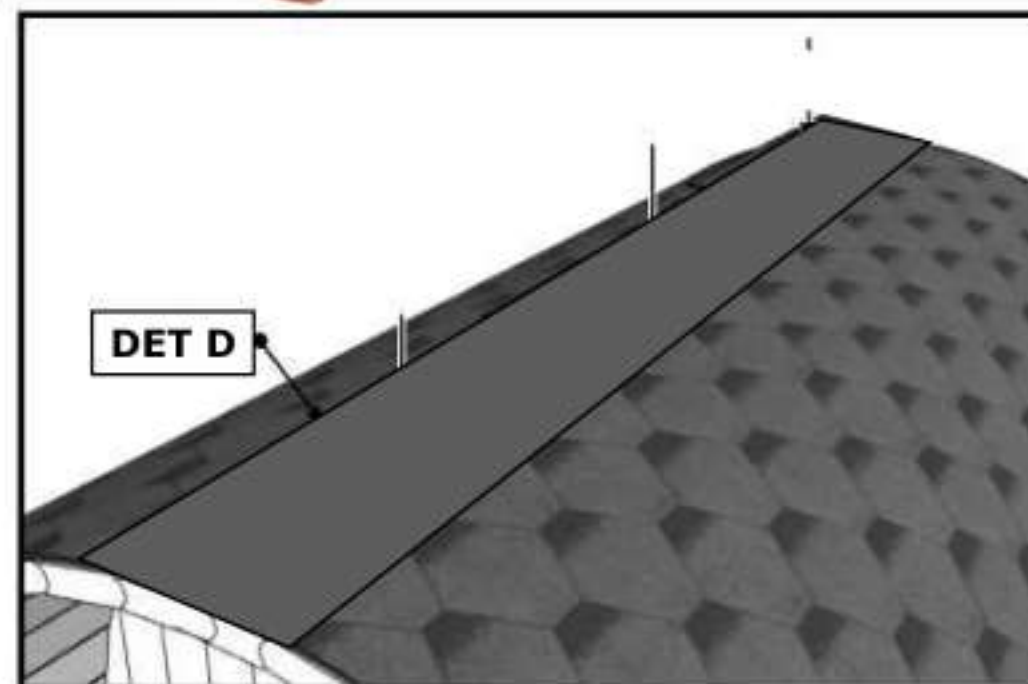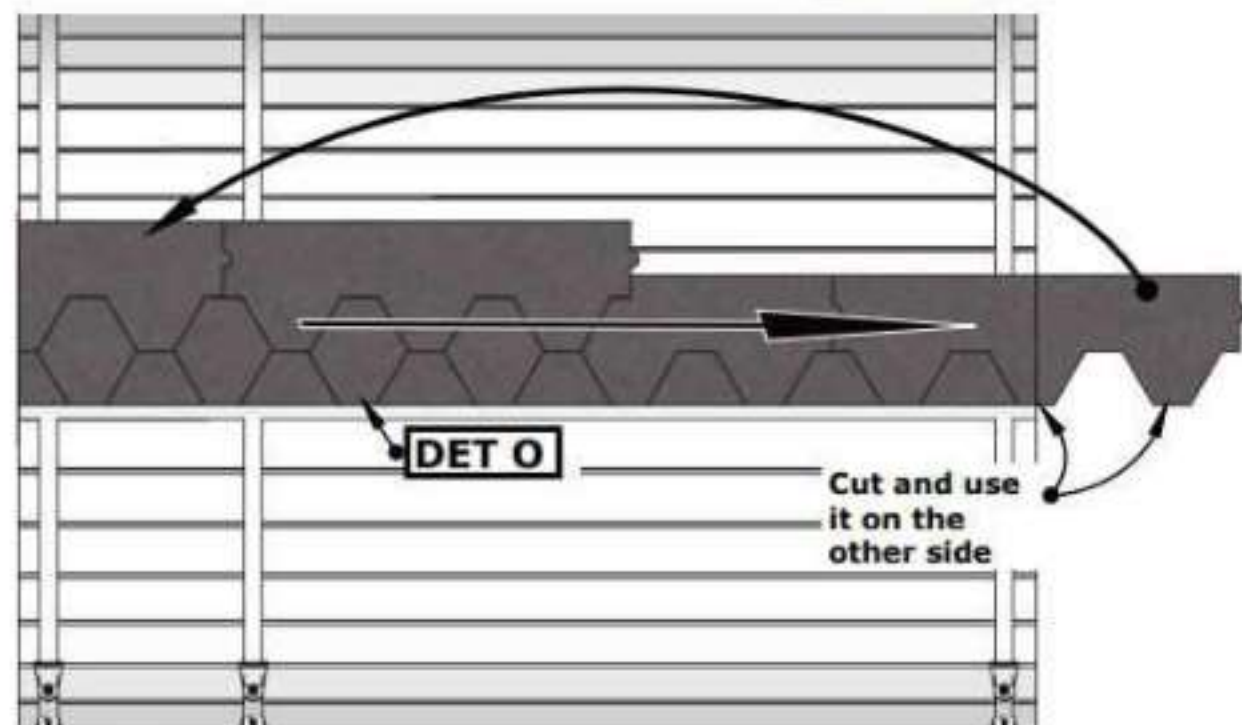

# SAUNA 250, D205

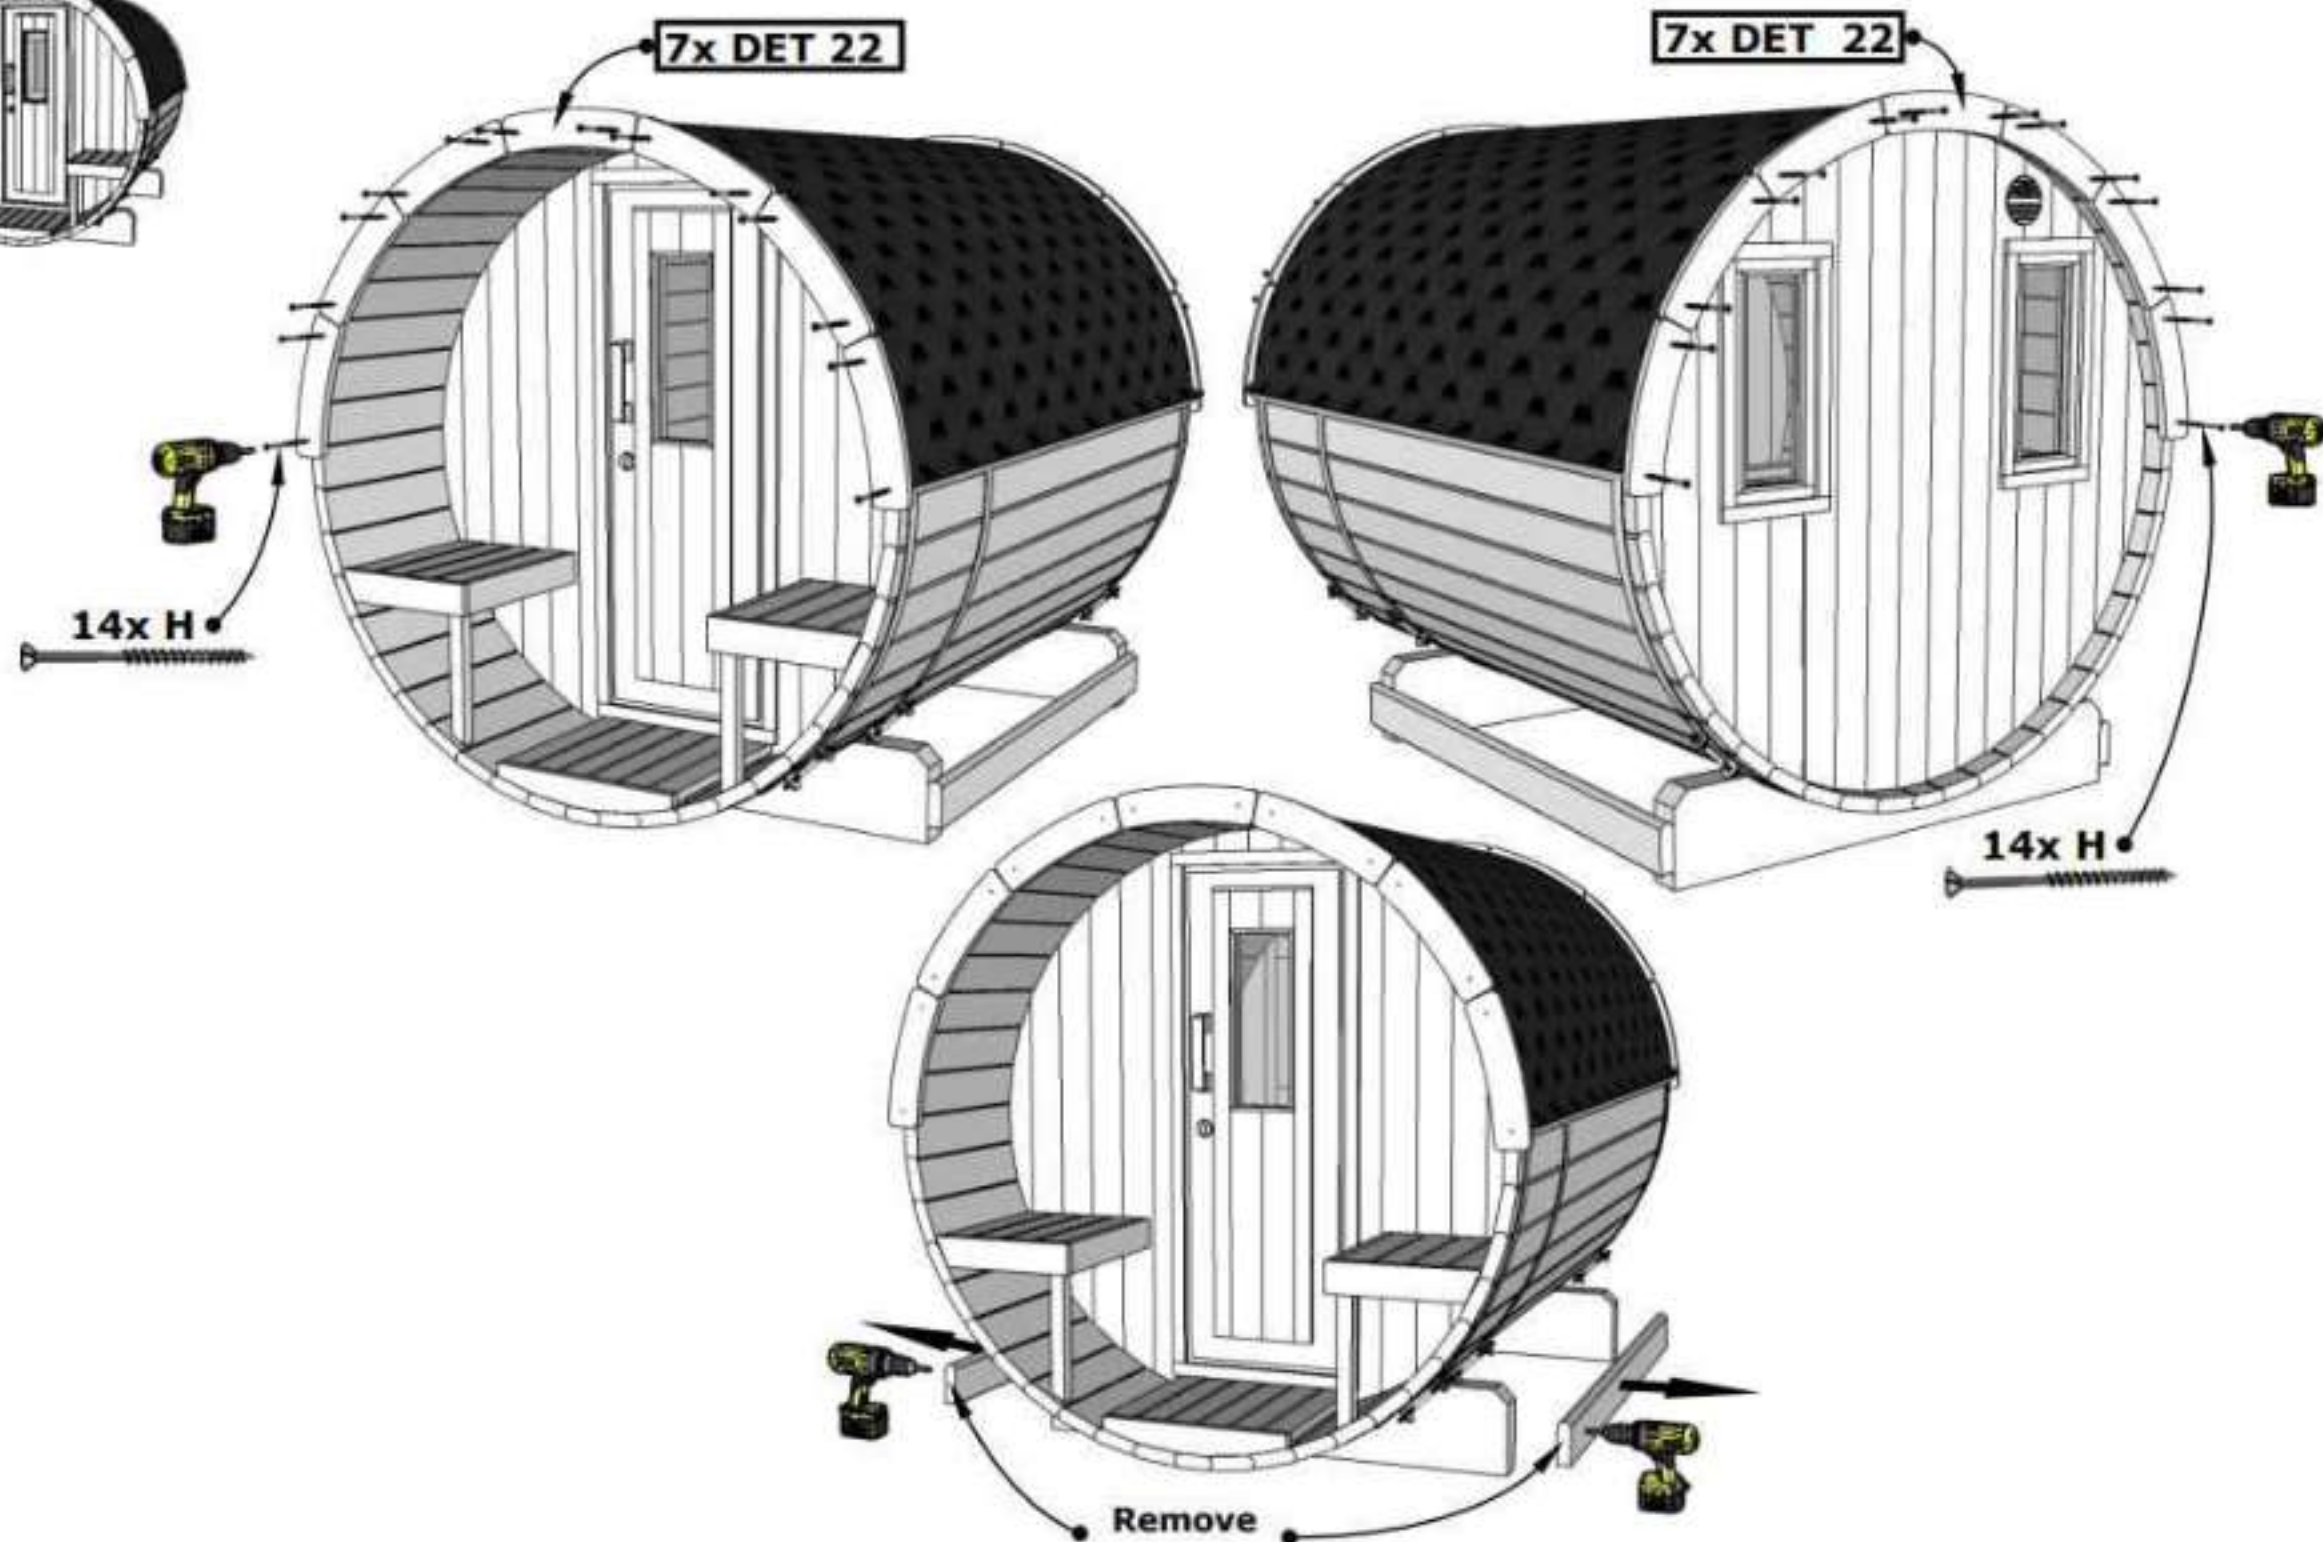

17.