

COUNTRYWOOD




Sauna 400, D205

**Please read the whole manual
before You start.**

**All given measurements
are in millimeters.**




• 6b


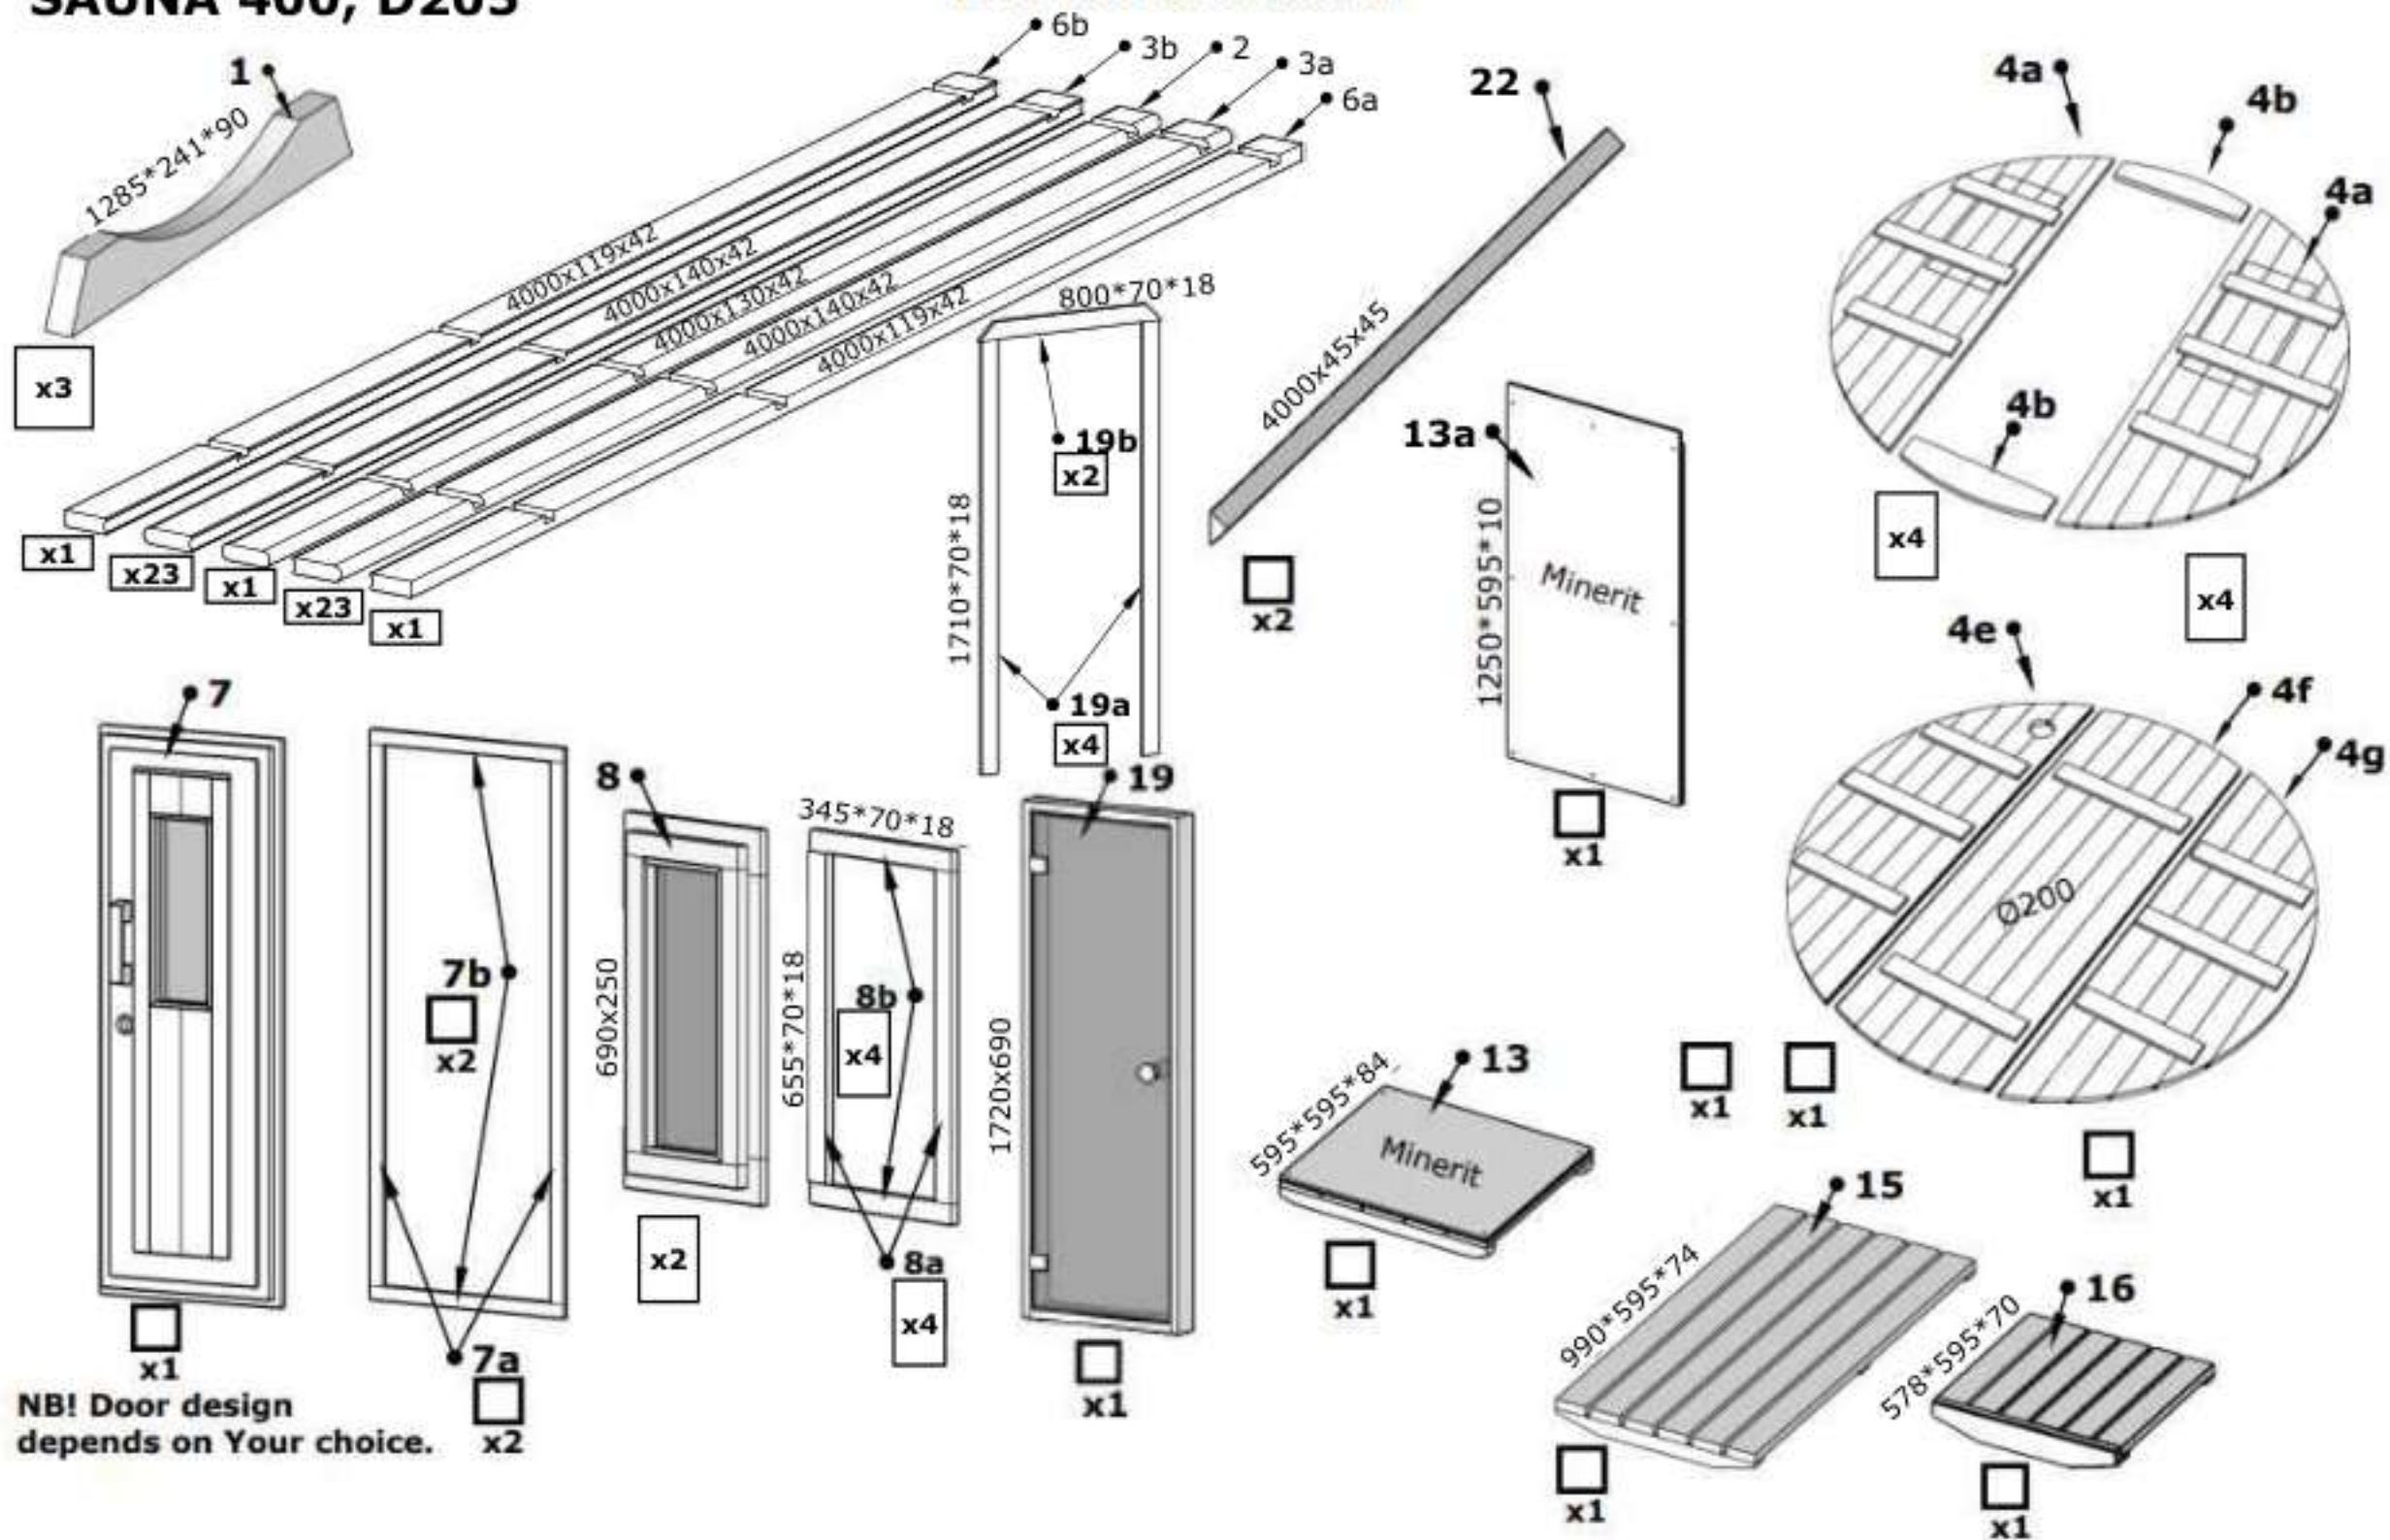


Details list Nr. 2

SAUNA 400, D205

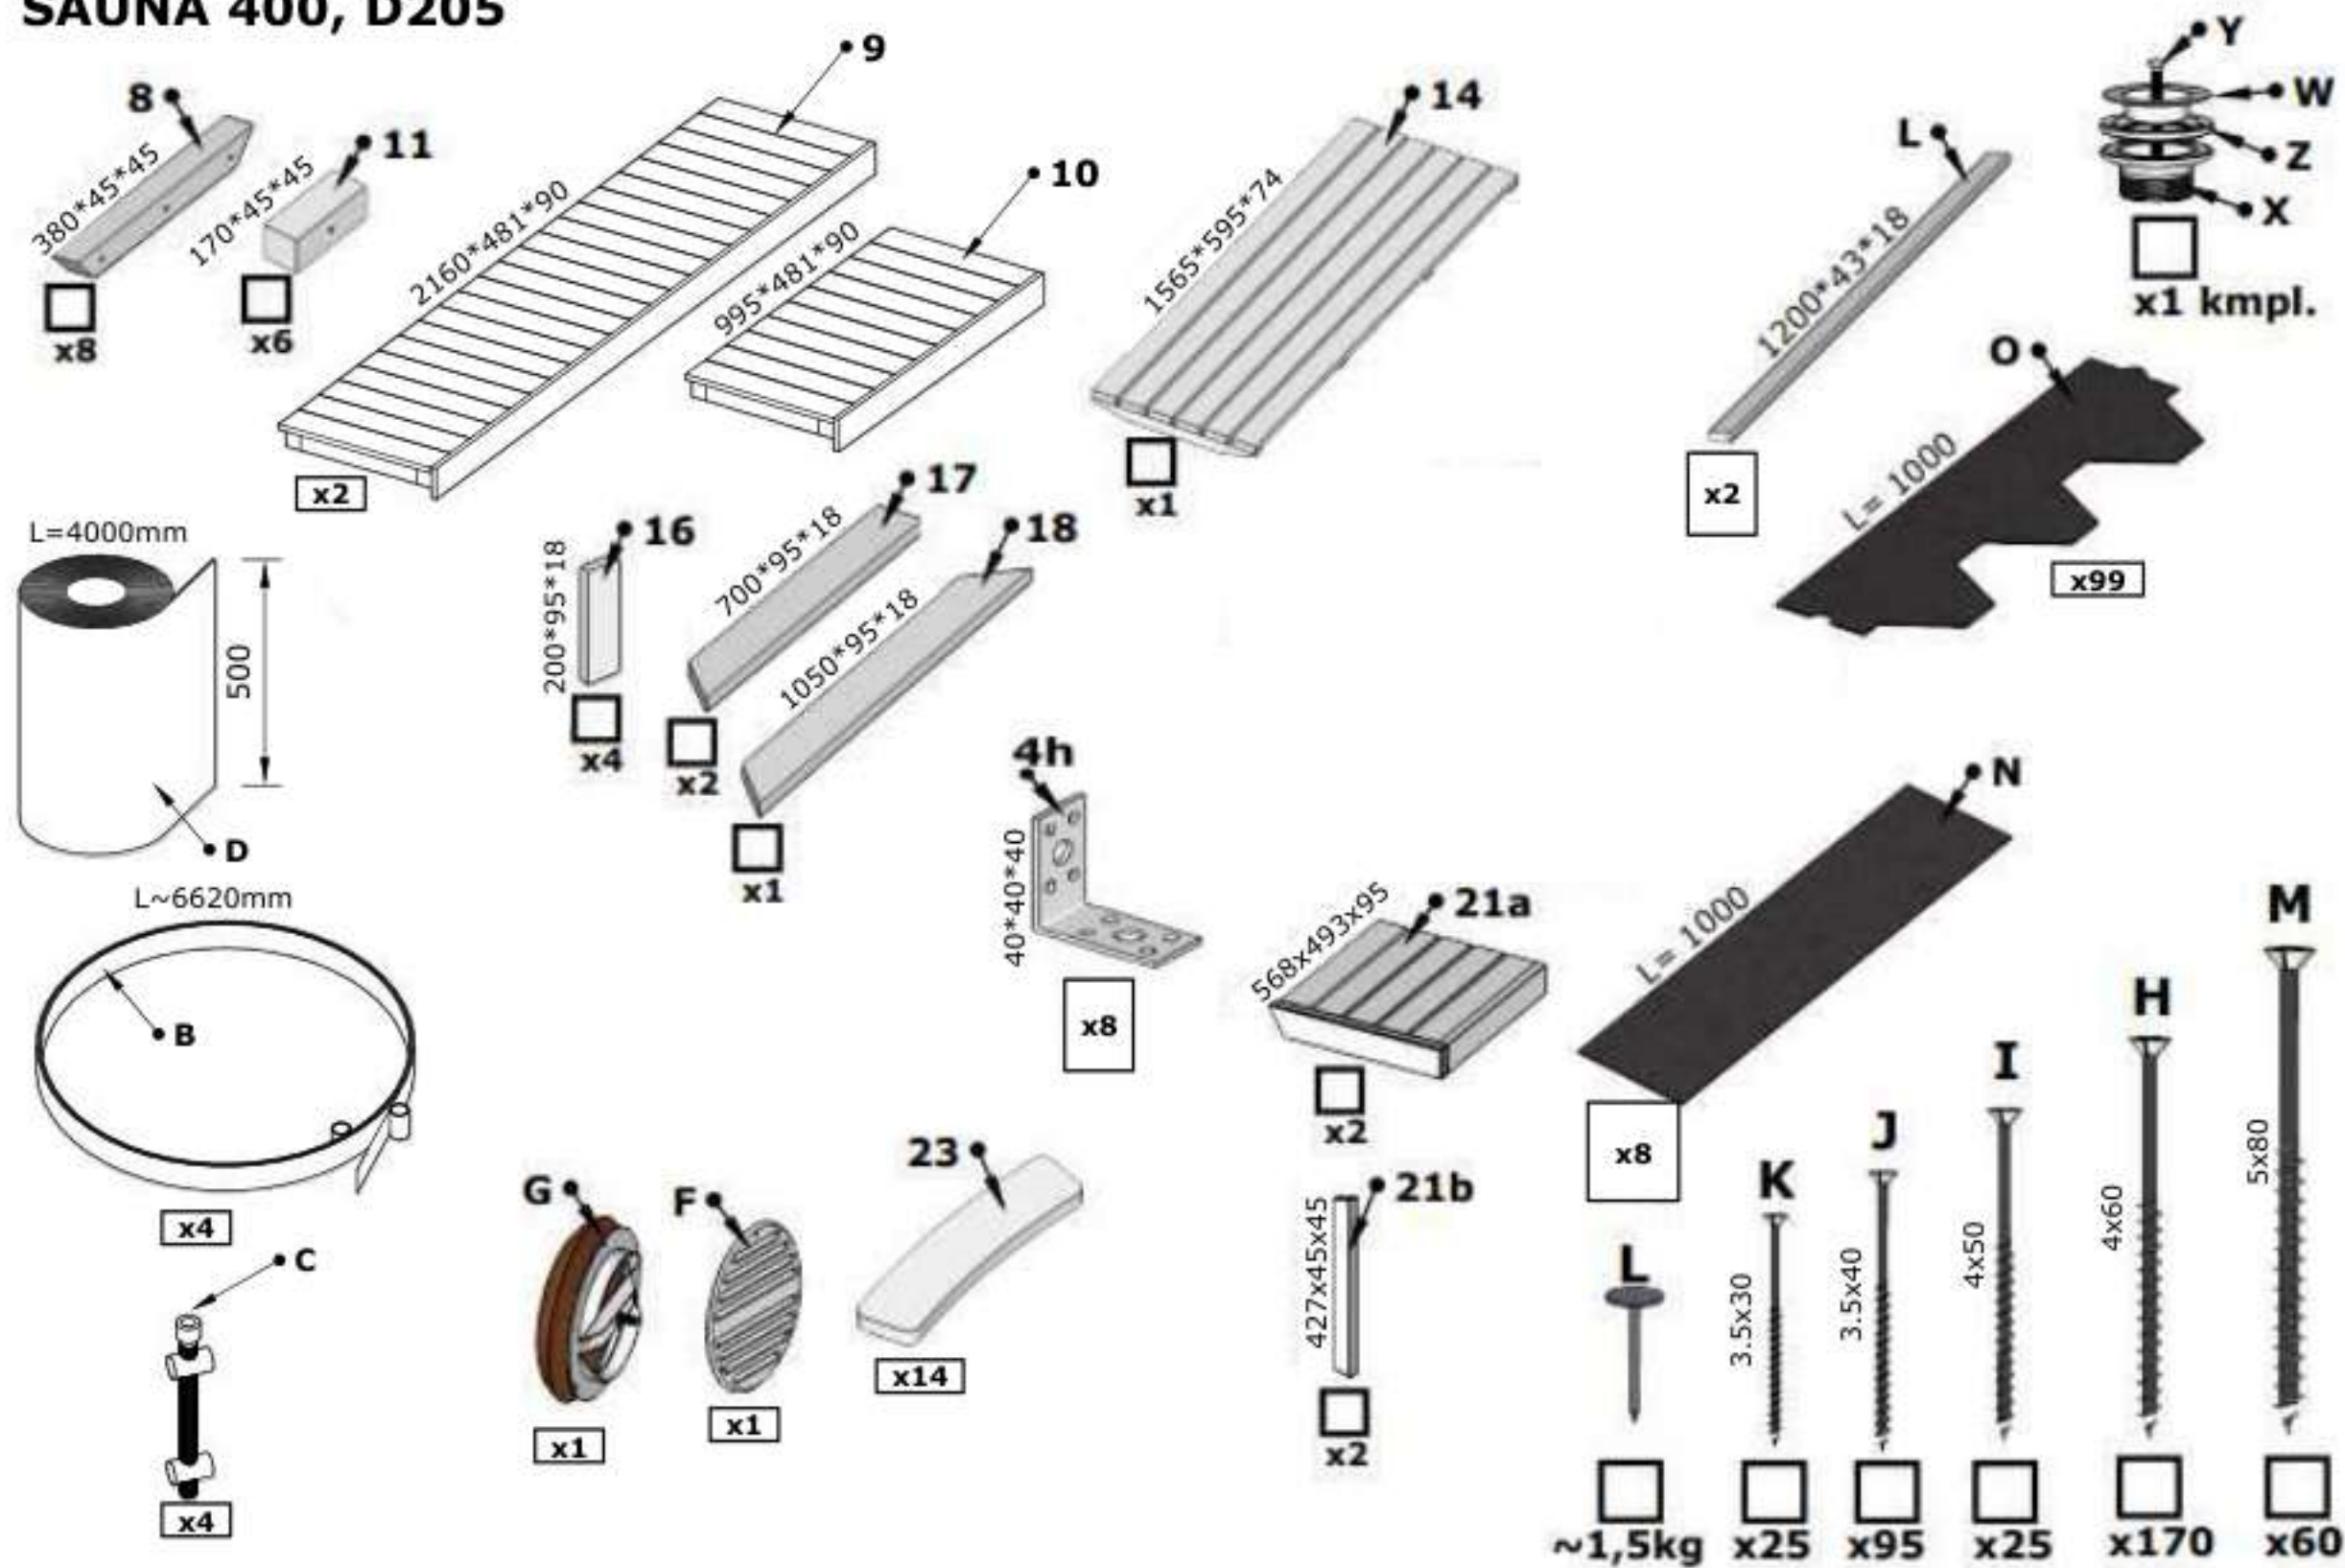

Sauna 400, D205

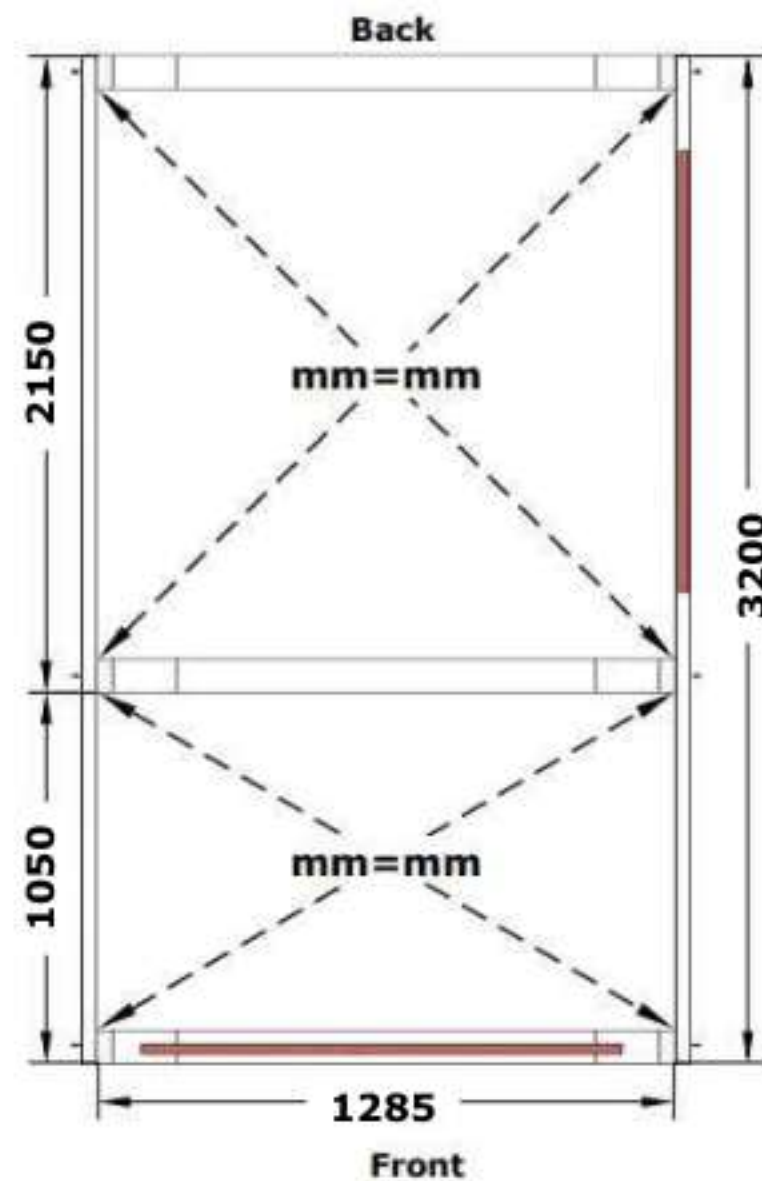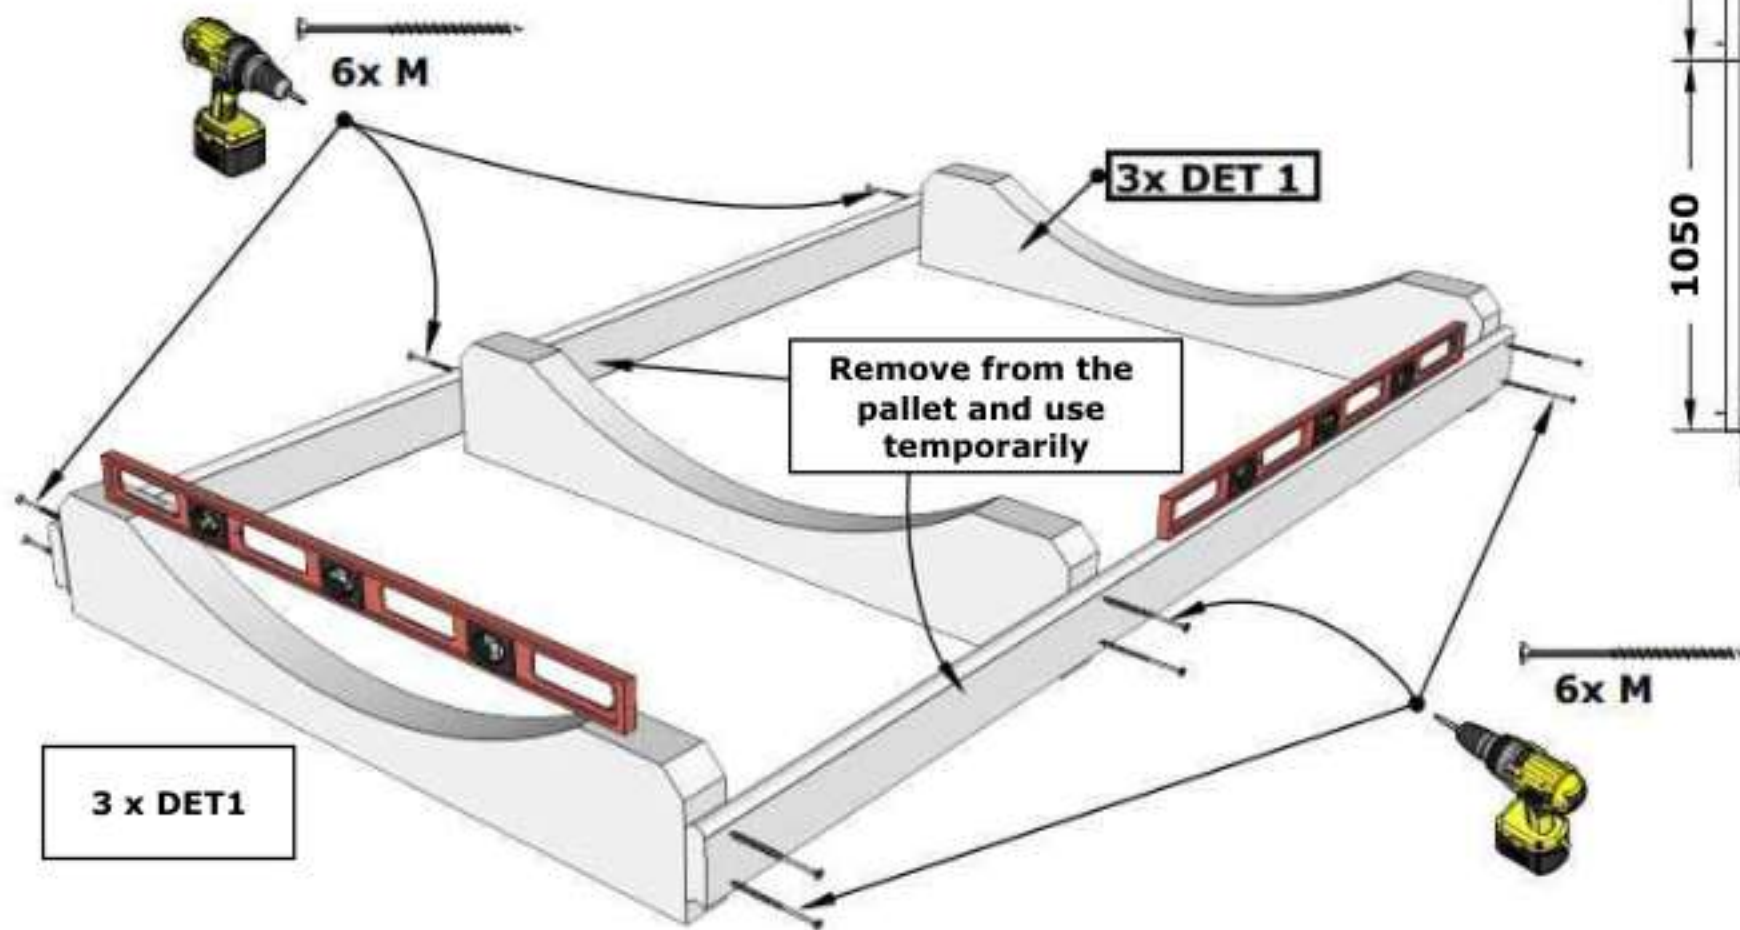




1.

Sauna 400, D205





4 x DET 3a
4 x DET 3b

II

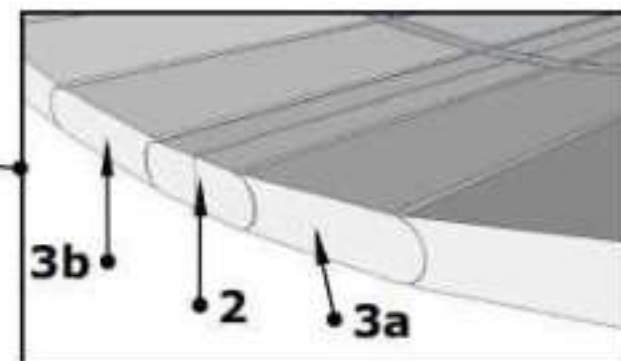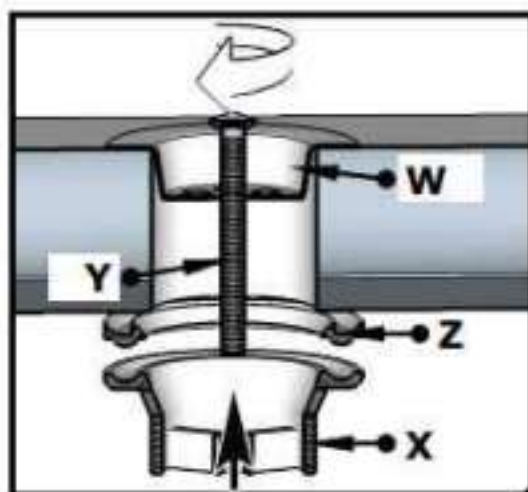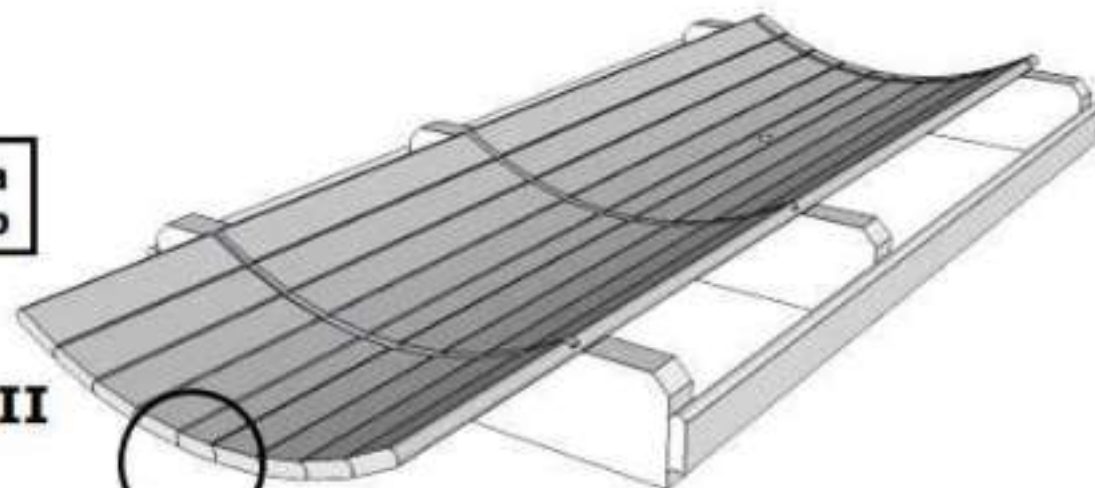


1x DET 2

I

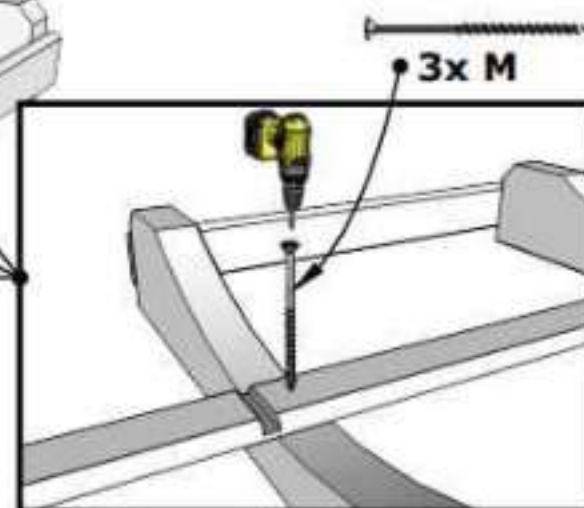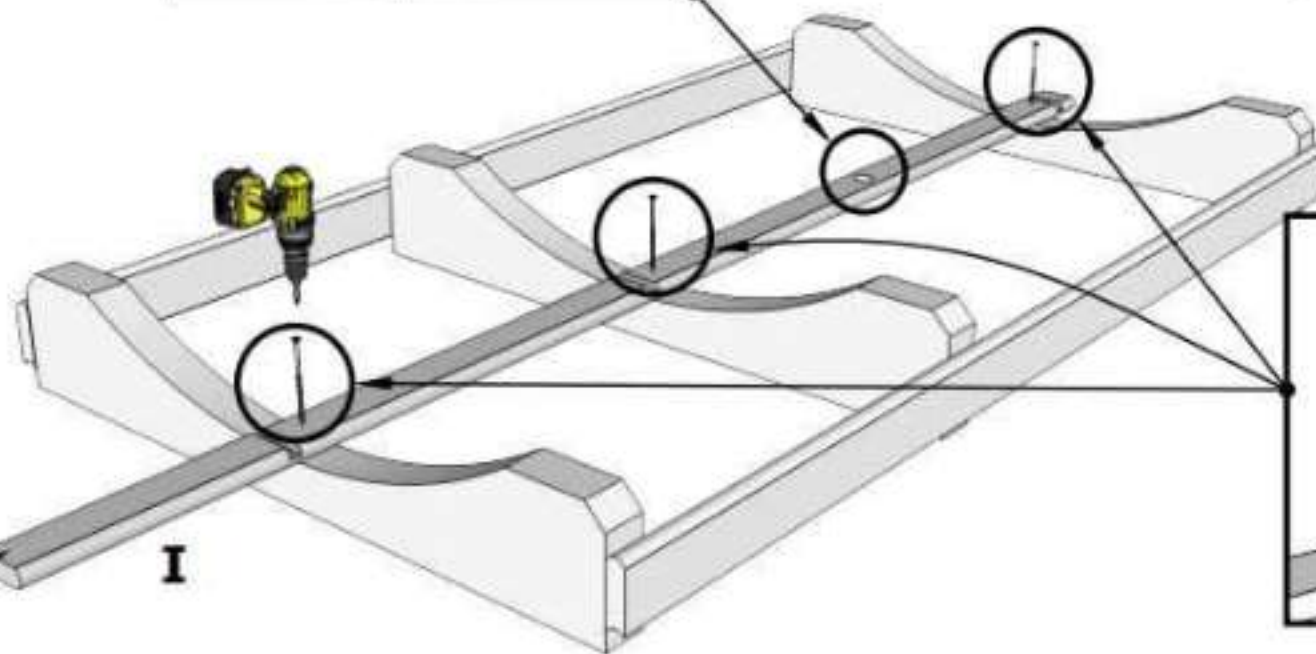


2.


Sauna 400, D205

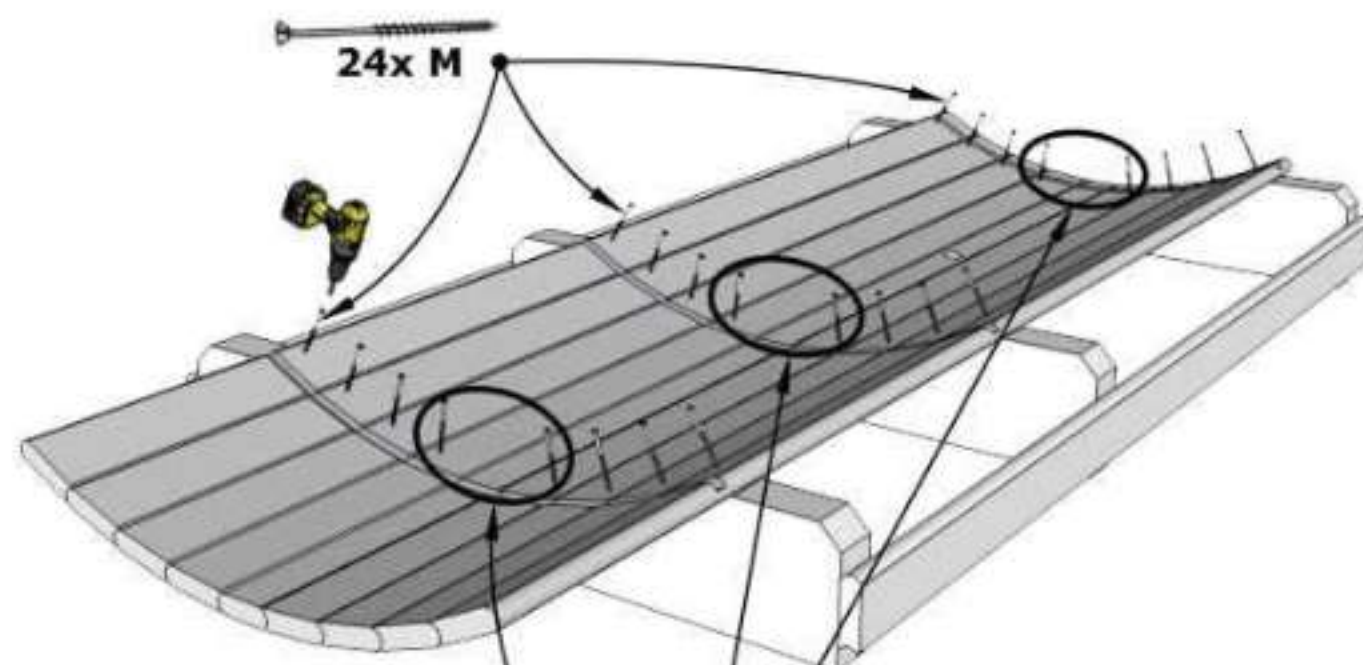

II

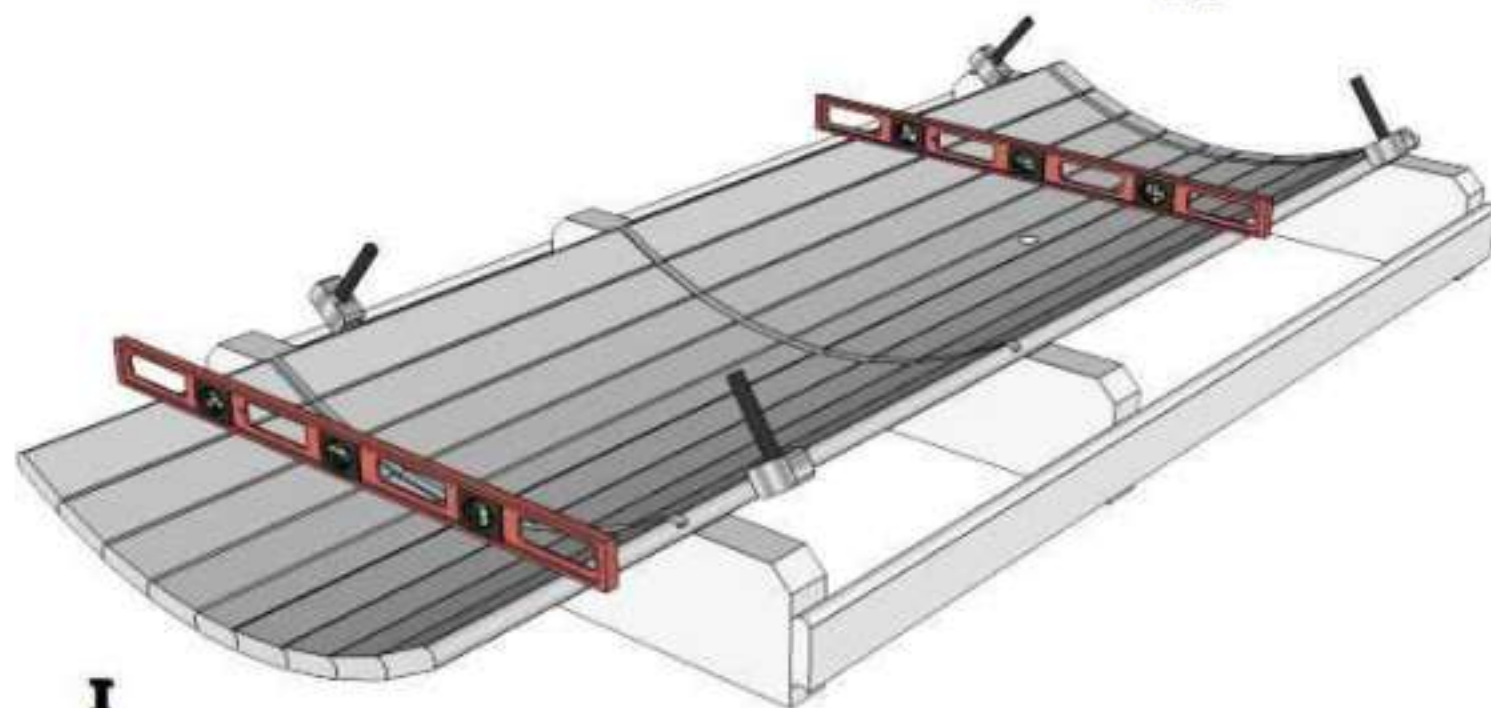


I



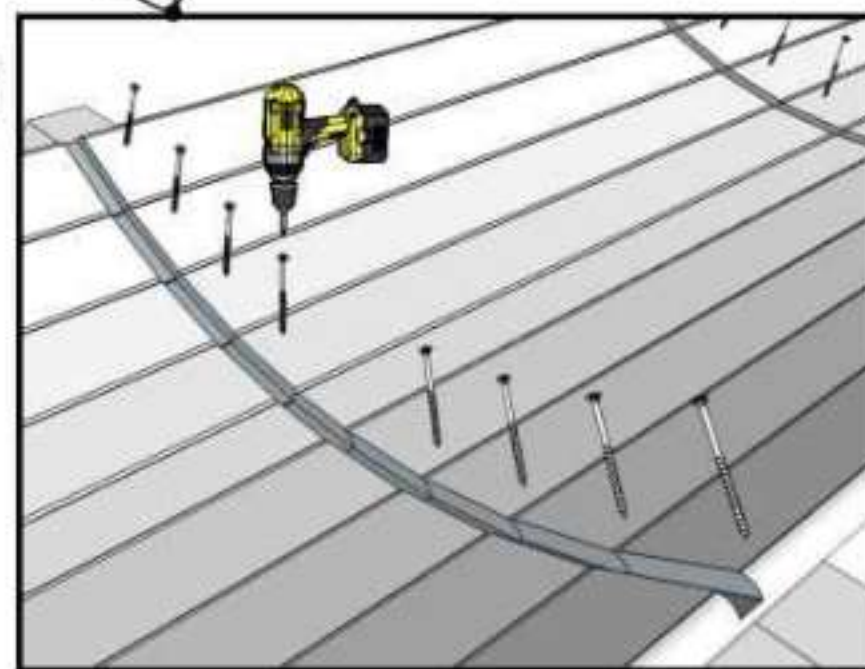


3.

Sauna 400, D205


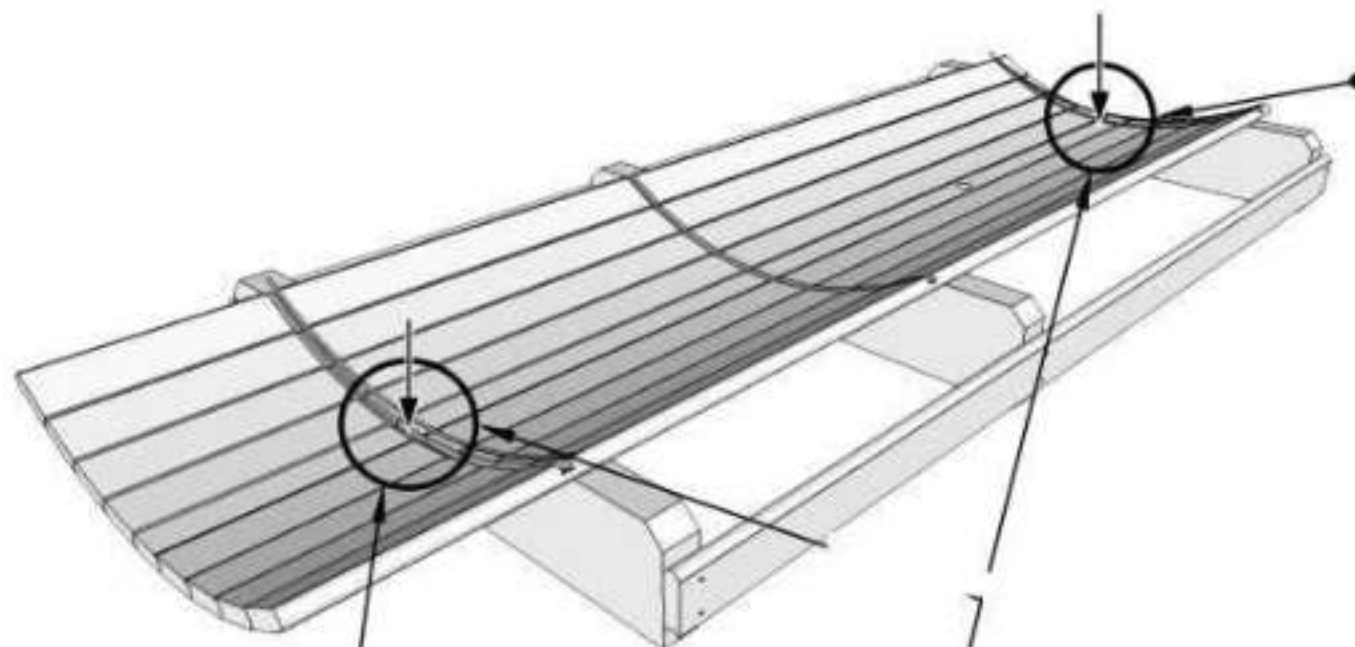


Drill 4 holes Ø10mm
in DET 2, outside

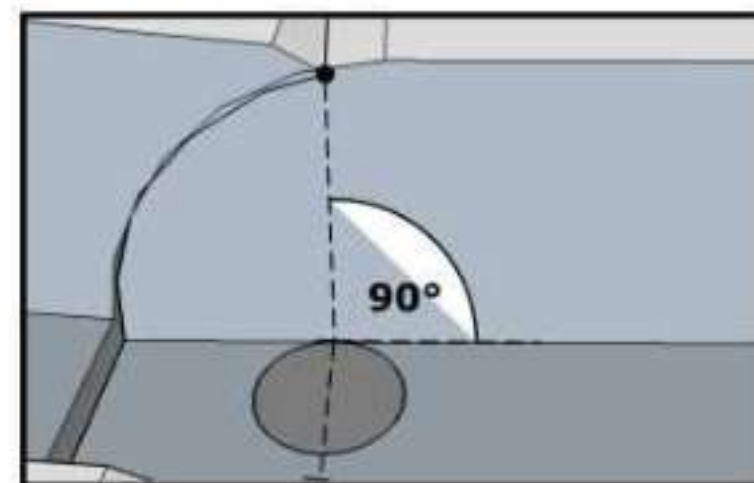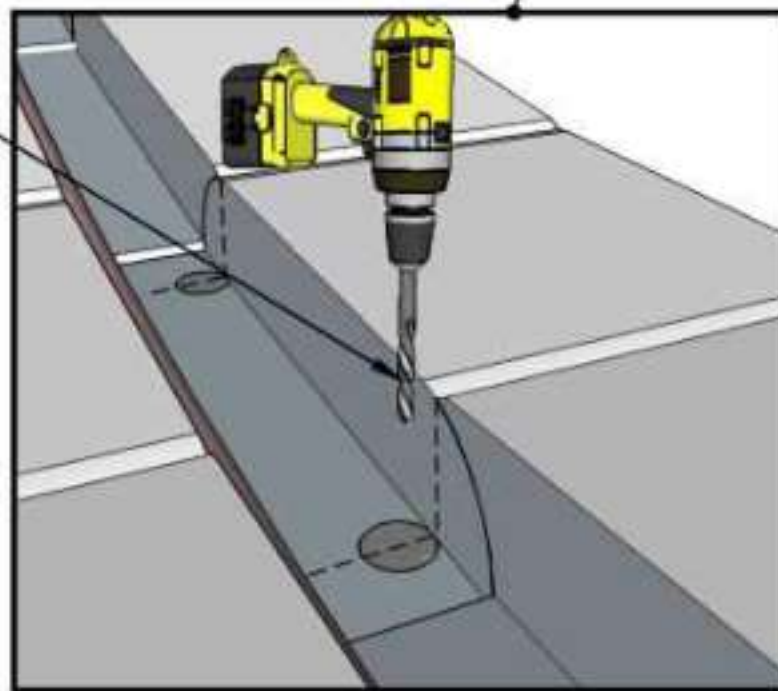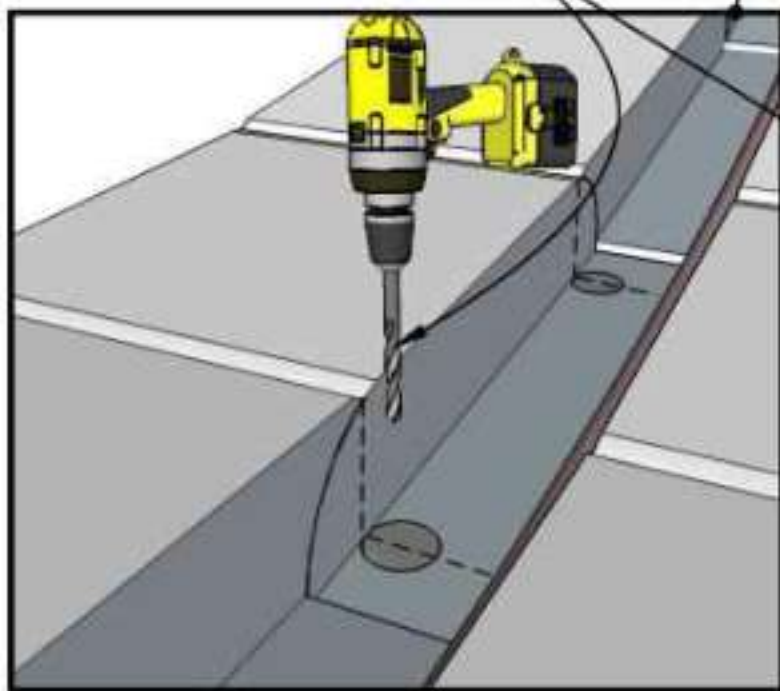


3A.

Sauna 400, D205

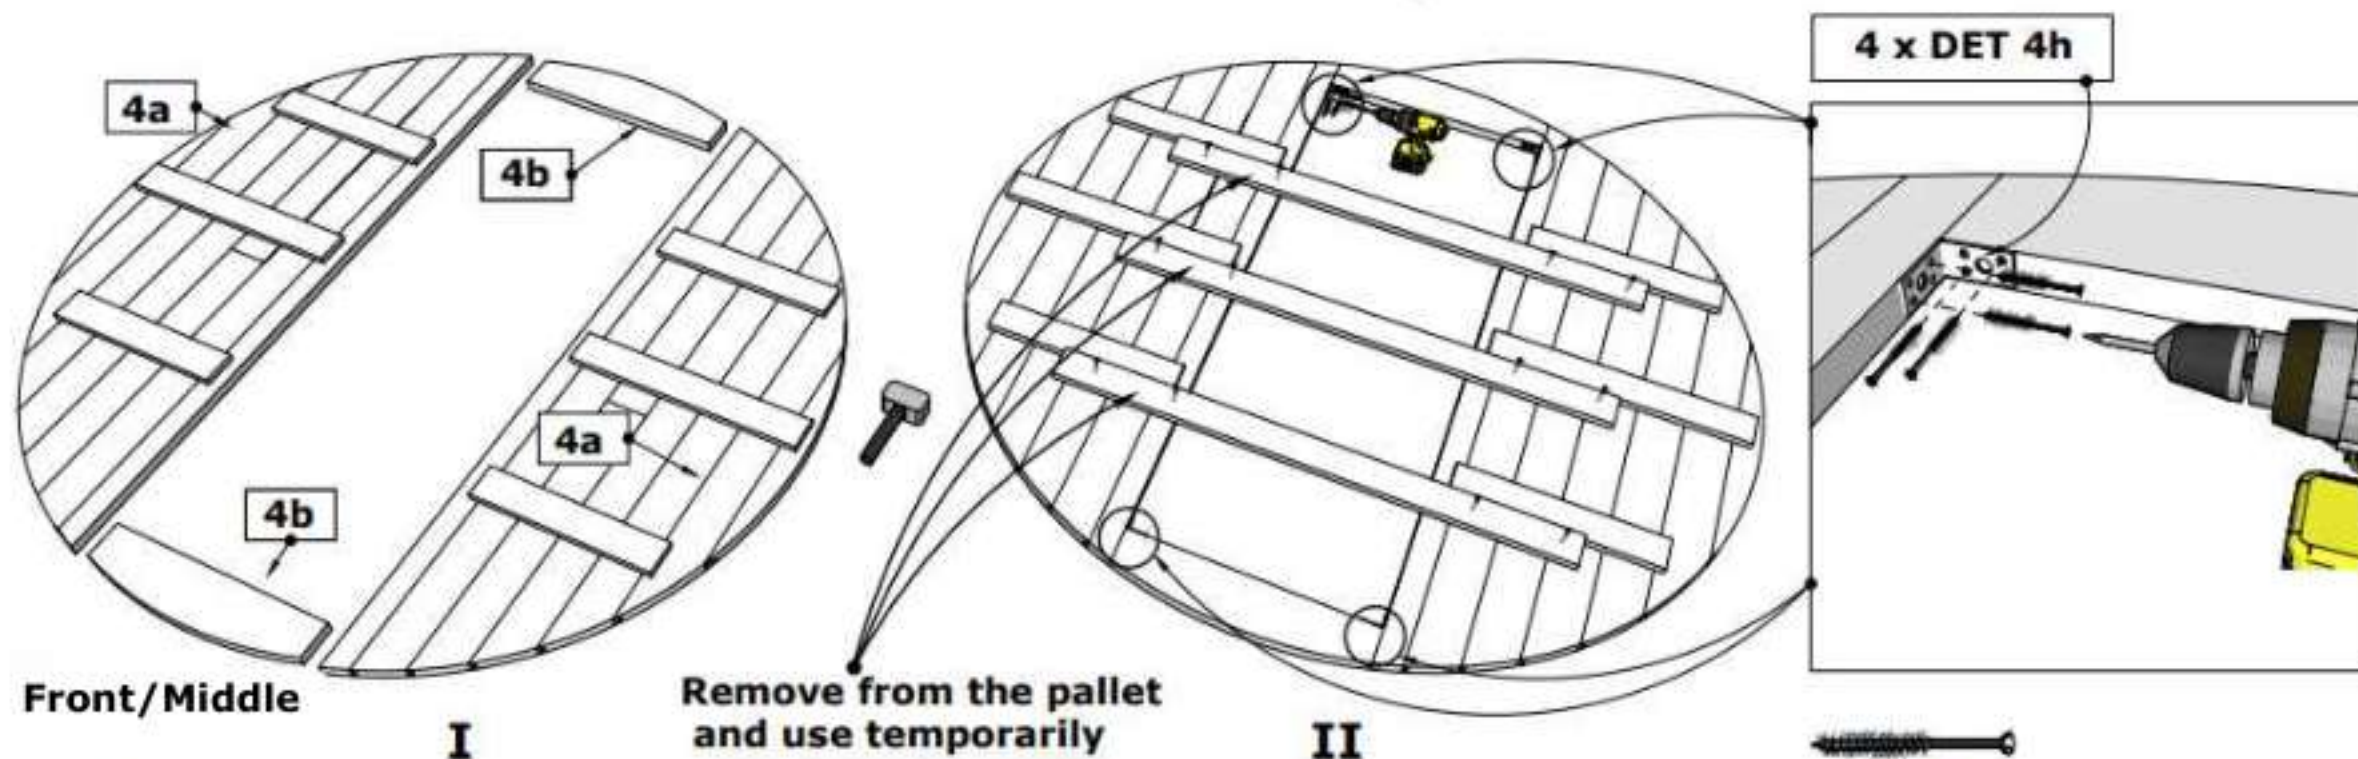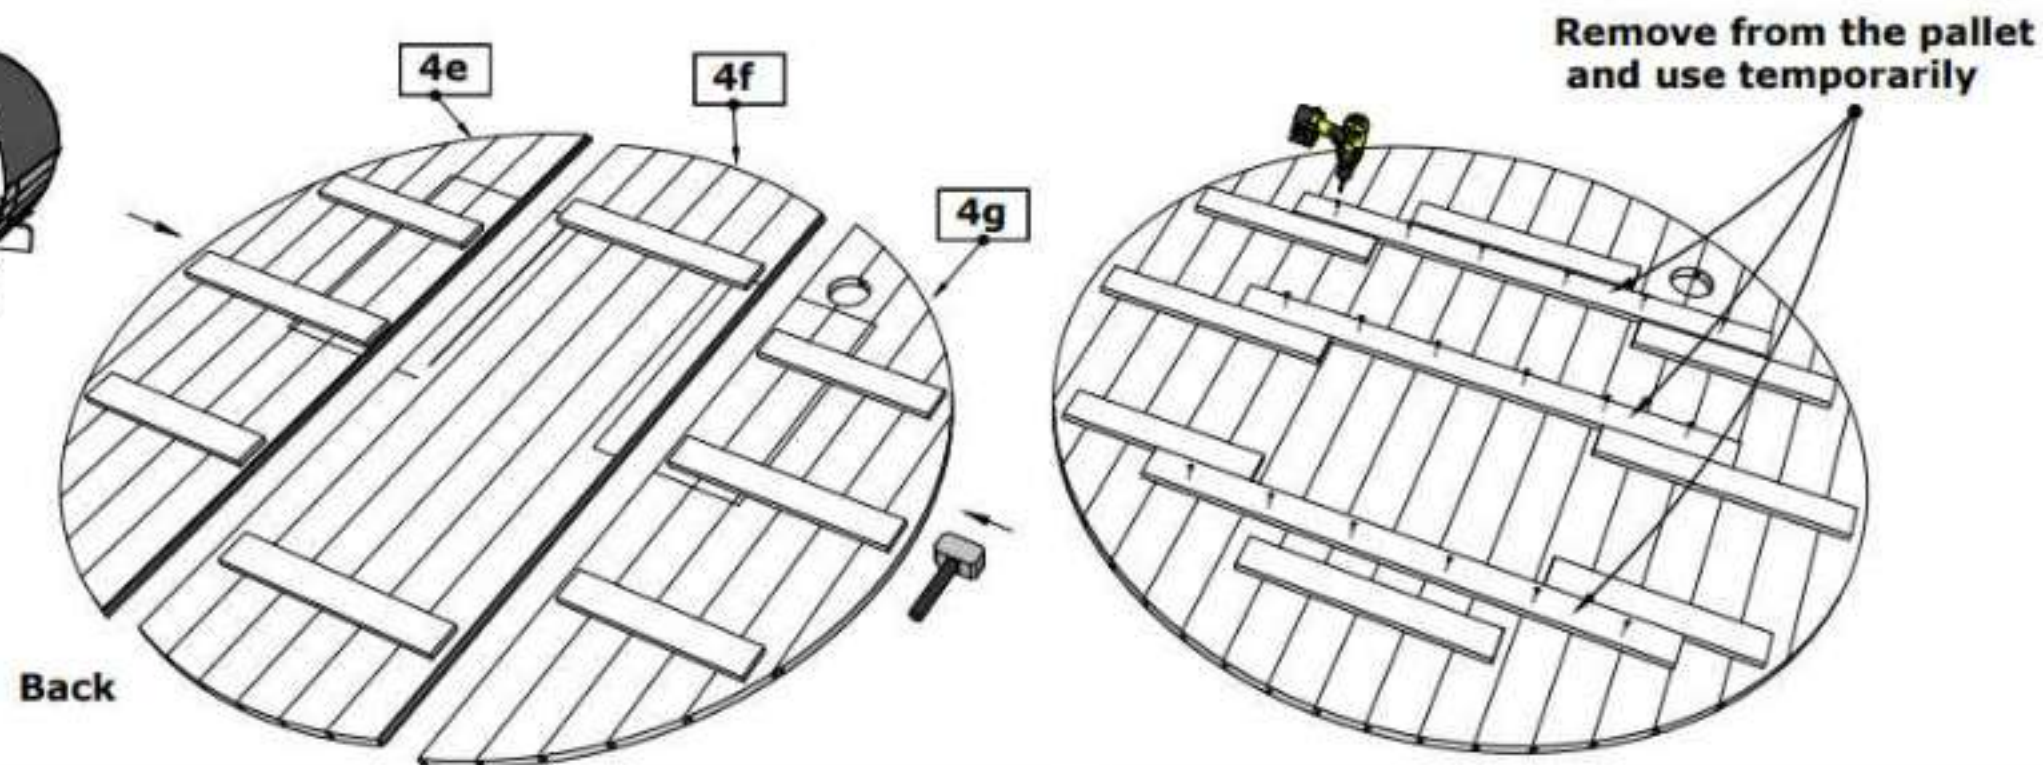

4.


Sauna 400, D205

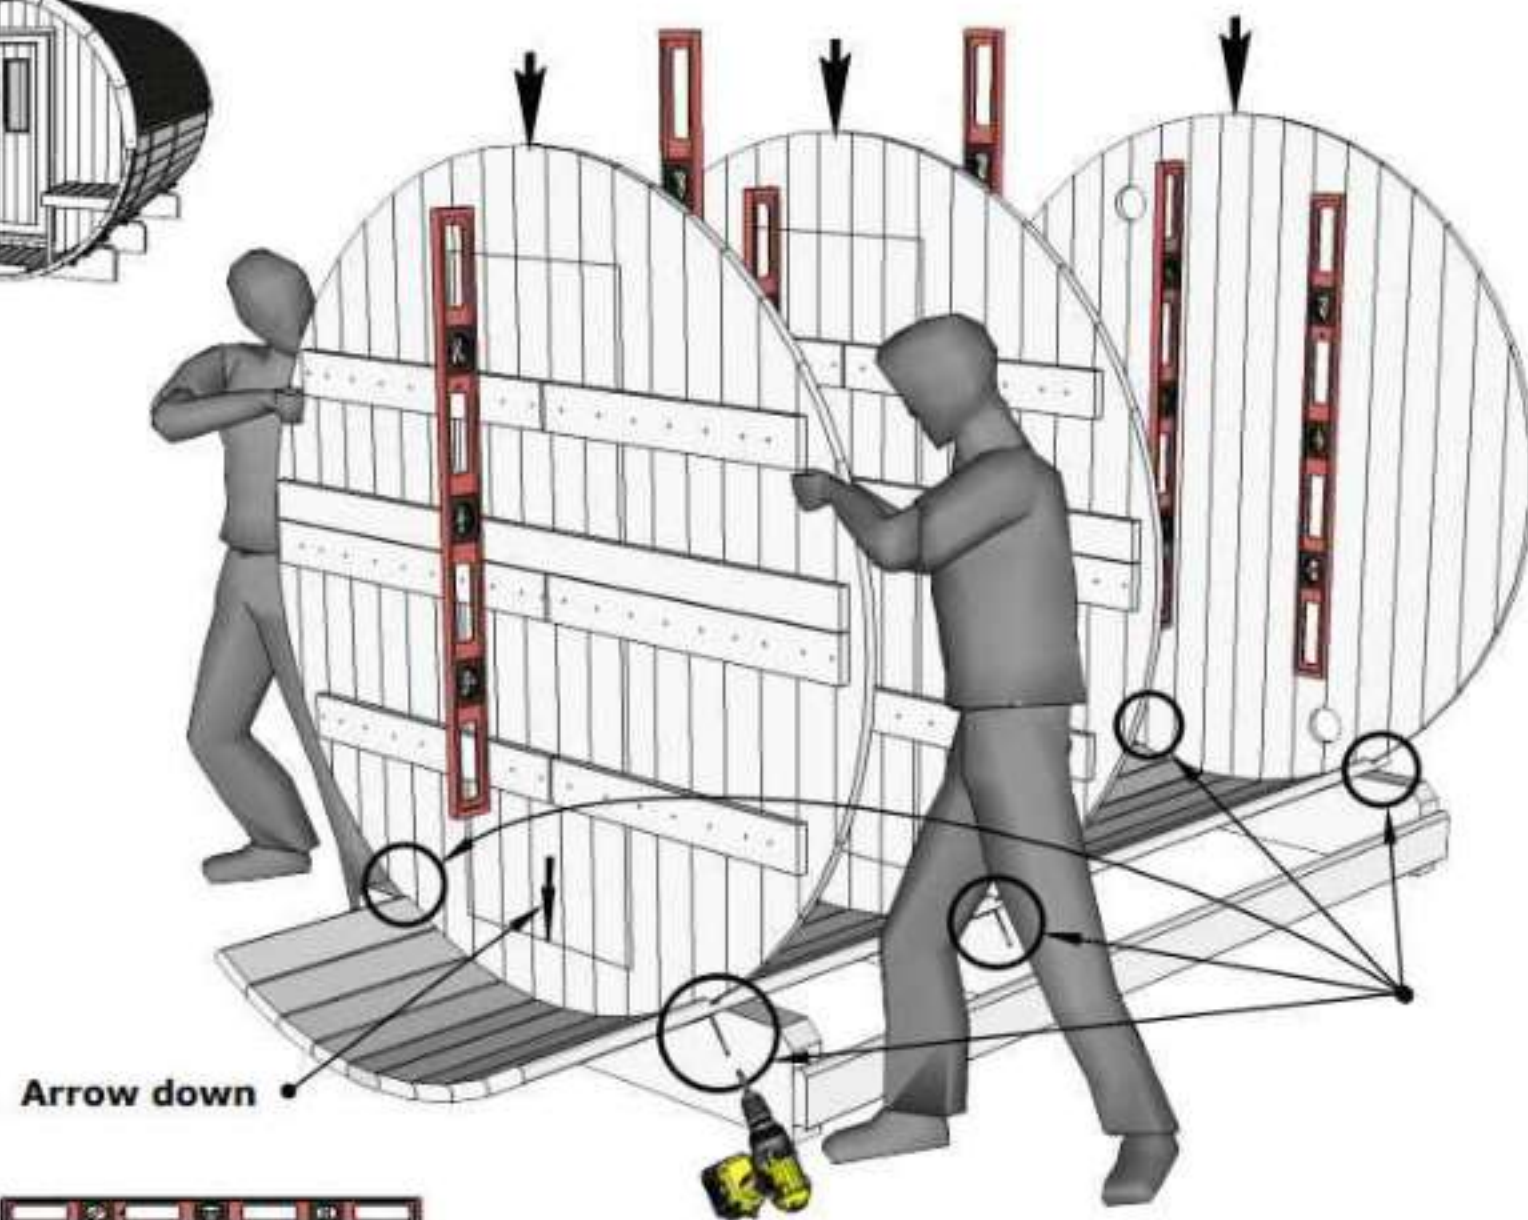

Arrow down




Use waterlevel

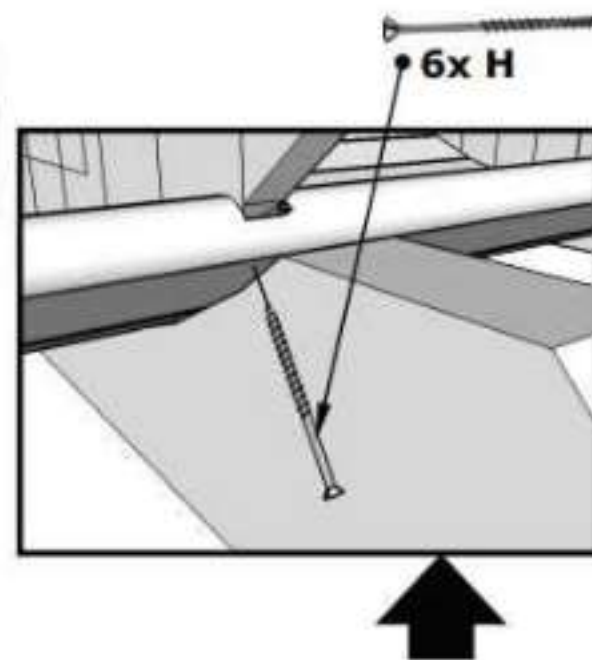


Sauna 400, D205




See page 6A

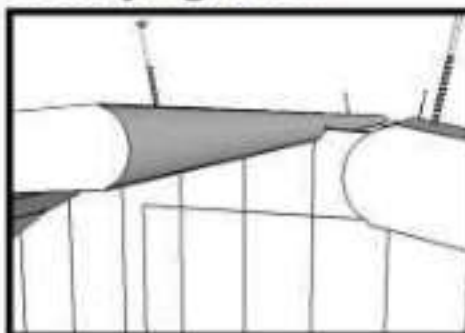

12x DET 3b
11x DET 3a

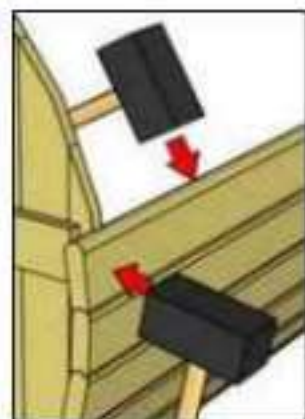

18xH

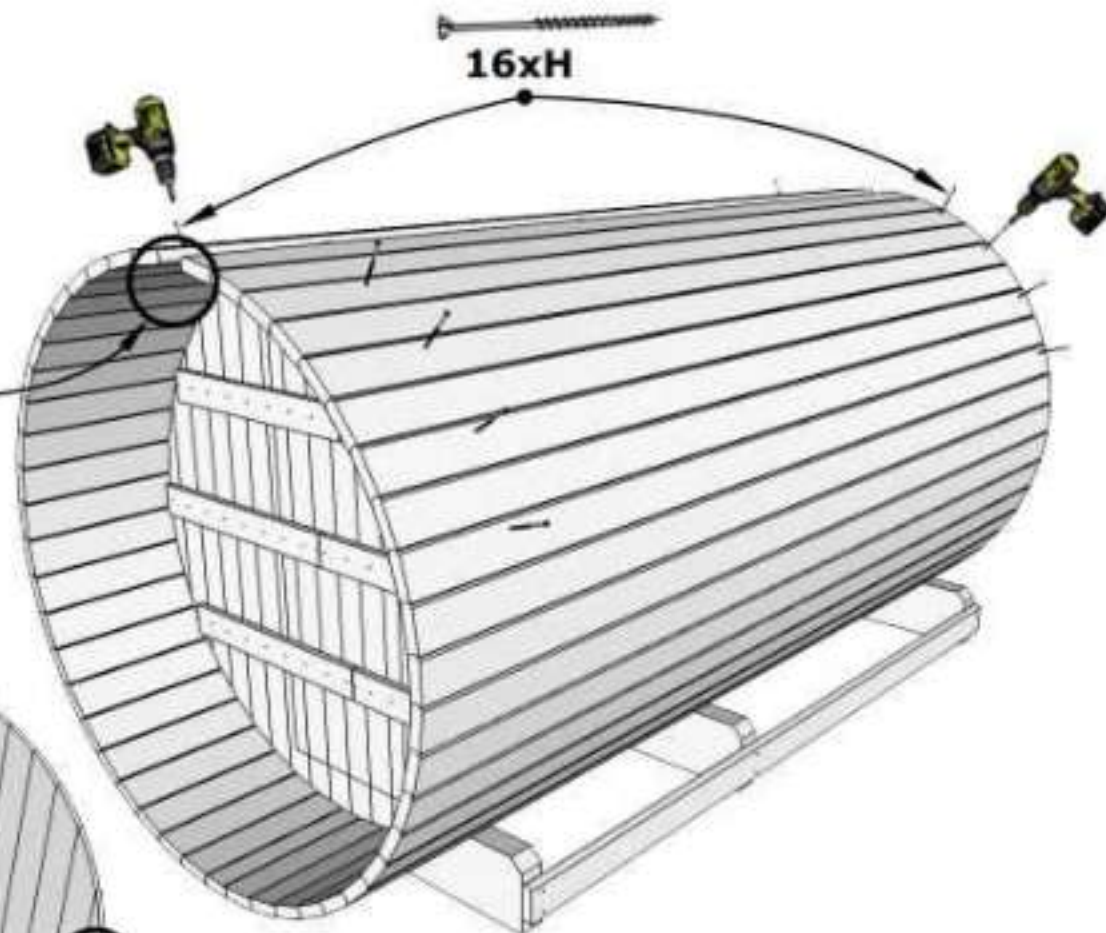

16xH


II

9x DET 3a
9x DET 3b

I







18xH

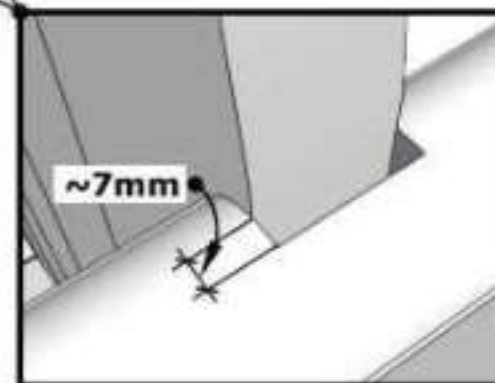


~7mm

6.



Sauna 400, D205

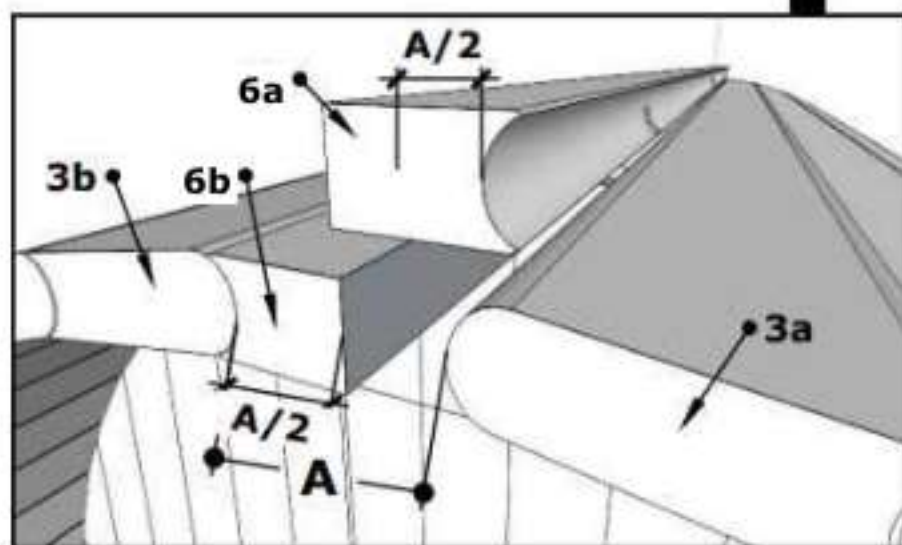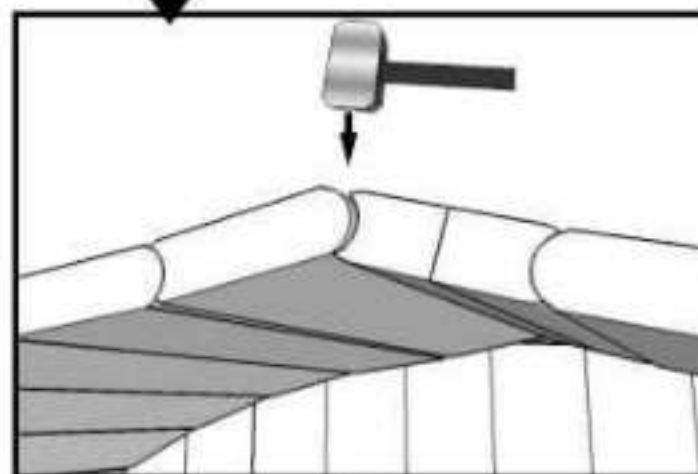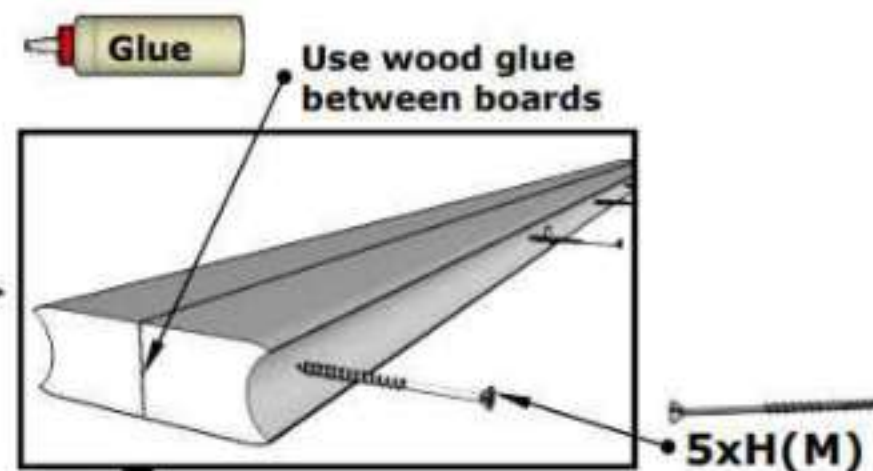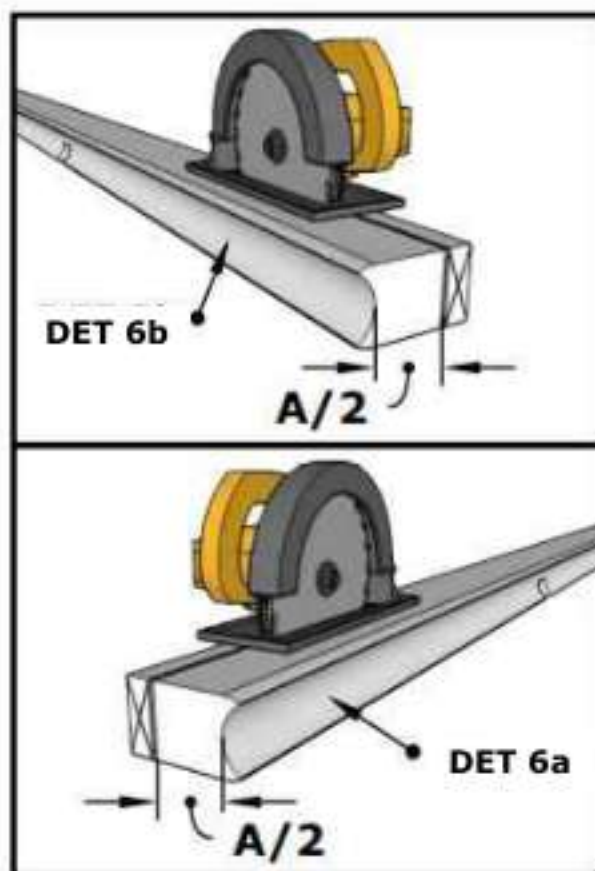


6A.

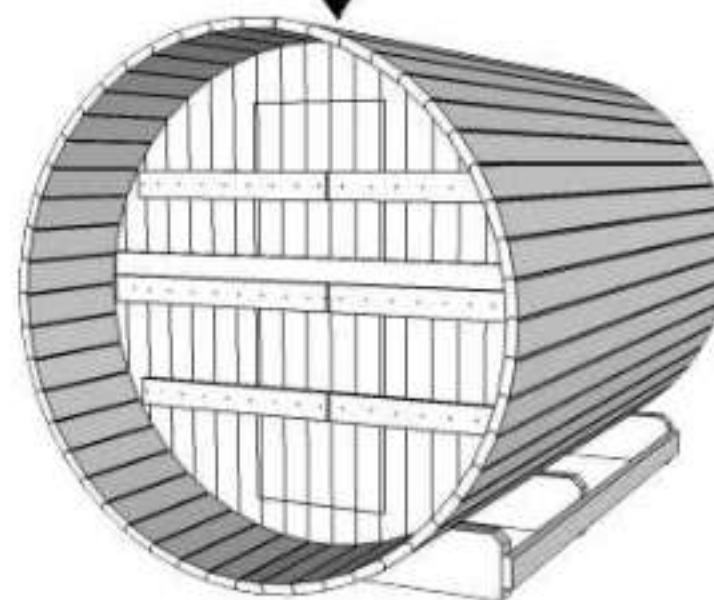

Sauna 400, D205

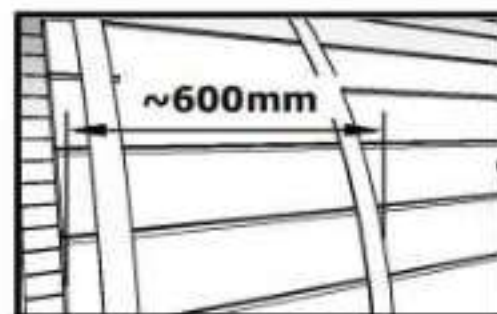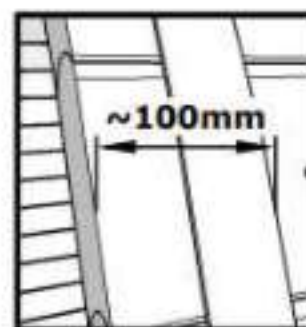


2x DET B

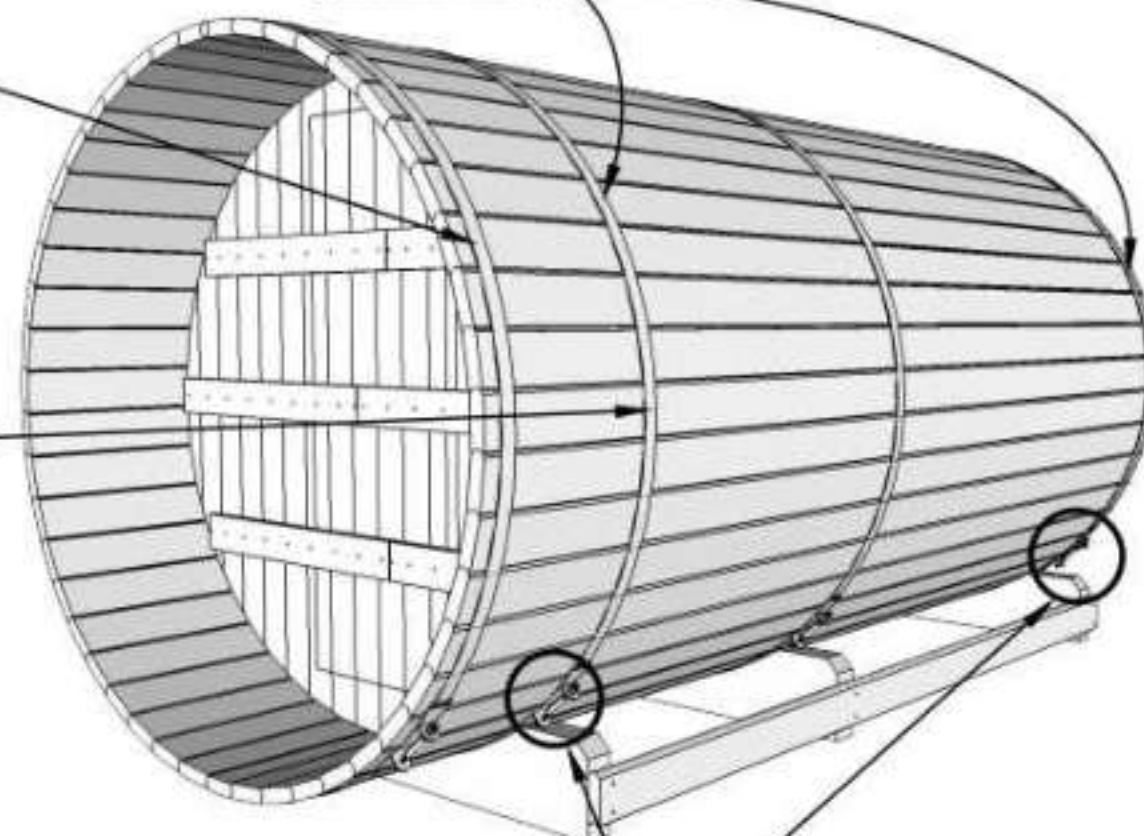


Remove screws

2x DET B

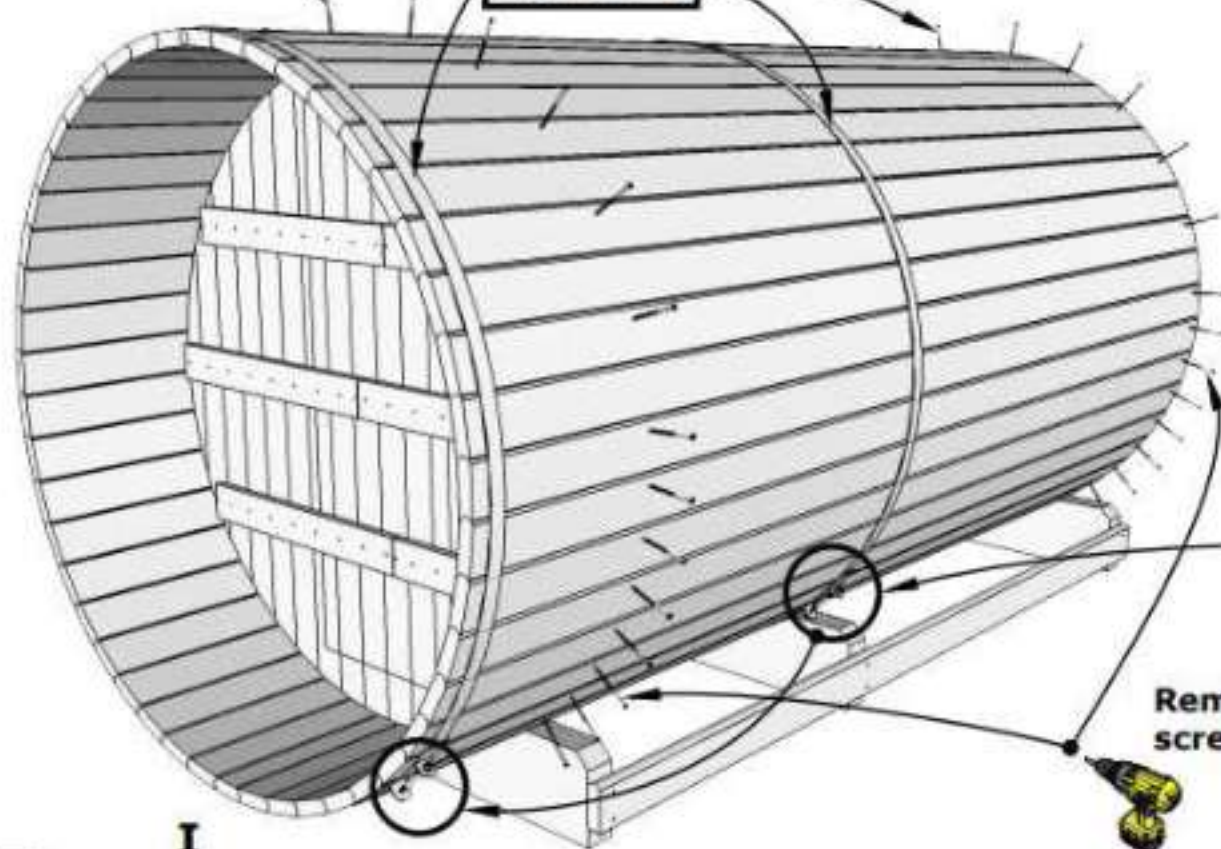

Remove screws and use them on further sauna installation.

Remove screws

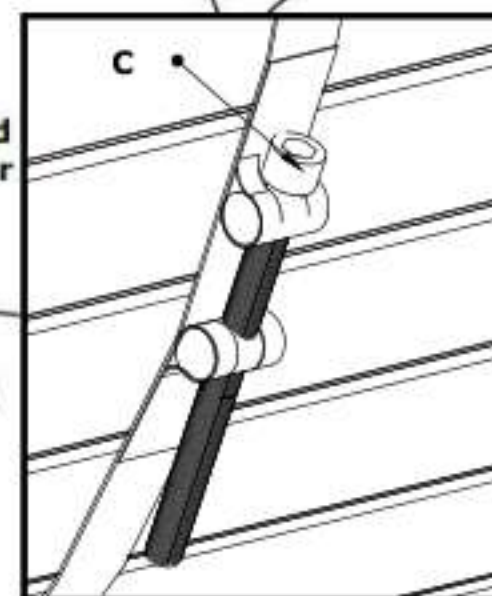


During assembly and retightening the threaded rods, use oil (Würth HPS 1400 or similar) to avoid "cold welding" and it is also easier tightening.

7.


Sauna 400, D205




DET 8

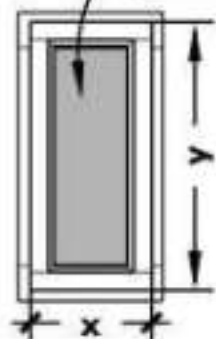


Mark windows openings.

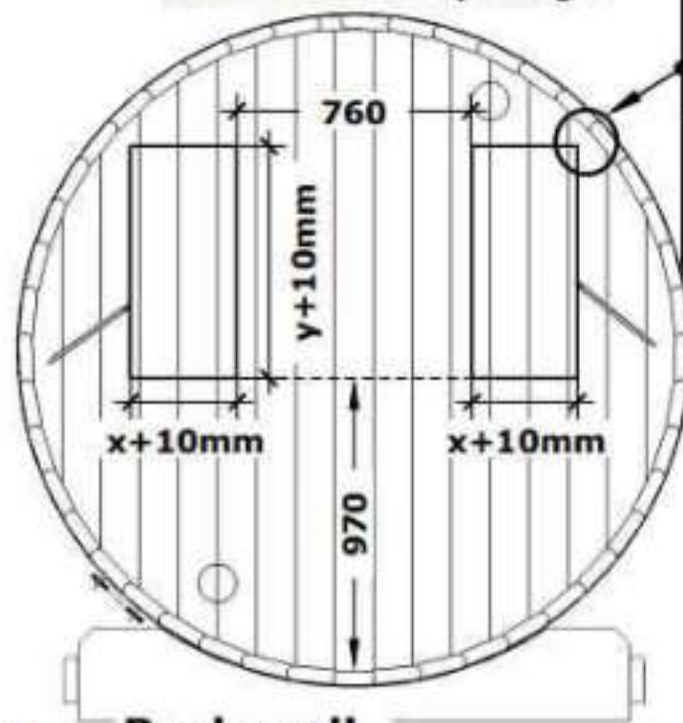


III Back wall

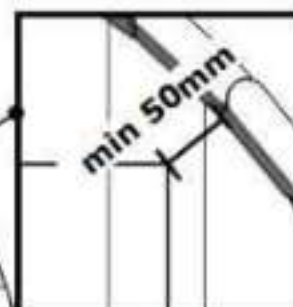


IV

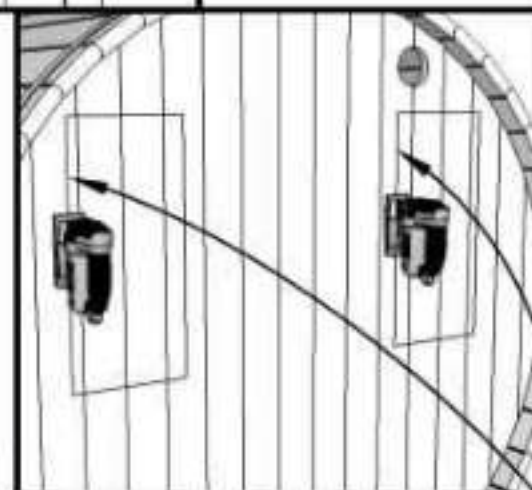


Cut out, follow the guidelines

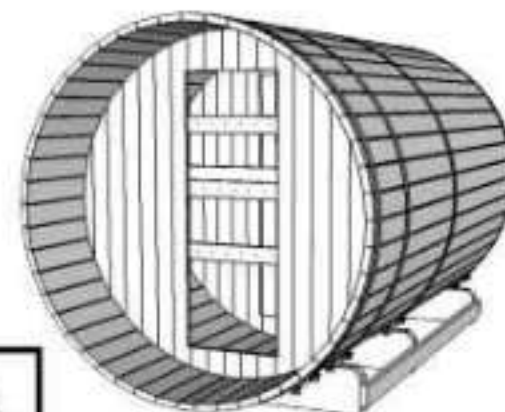

V

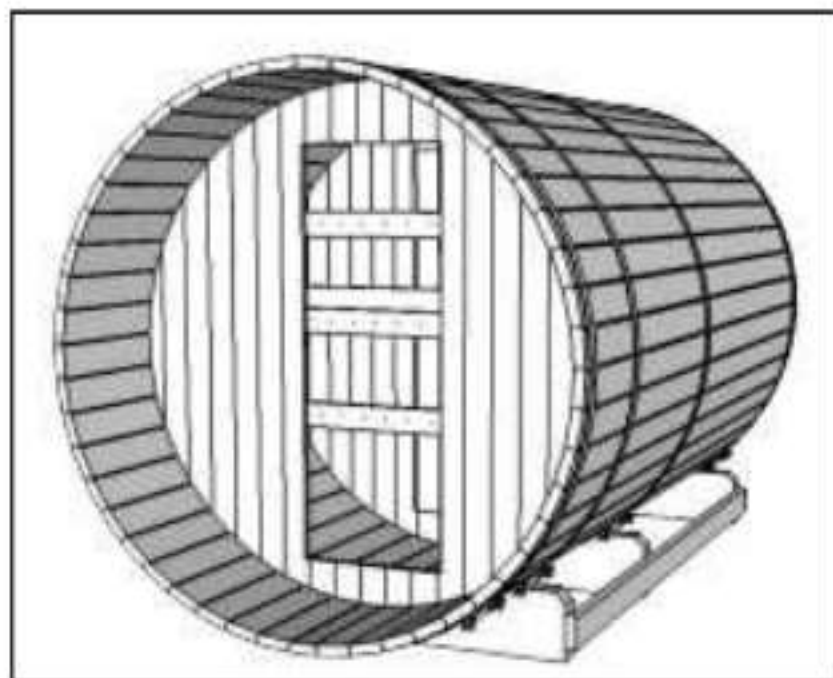

8.^I

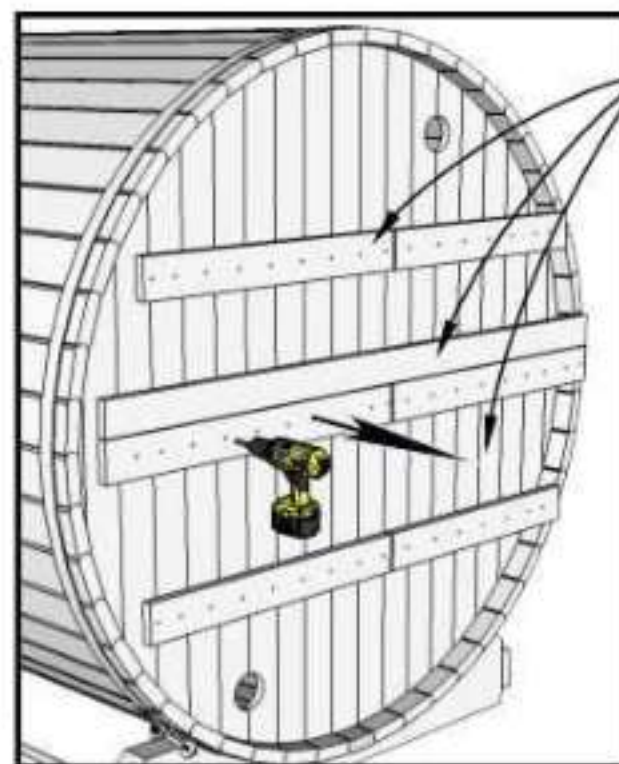

Remove all brackets

Sauna 400, D205




Use waterlevel for
windows installation


NB! Place windows
from inside.

I

2x DET 8

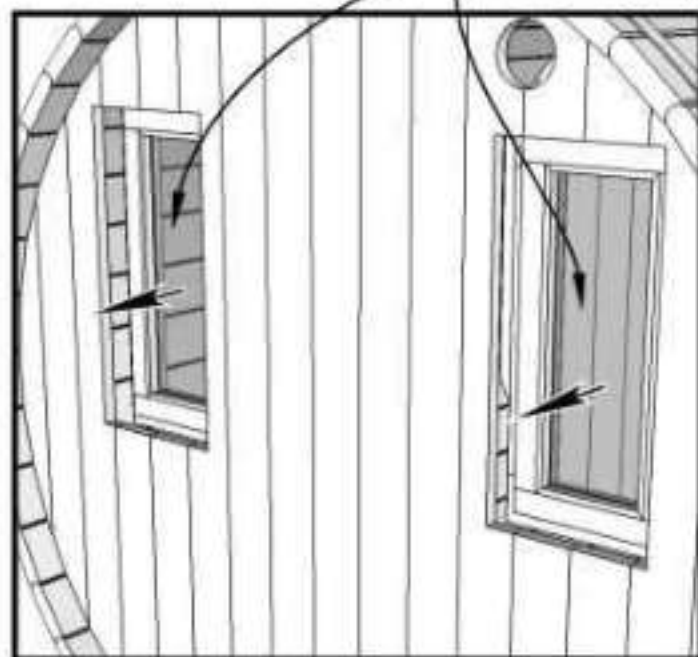


Horizontally fix screws
in every board.

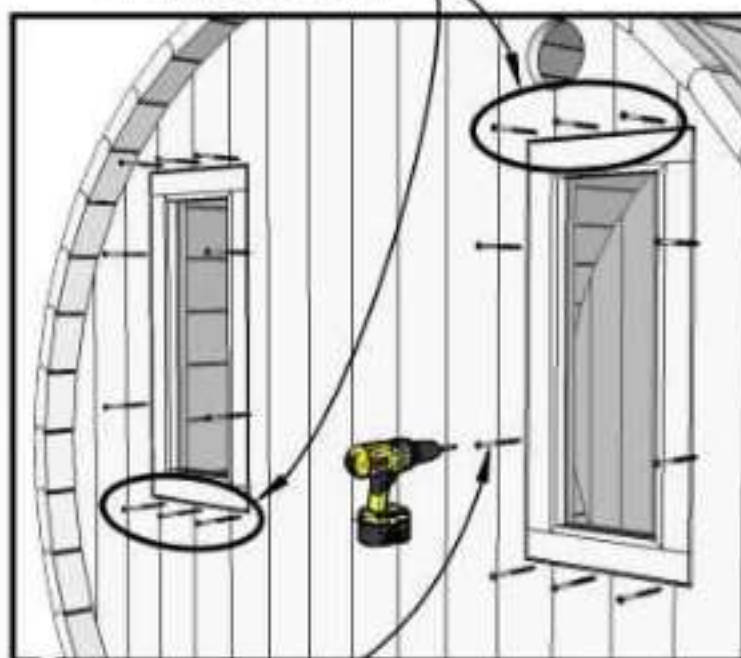


20x J




4x DET 8a
4x DET 8b

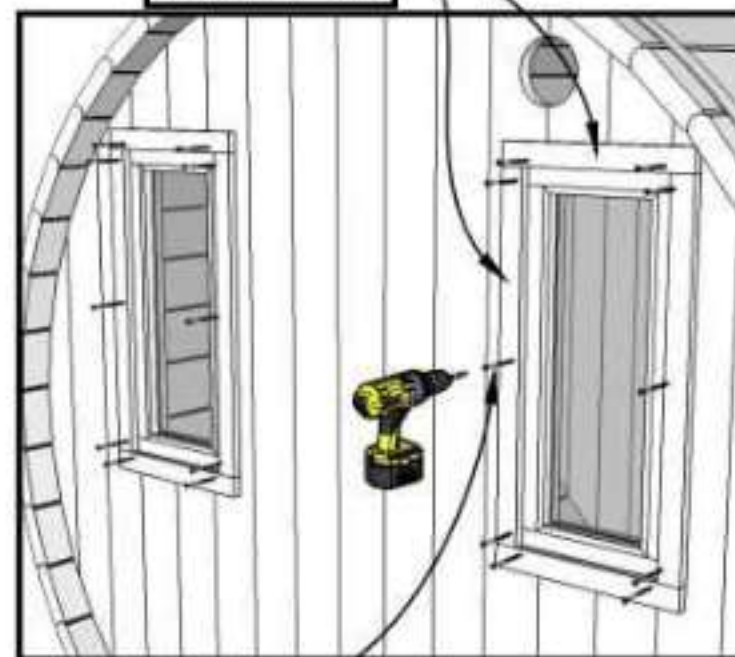



20x J



Sauna 400, D205

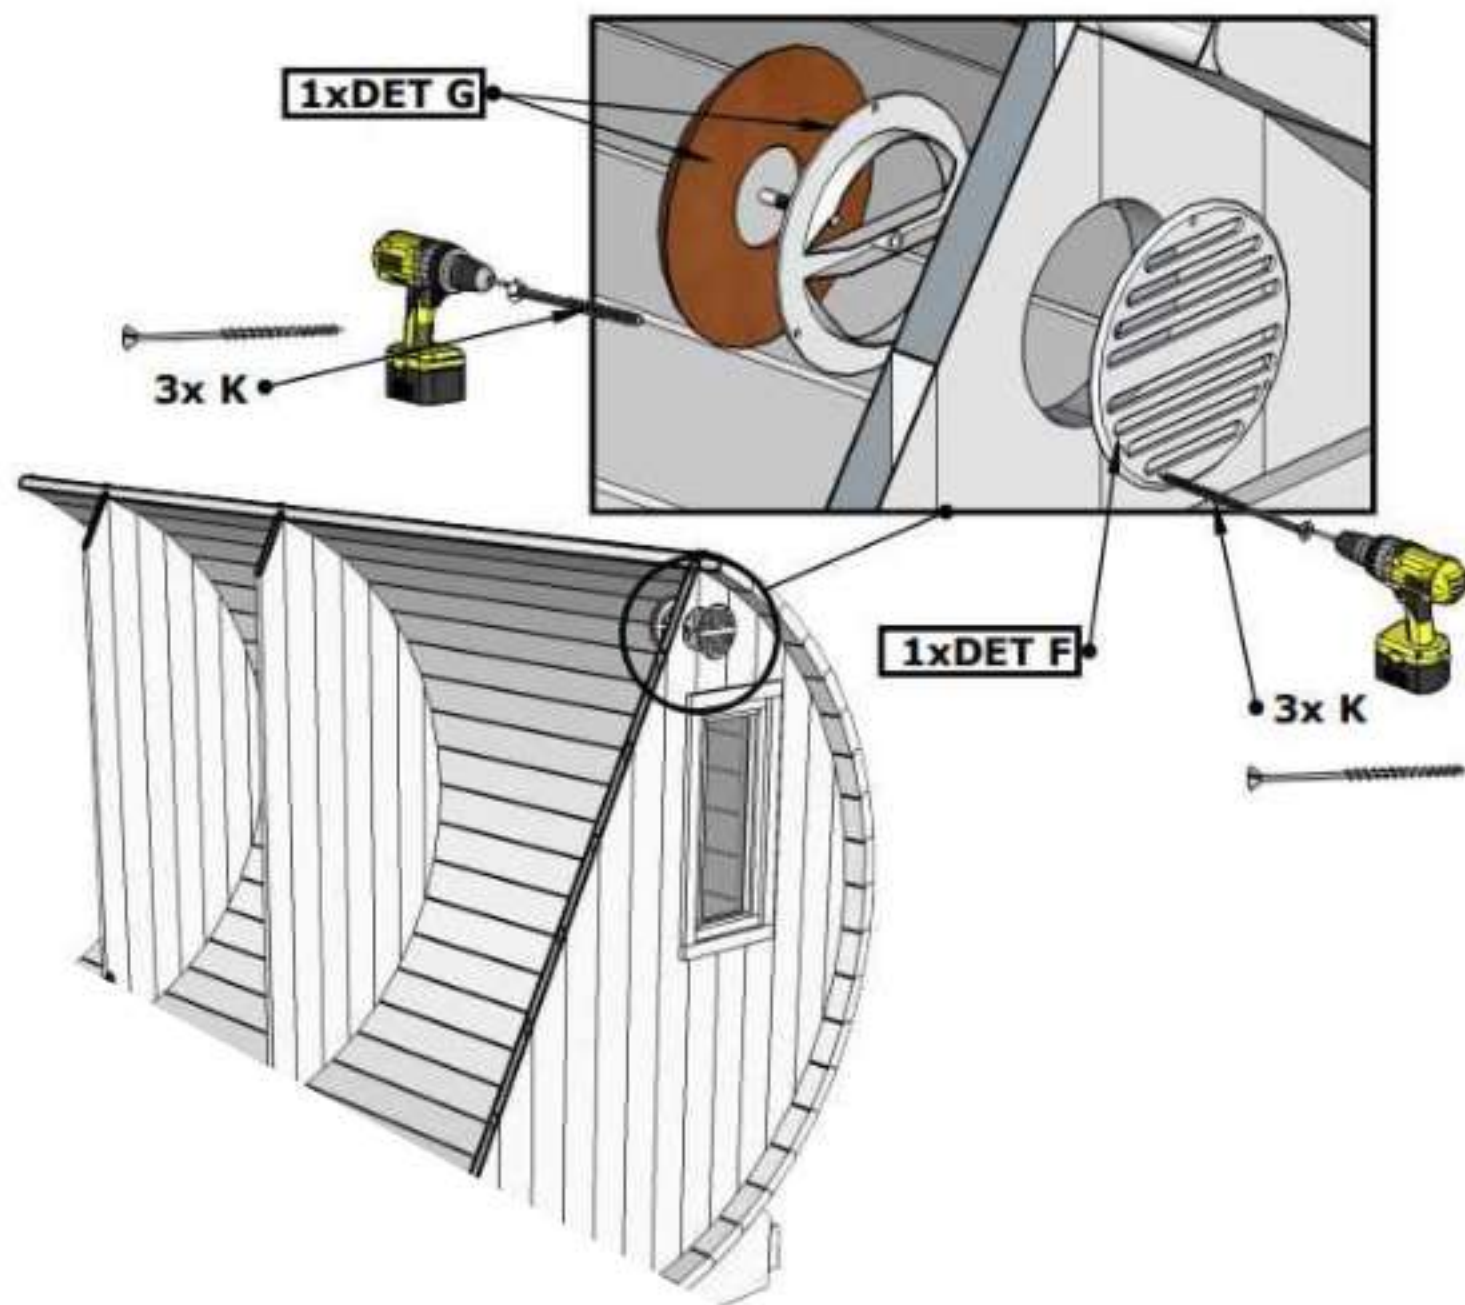


Sauna 400, D205

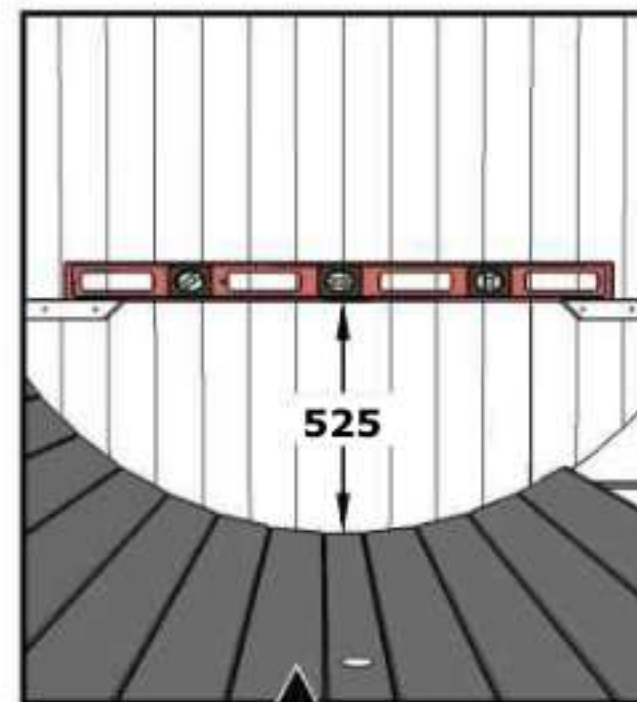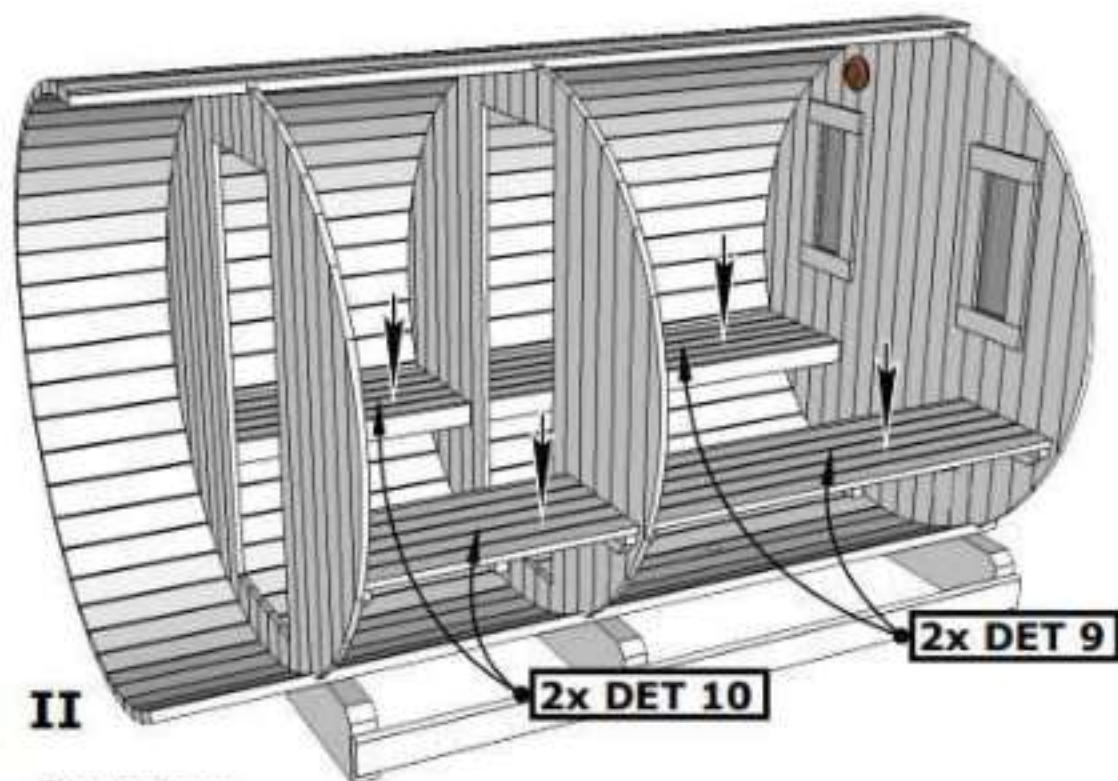


11. I

Sauna 400, D205

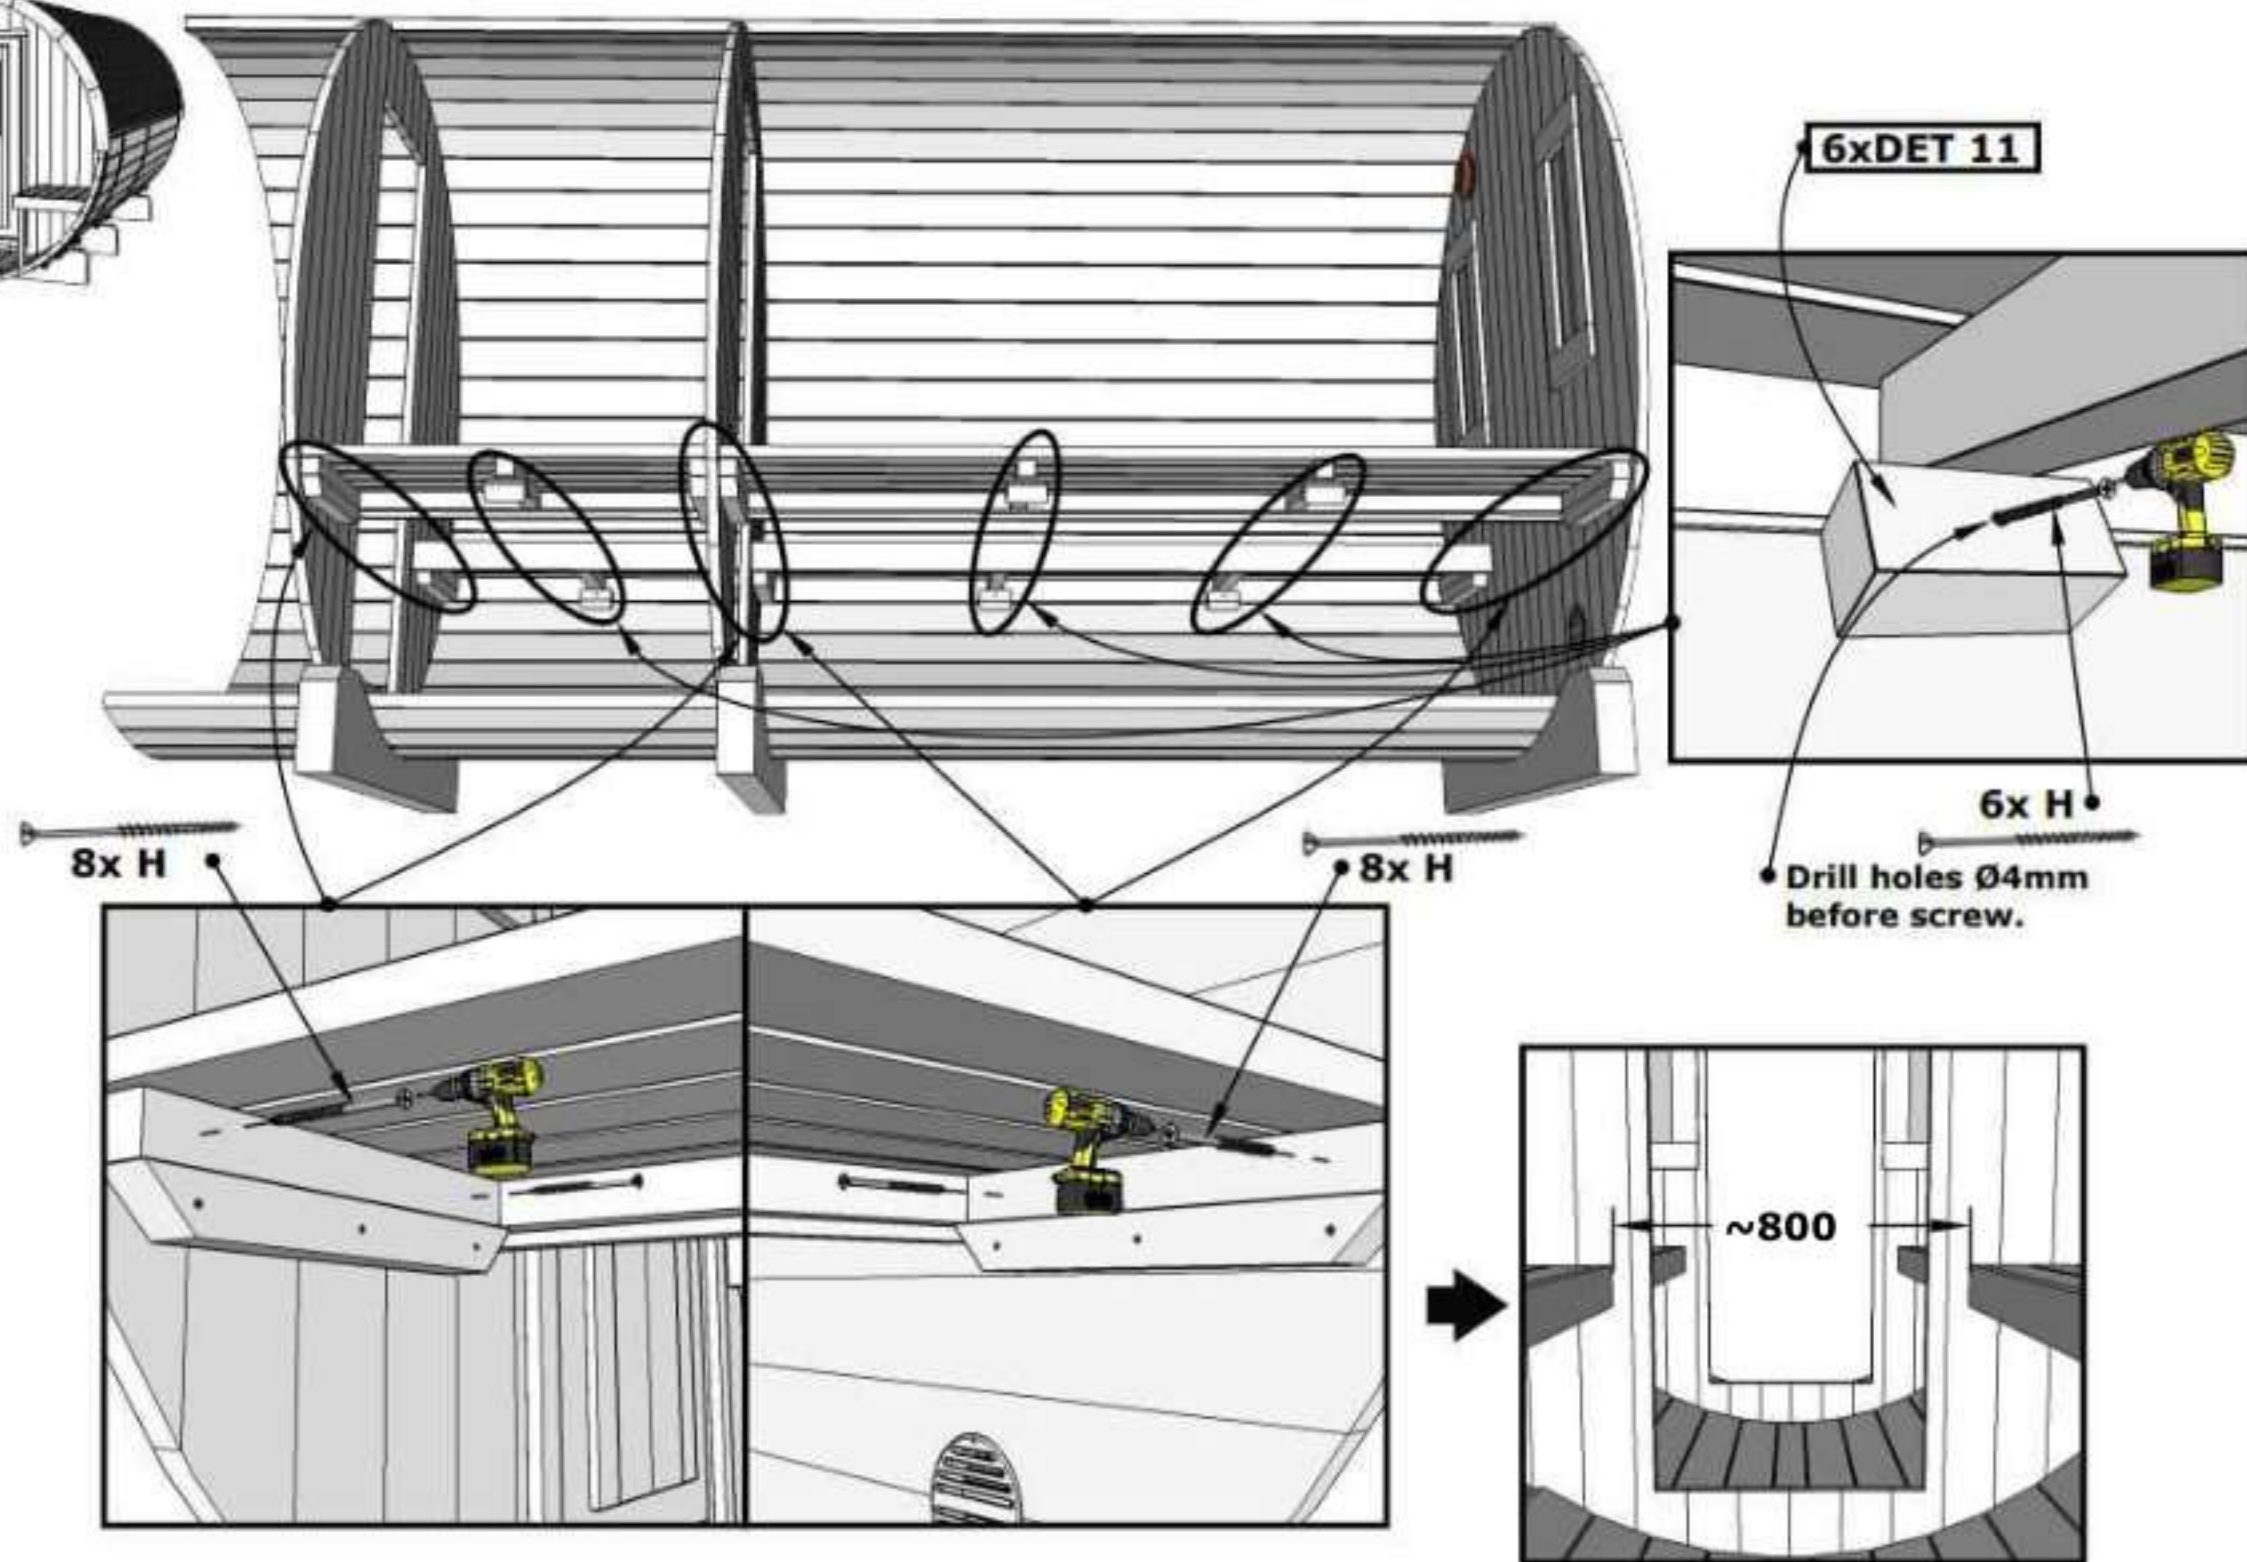

Sauna 400, D205

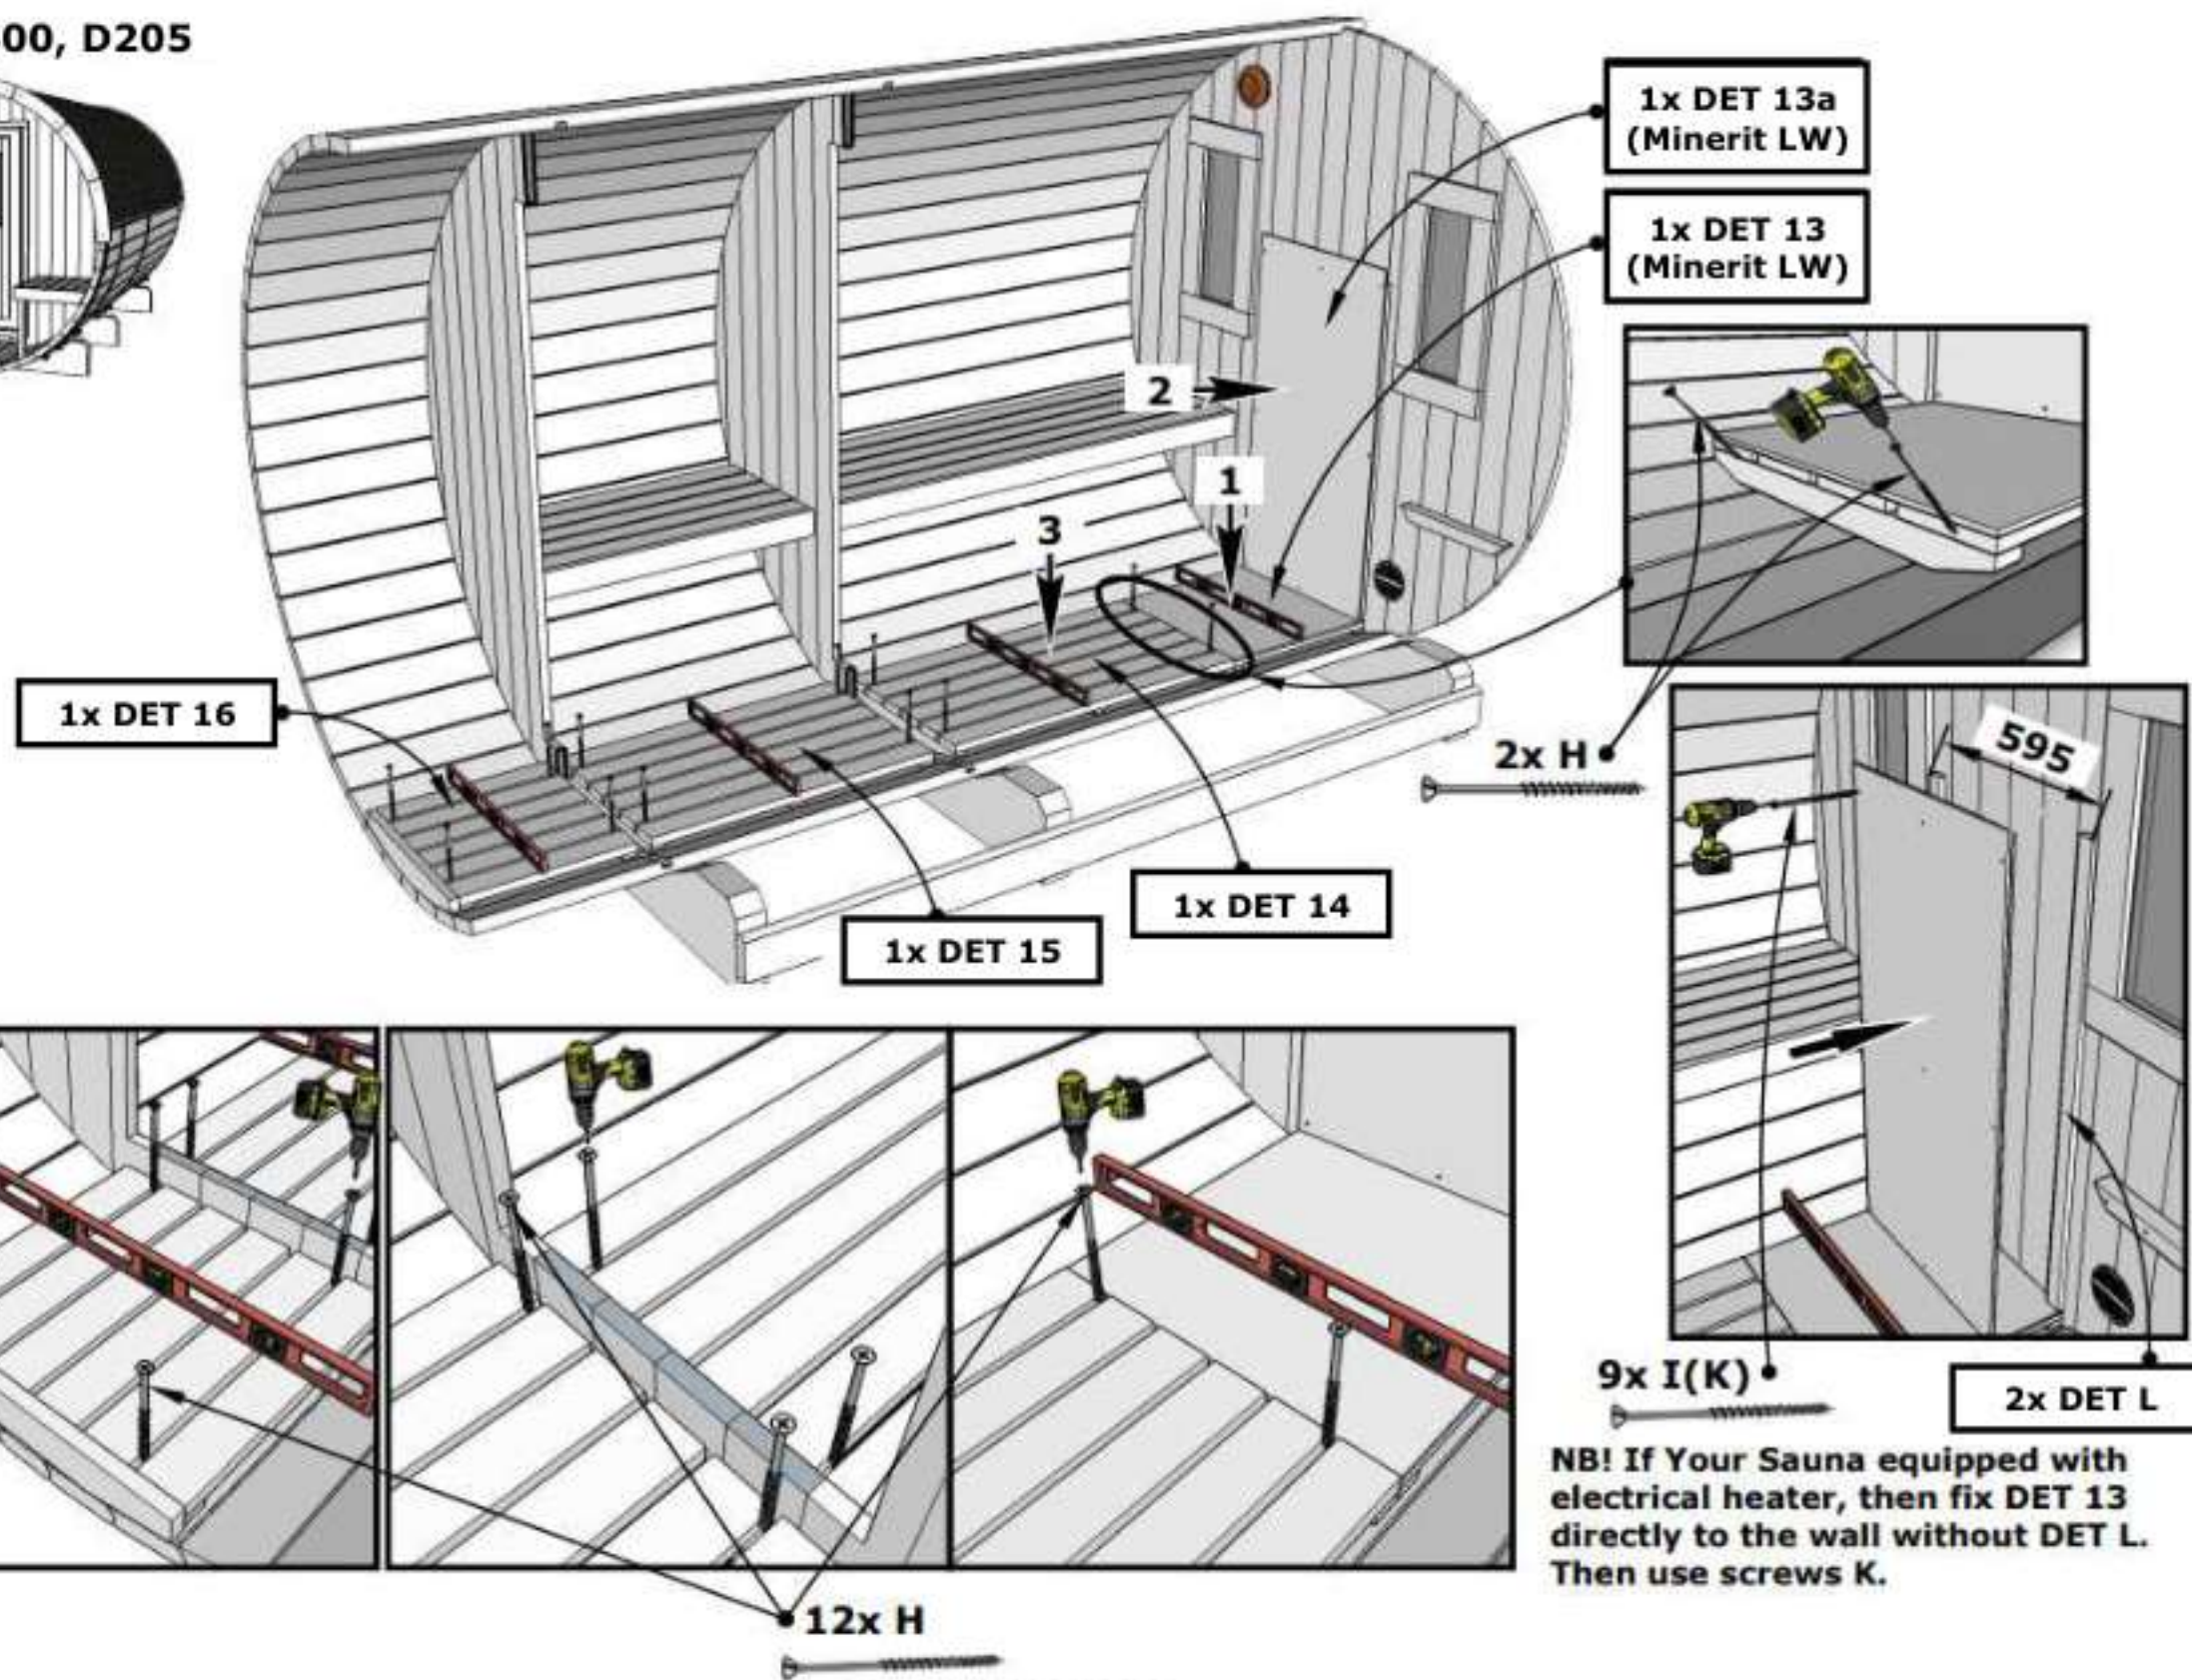


13.

Sauna 400, D205



I

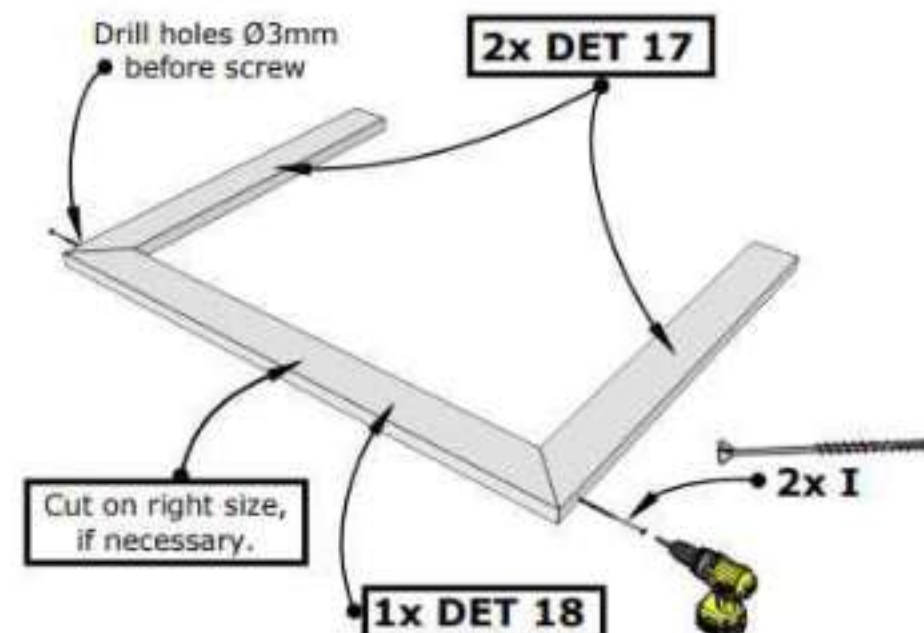

II

NB: Place sauna heater first

Drill holes Ø4mm before screws







III

14.

Sauna 400, D205



Use waterlevel!
NB! Place doors
from inside!

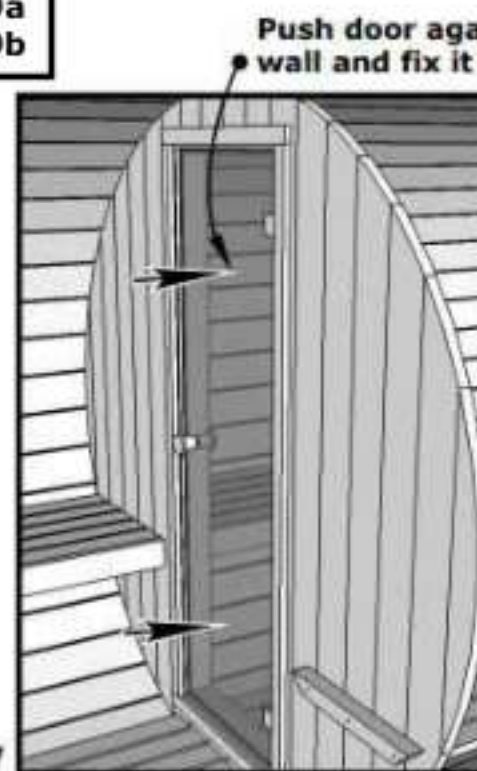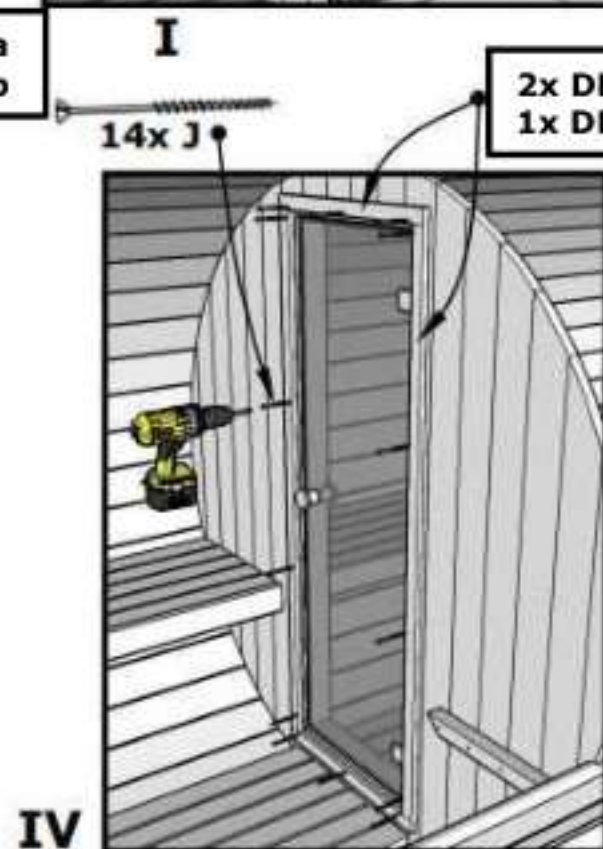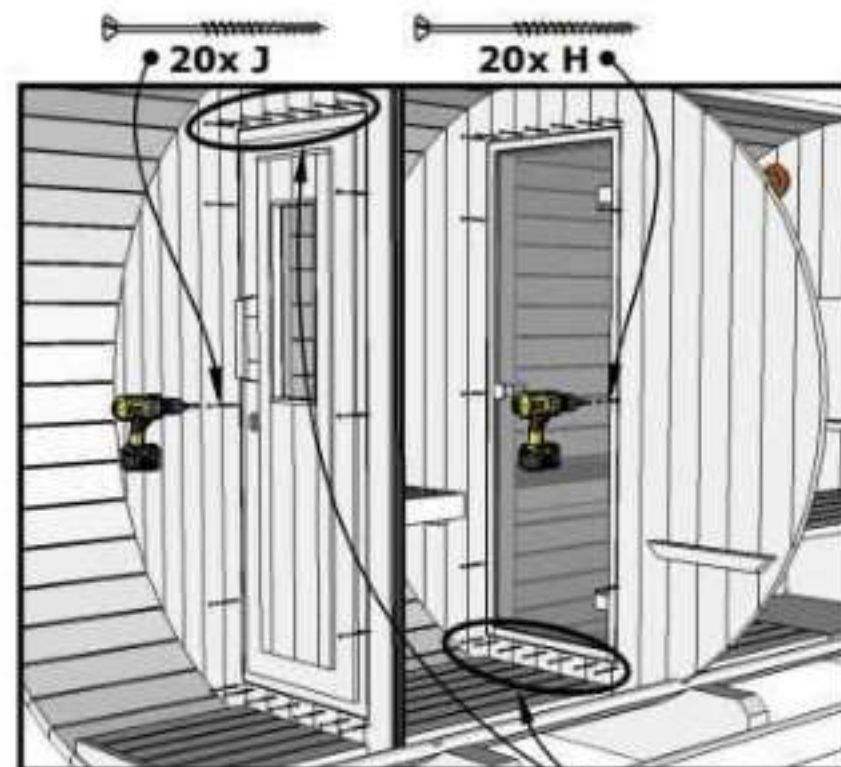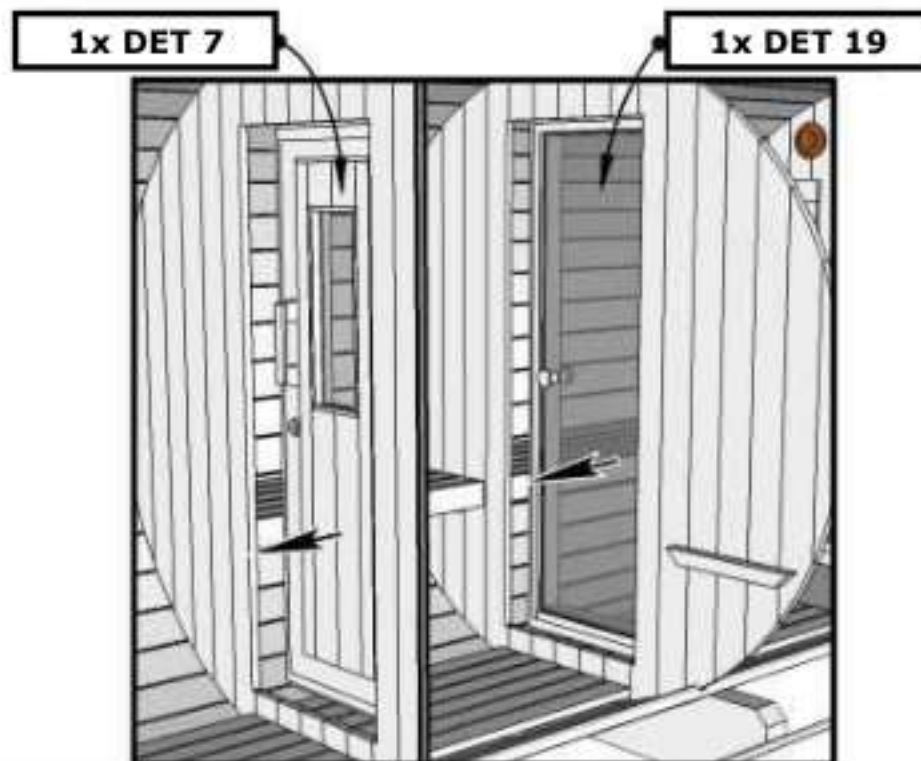





Horizontally fix screws
in every board.

15. III


Sauna 400, D205




Drill holes Ø4mm
before screw.

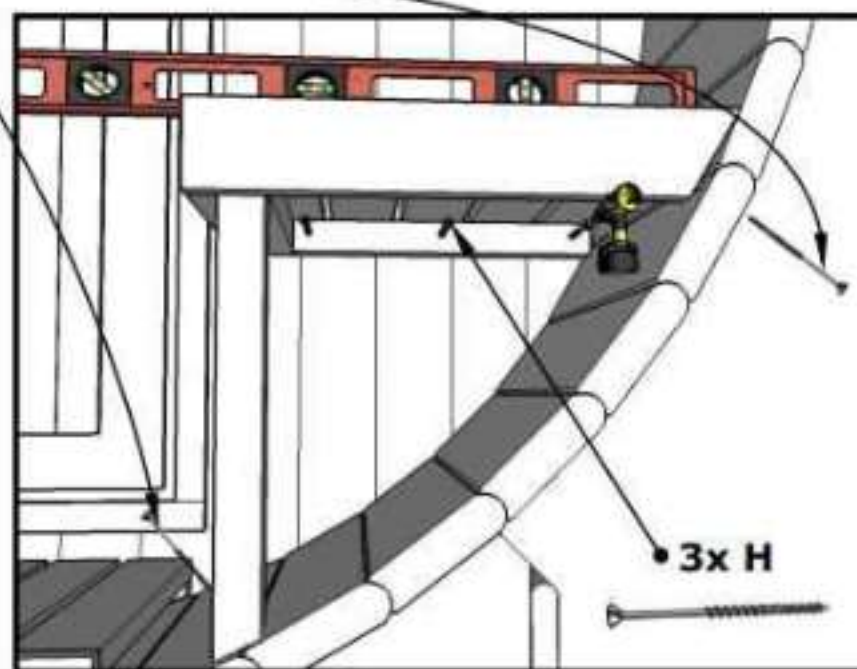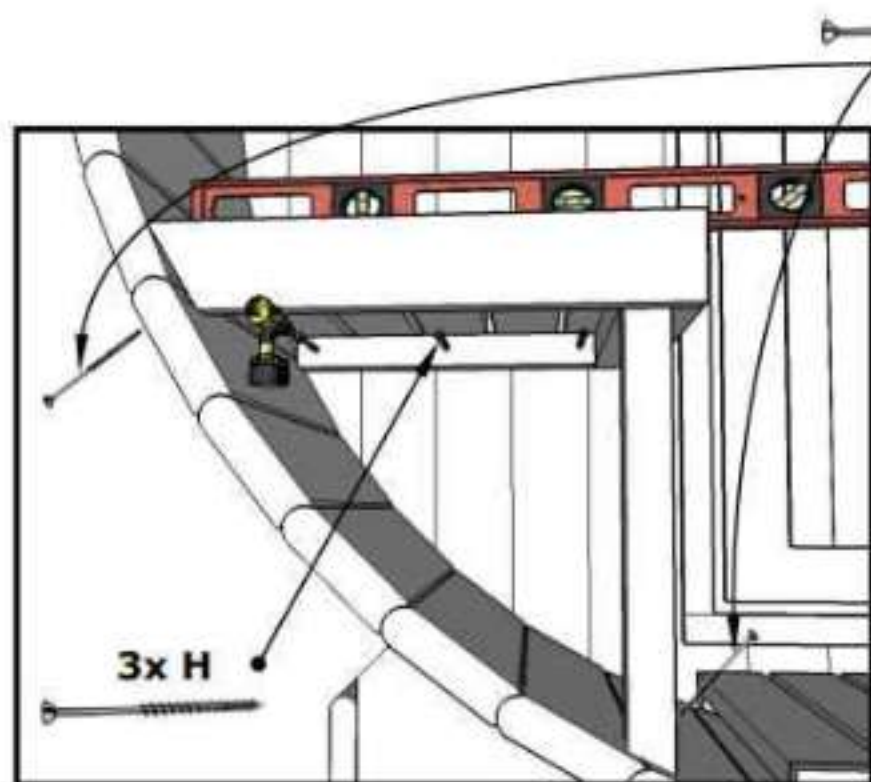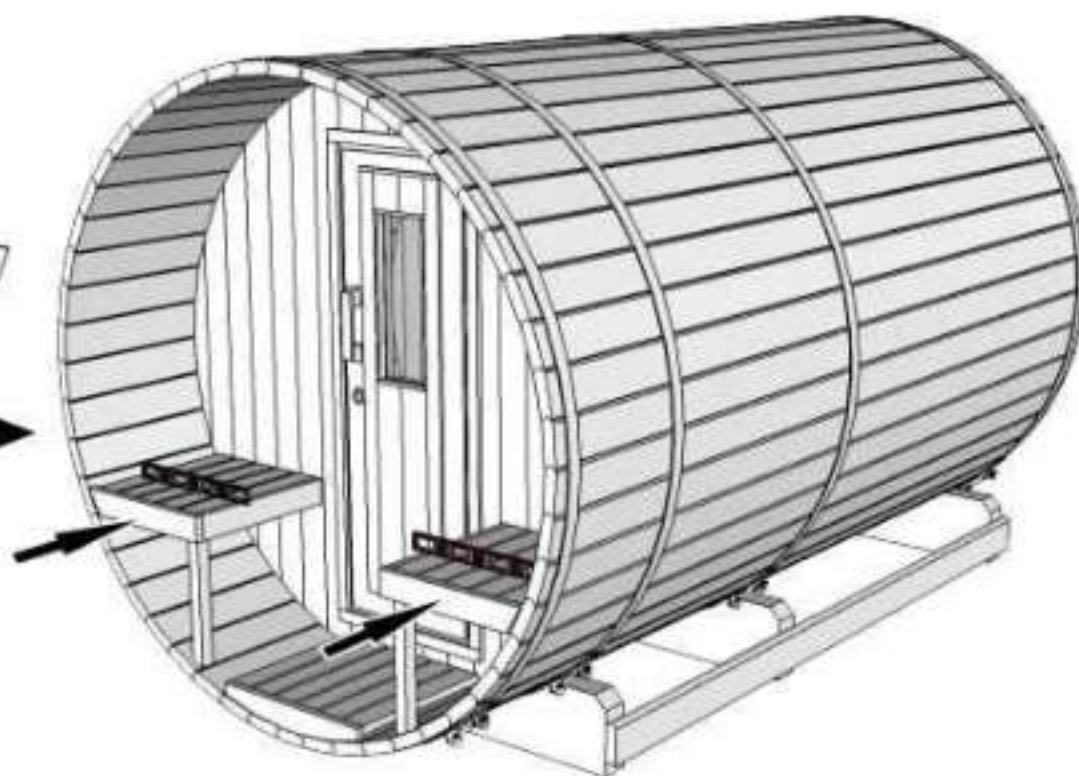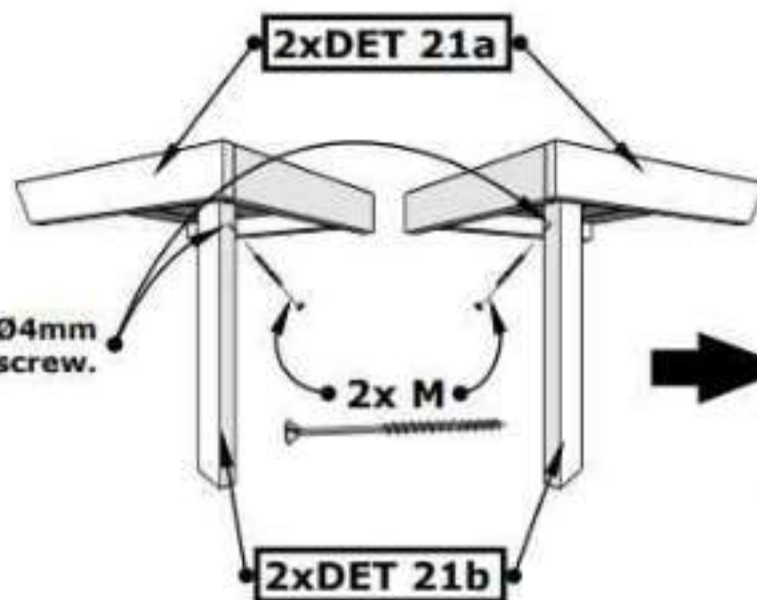

Sauna 400, D205

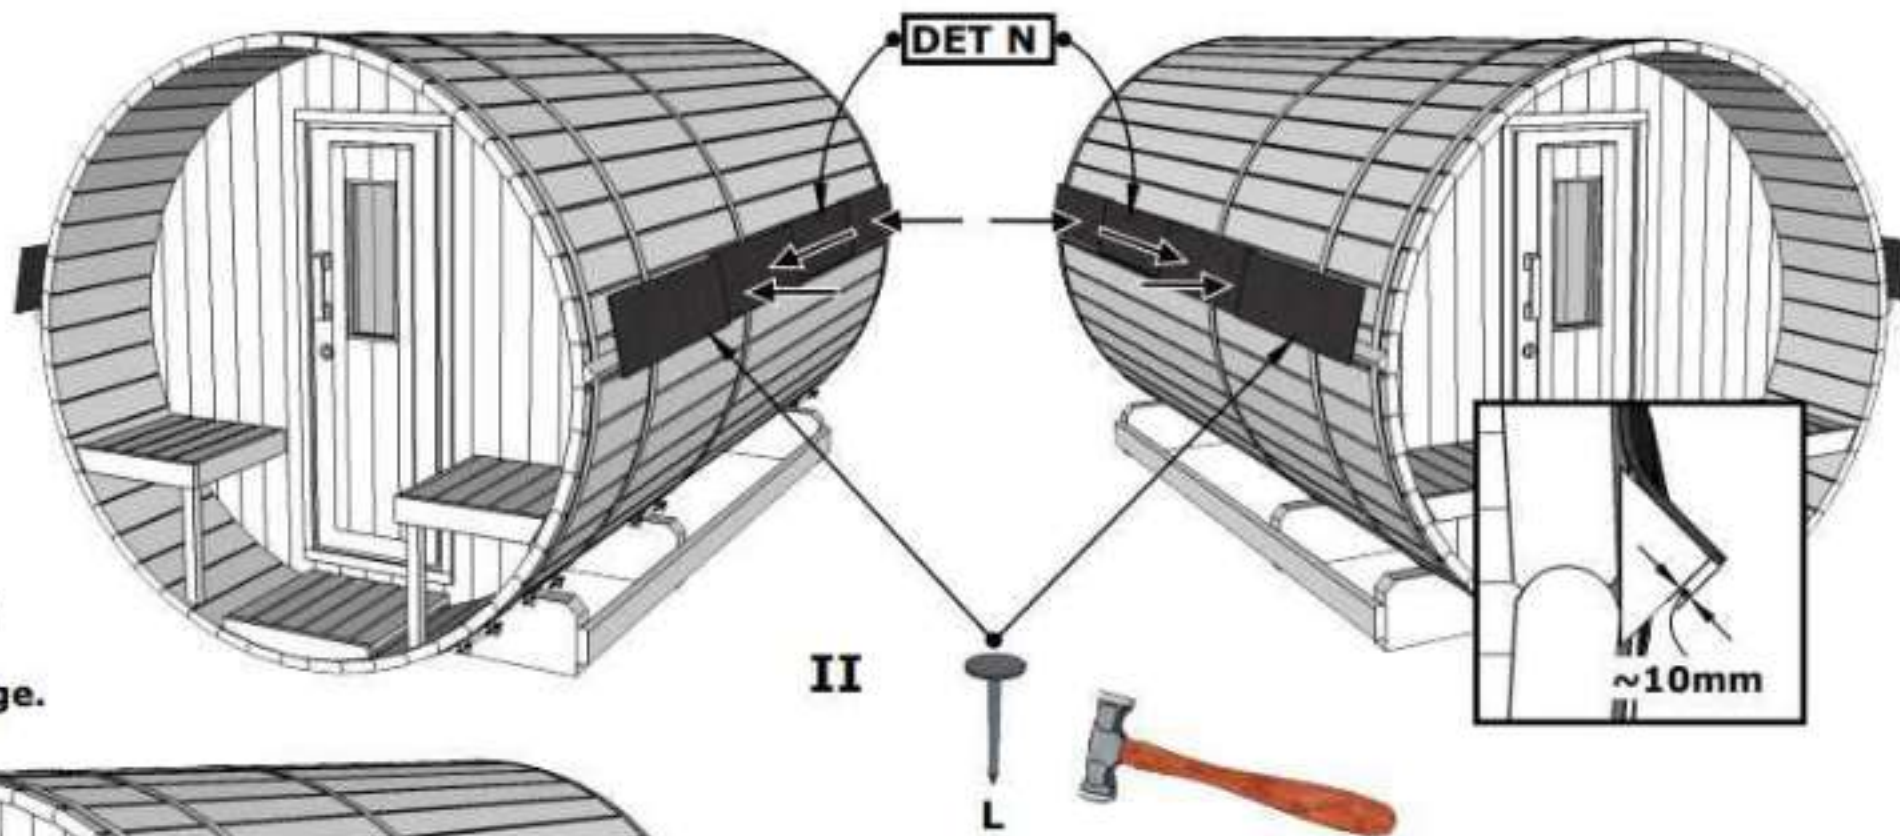

NB! See also shingles installation manual inside shingles package.

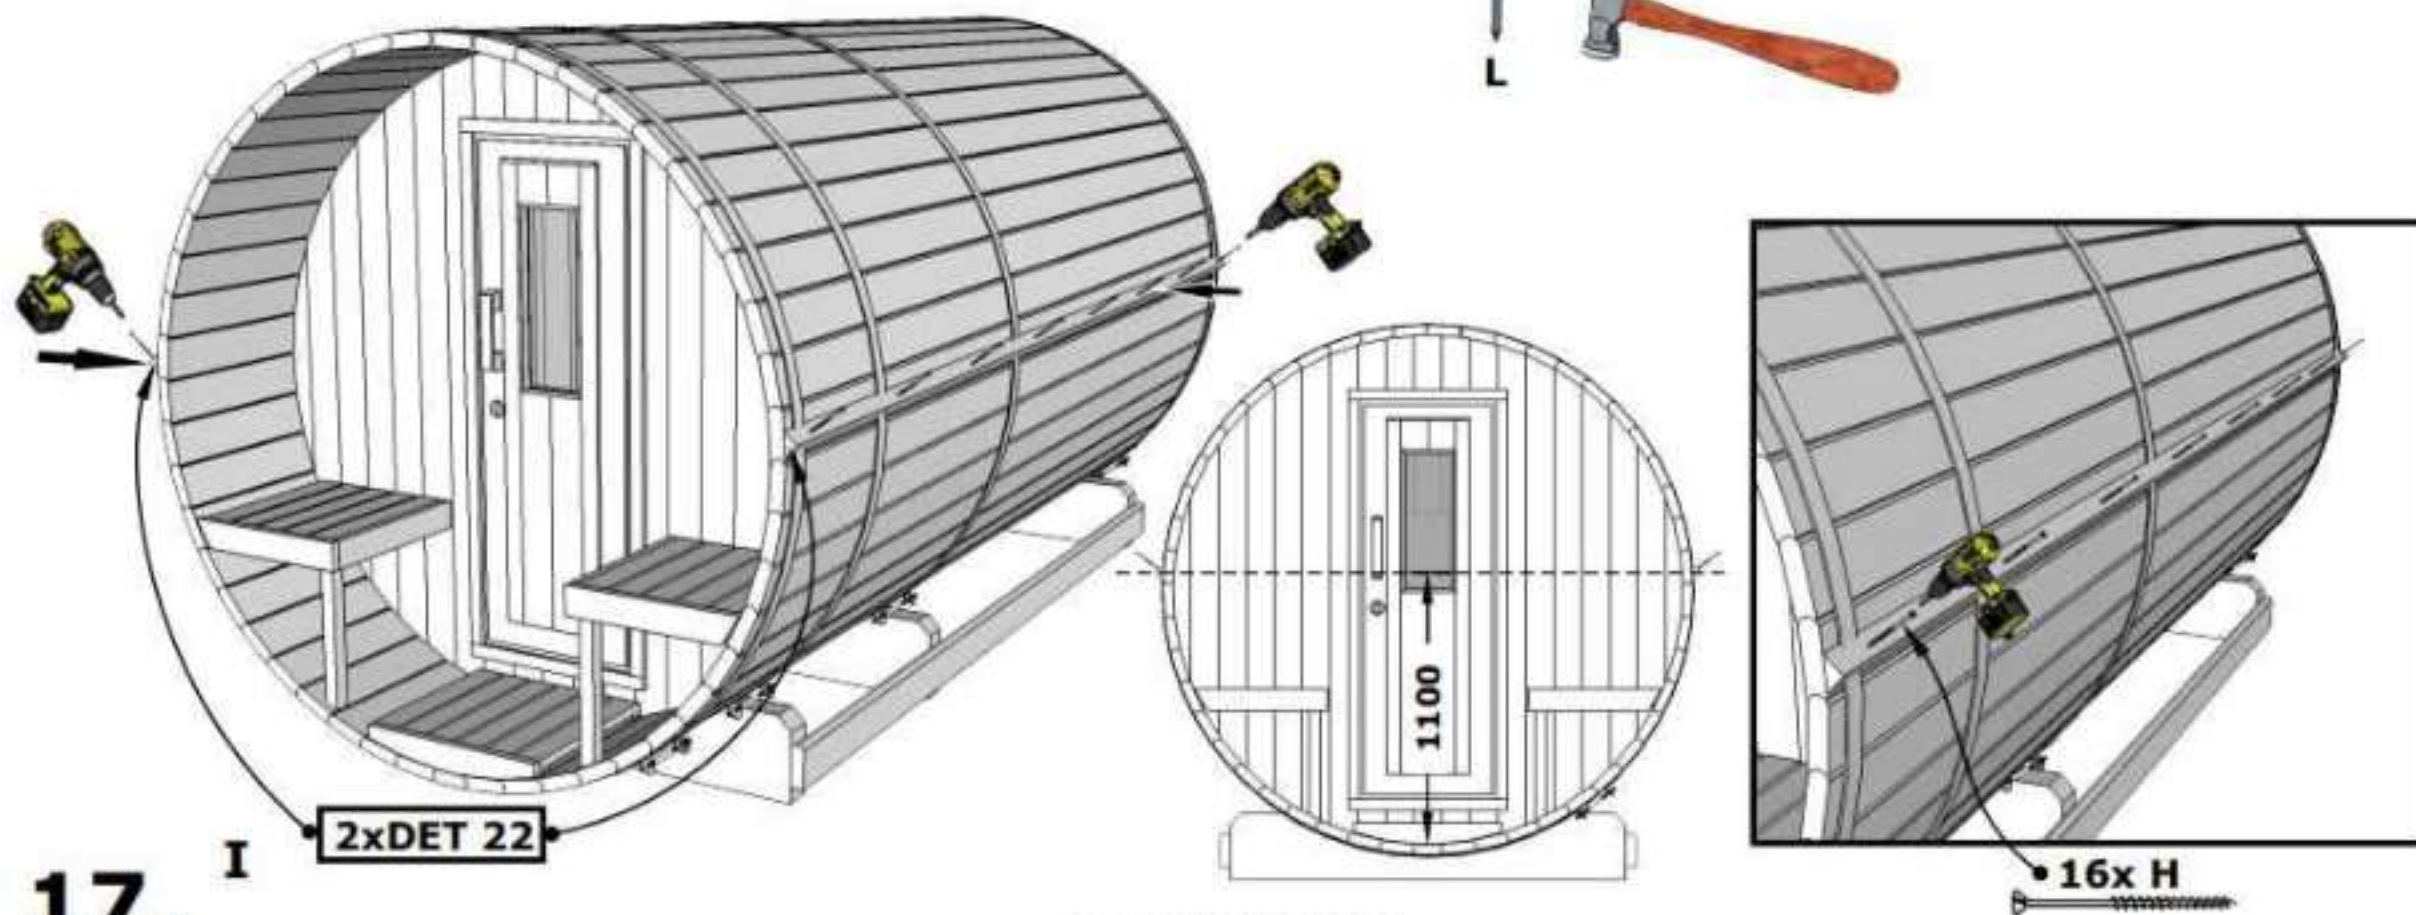

17.


Sauna 400, D205




NB! See also shingles installation manual inside shingles package.



III

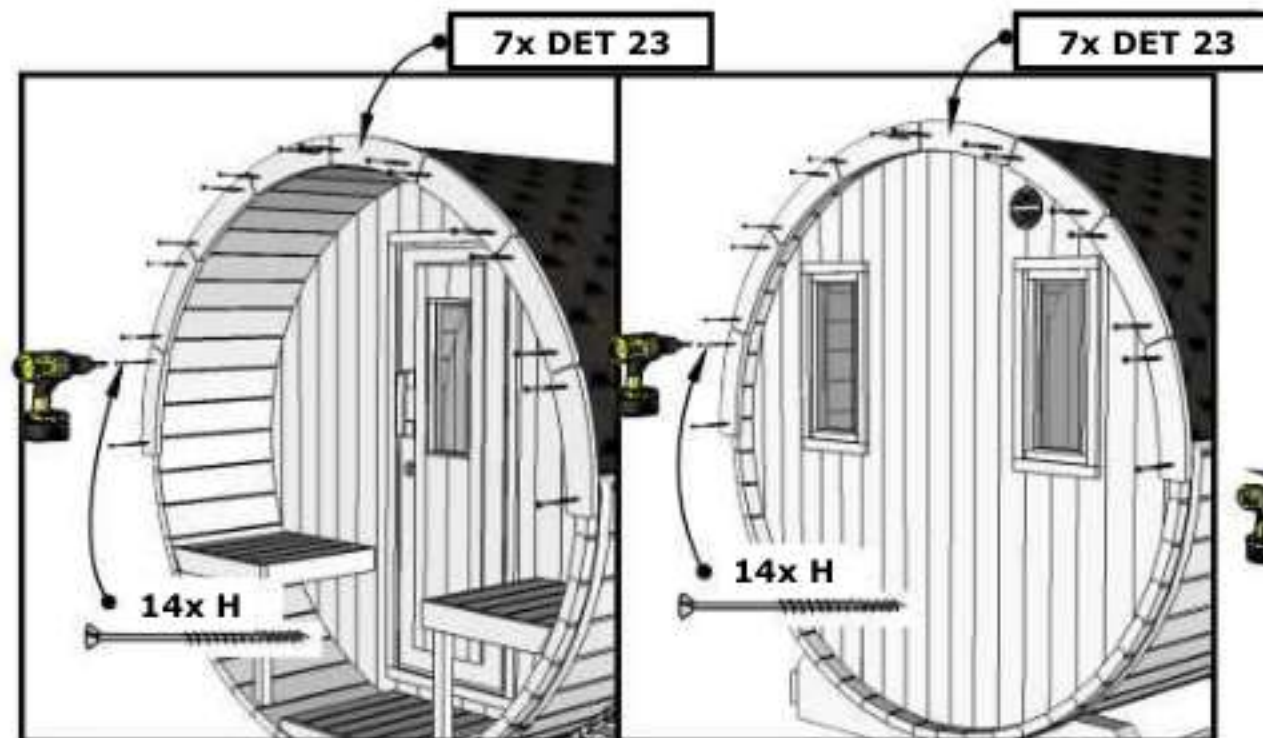

IV

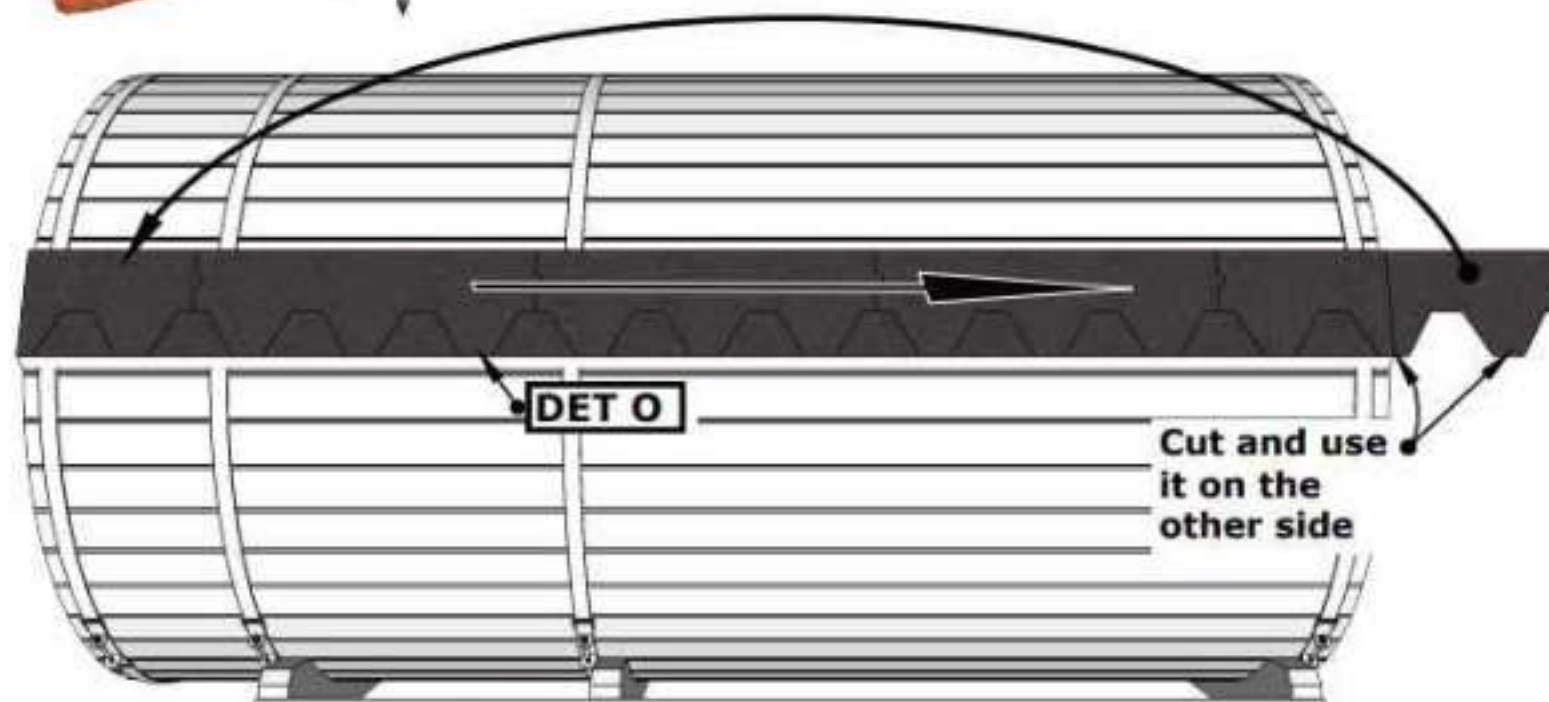


18.

I



II

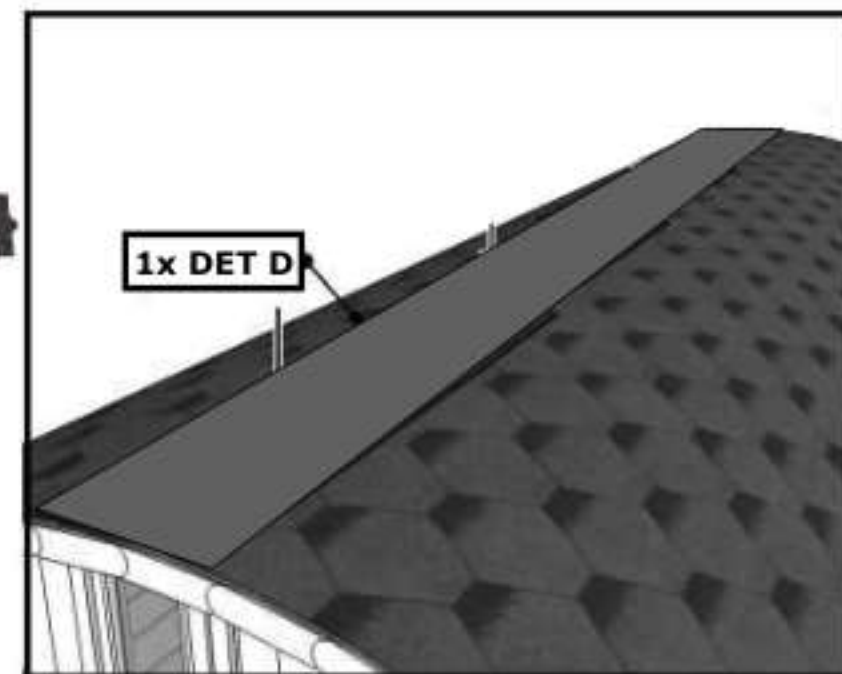

Sauna 400, D205


**Please read the whole manual
before You start.**

**All given measurements
are in millimeters.**




SAUNA 400, D205

Details list Nr. 1


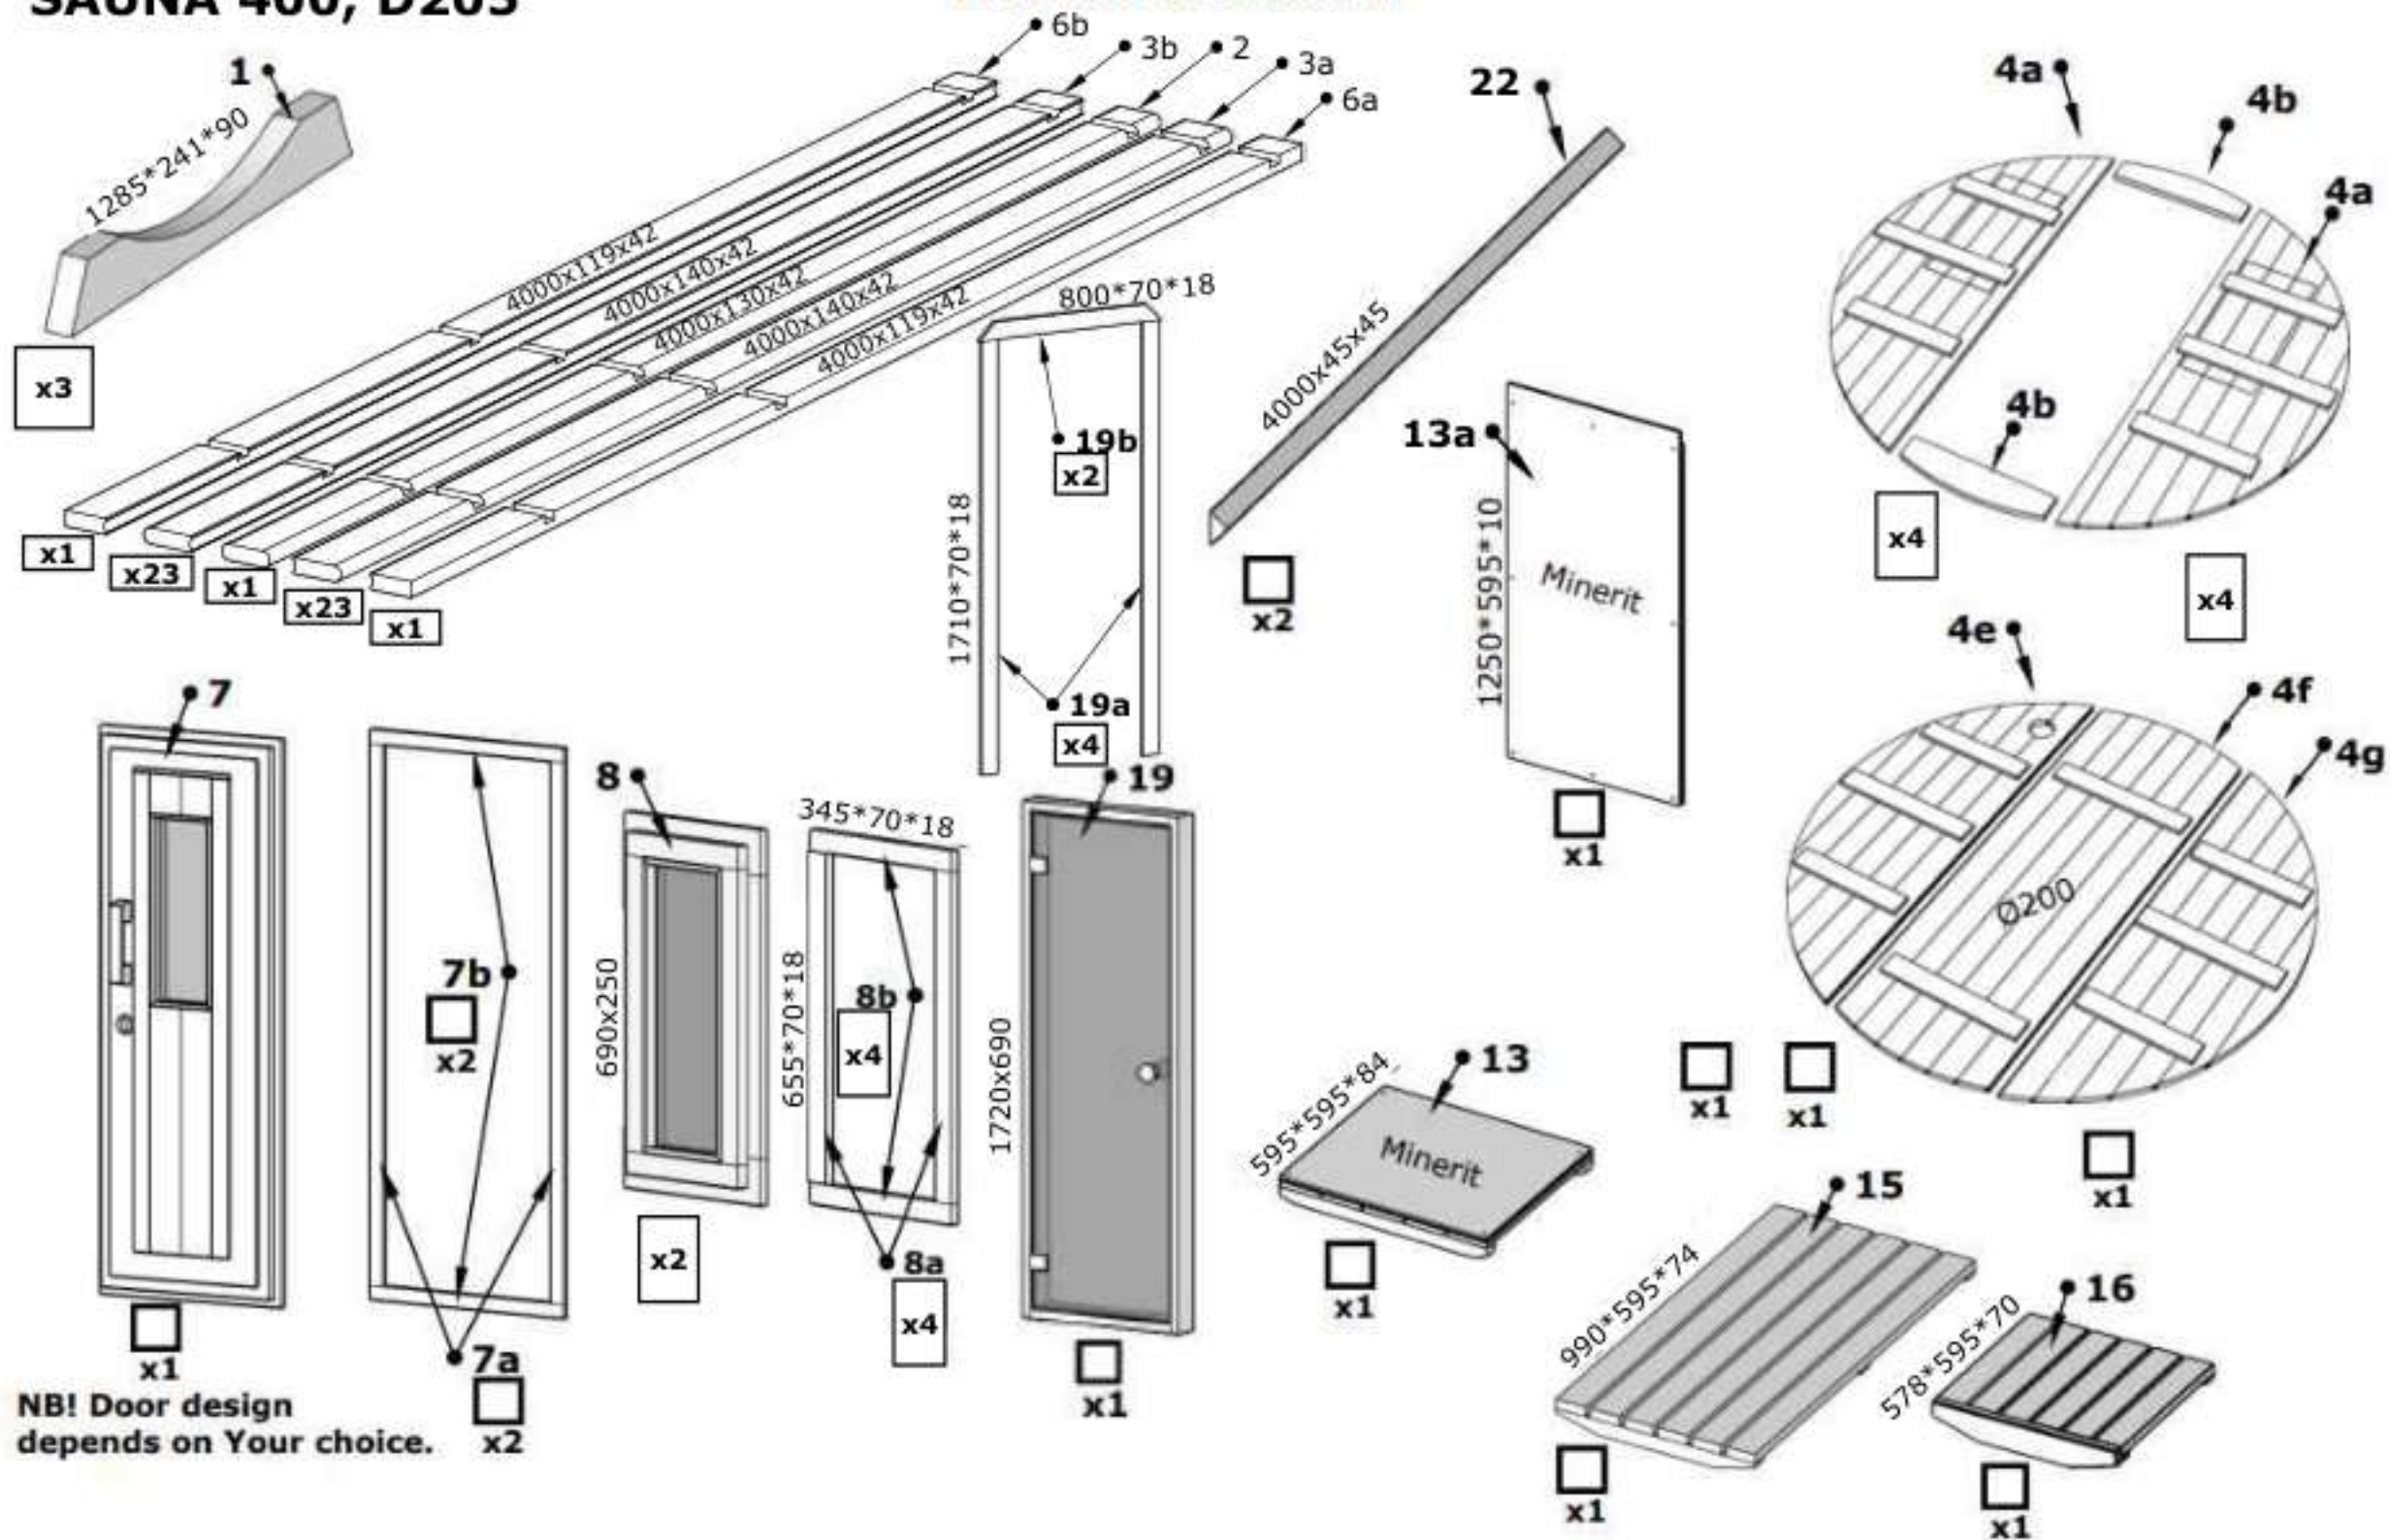


Details list Nr. 2

SAUNA 400, D205

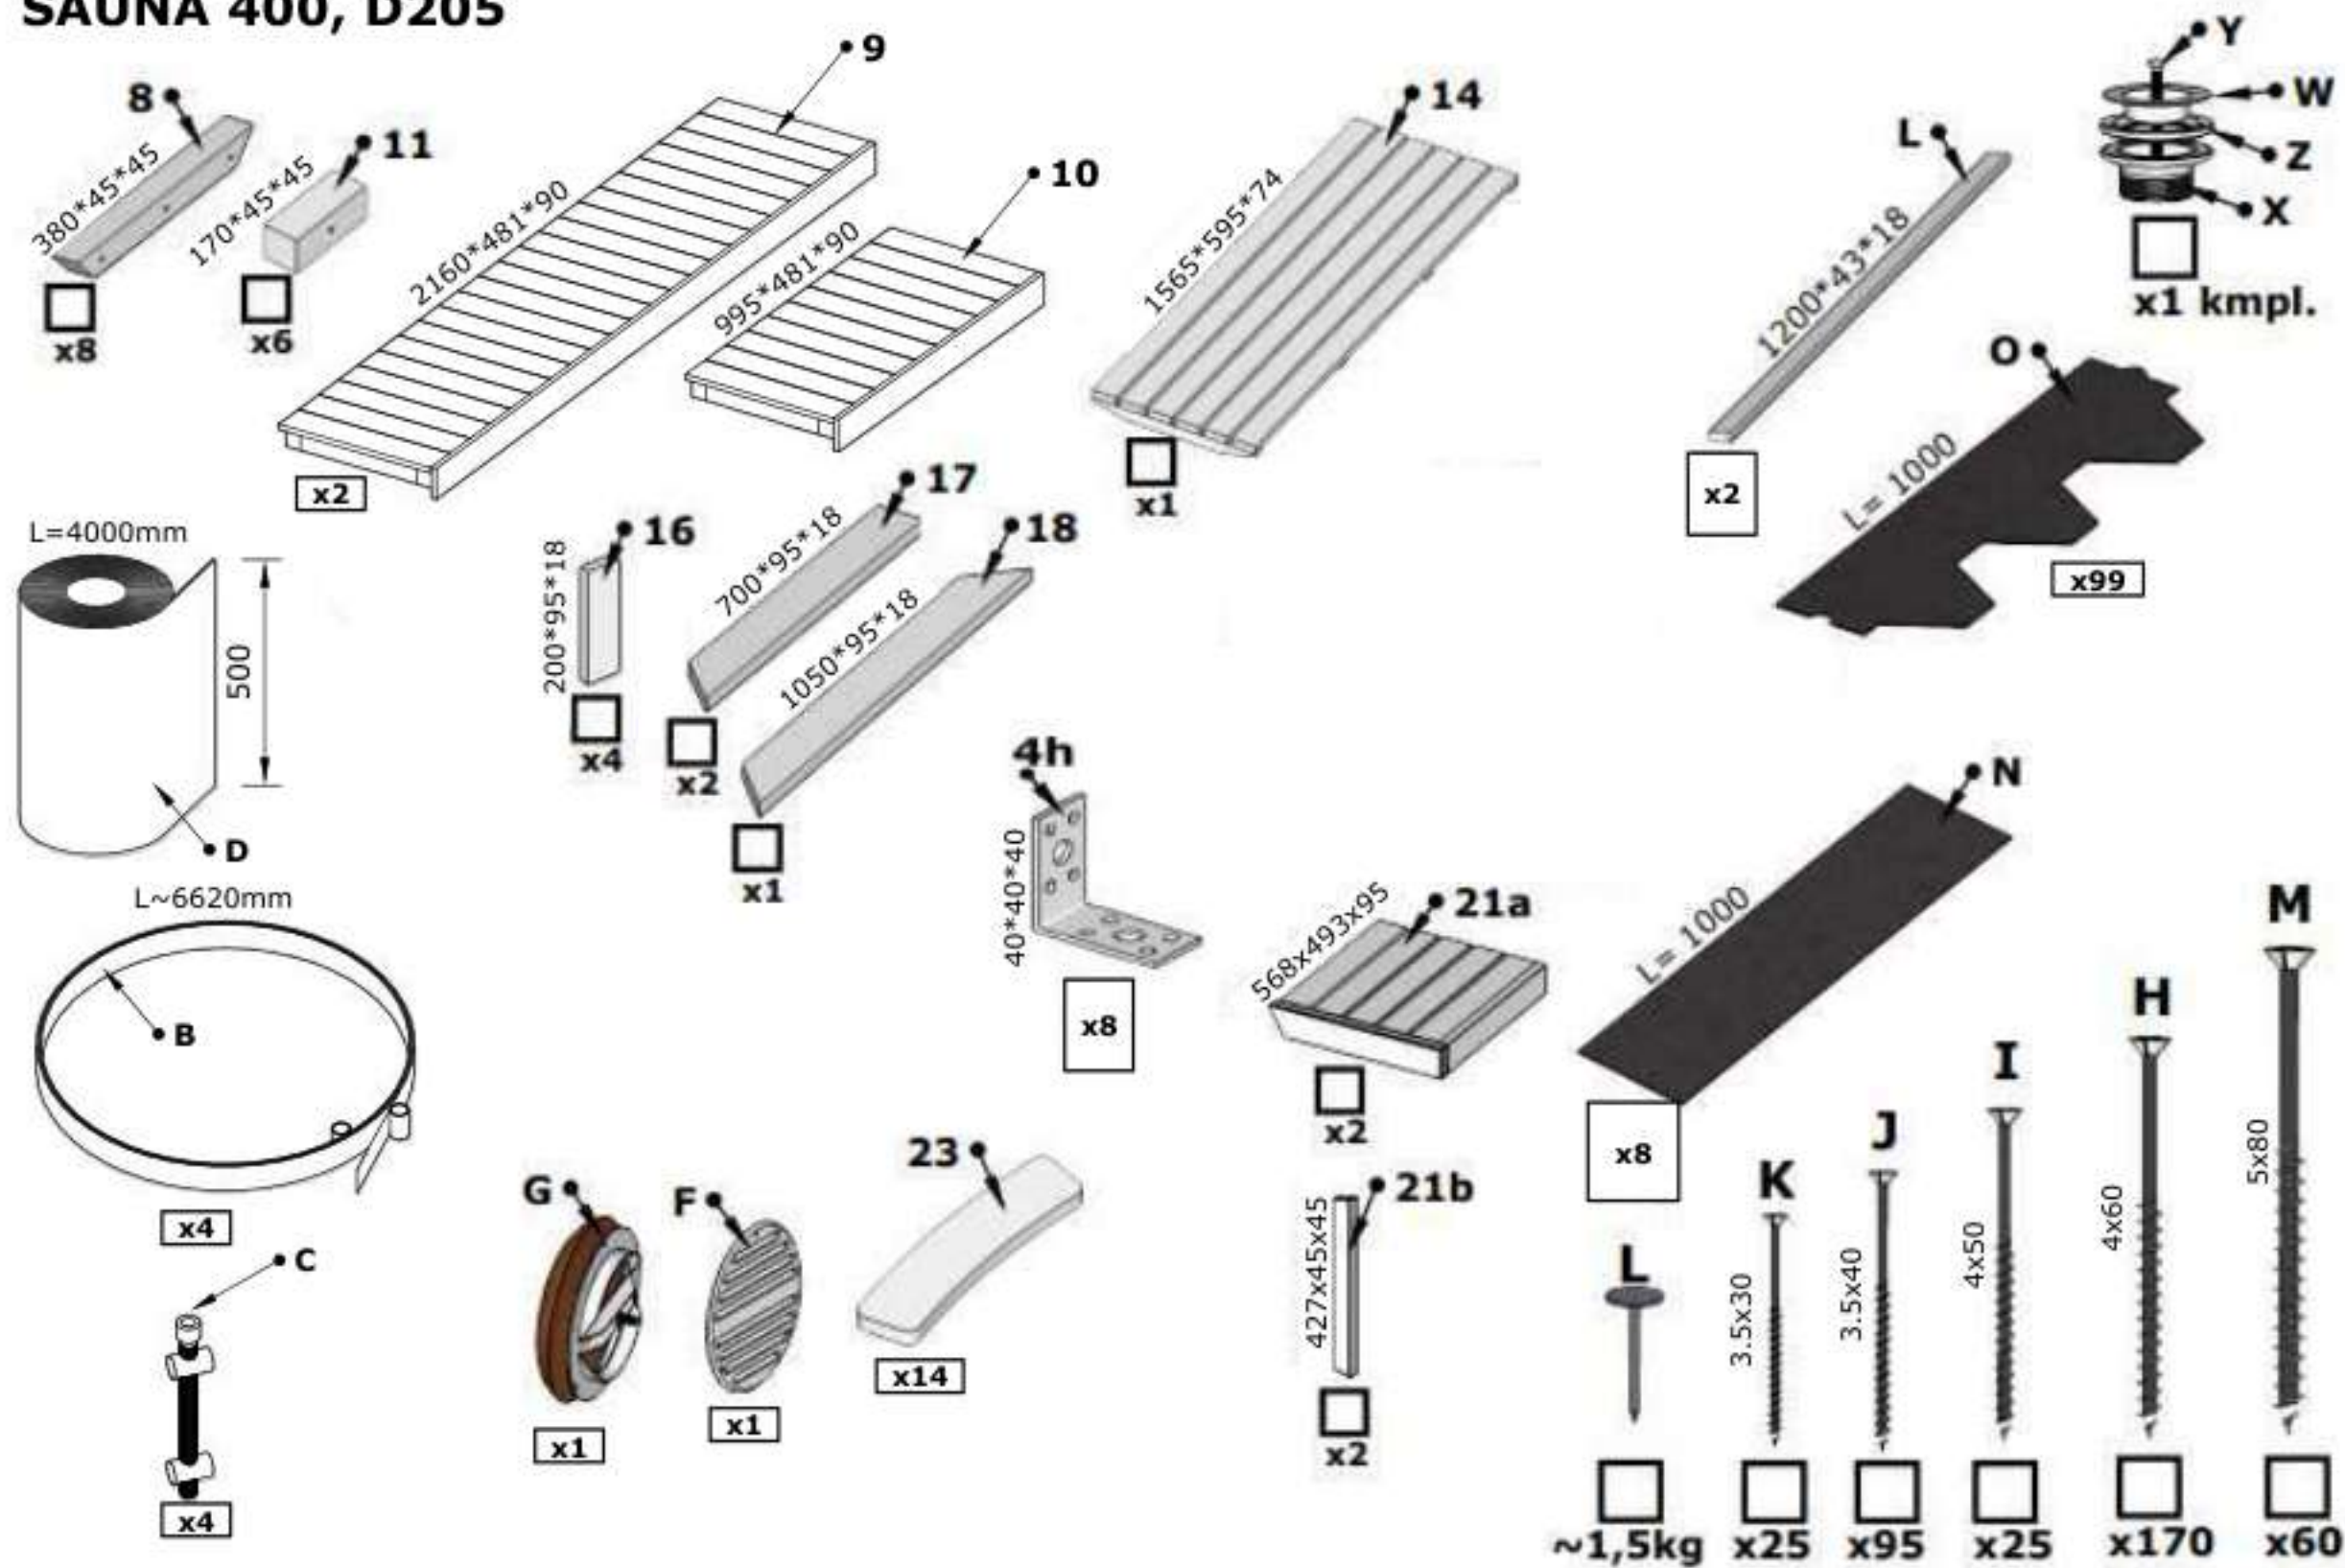

Sauna 400, D205

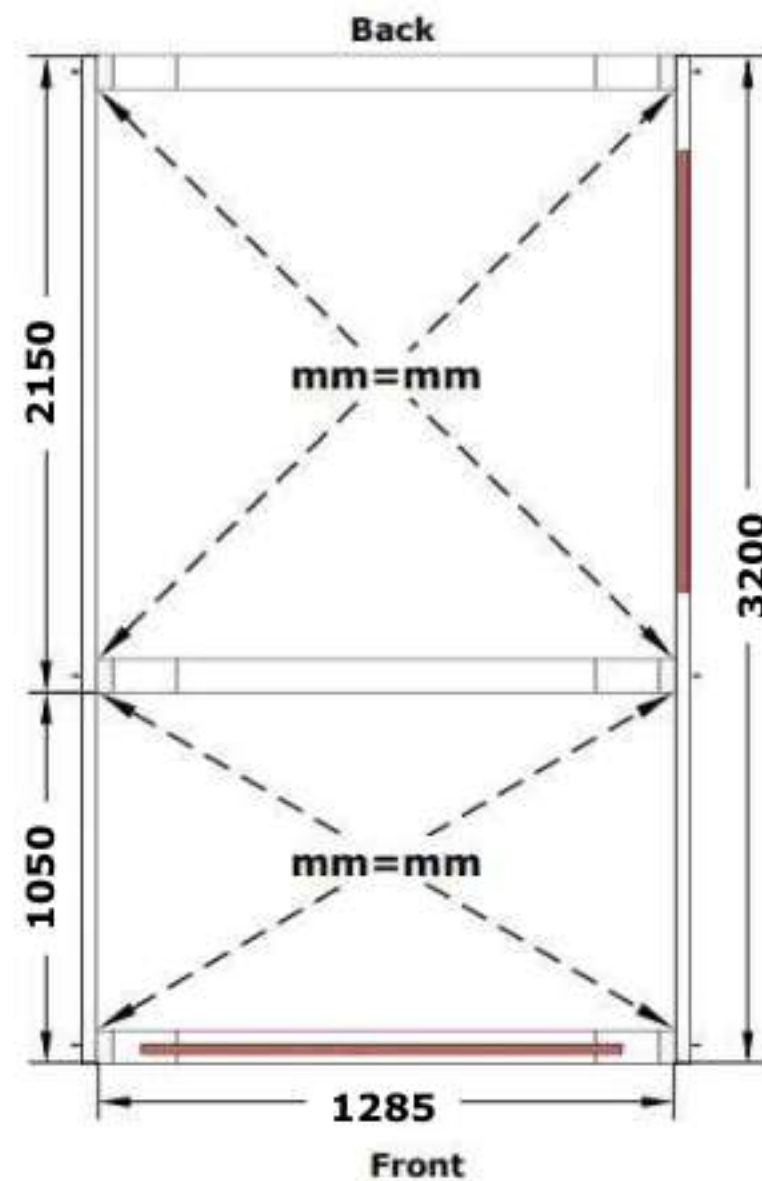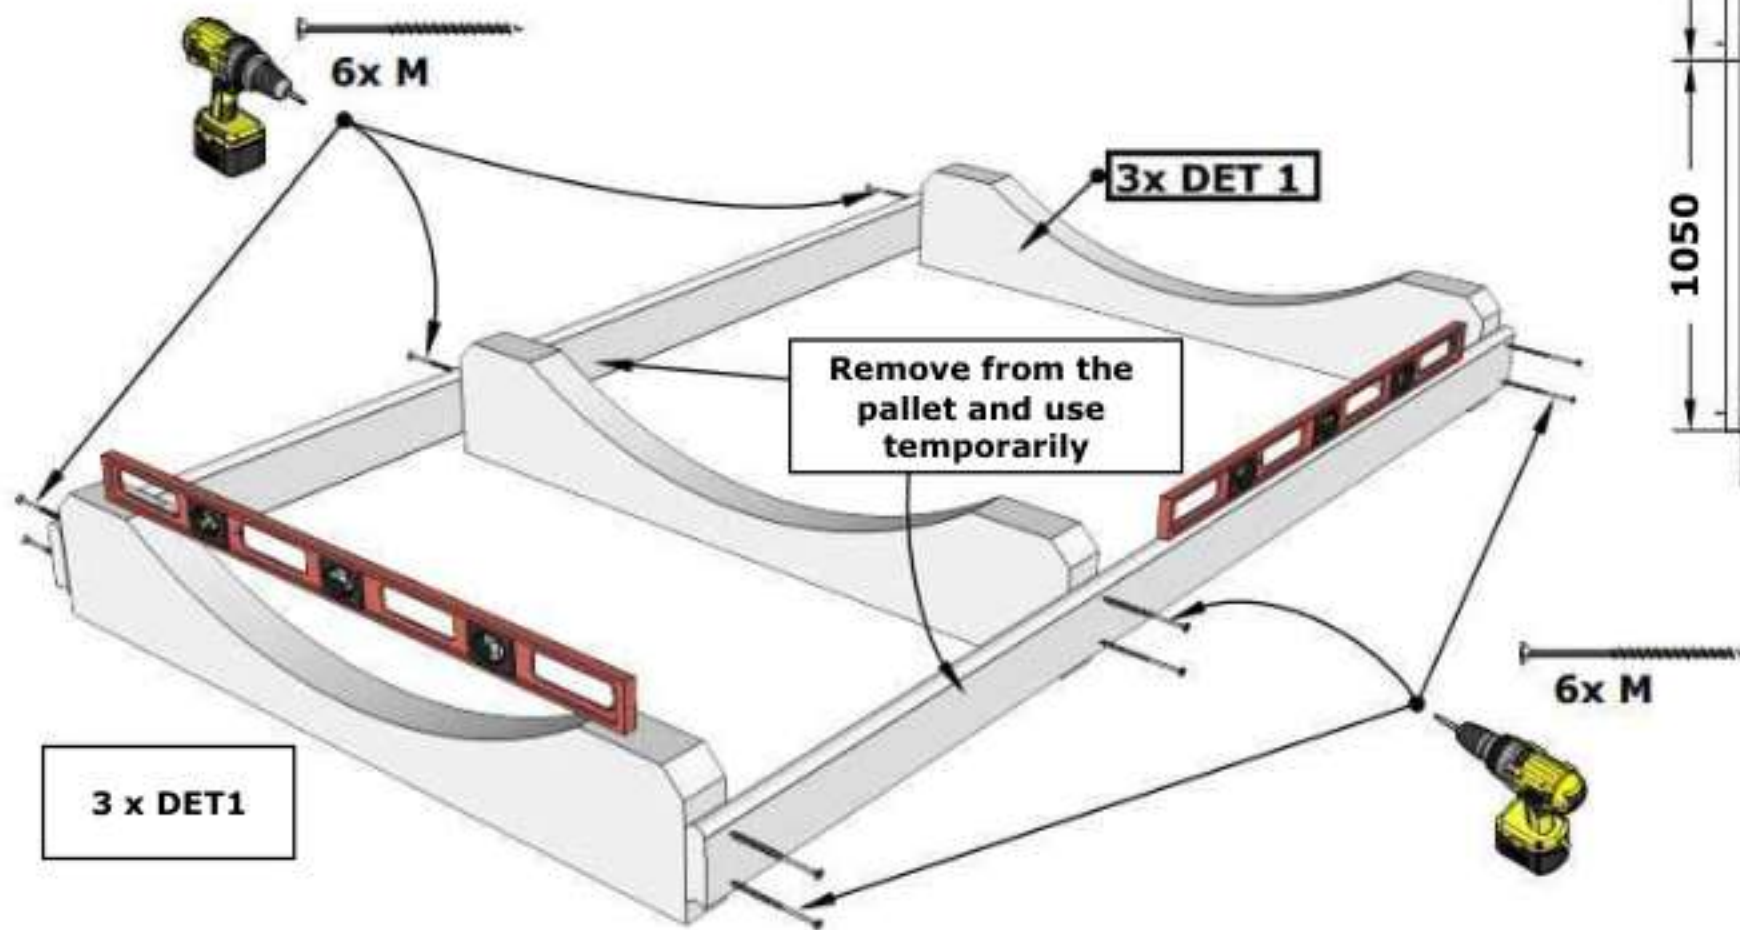



1.

Sauna 400, D205



4 x DET 3a
4 x DET 3b


II

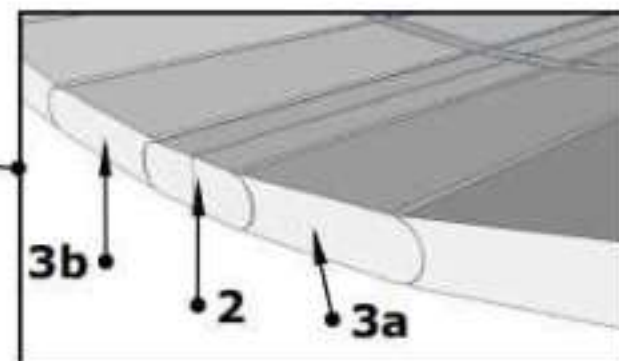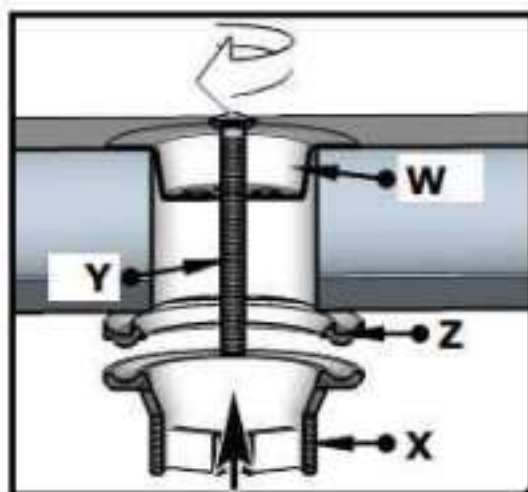

1x DET 2


I

3x M

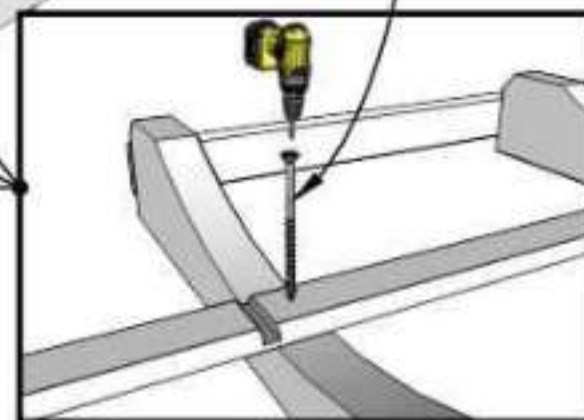


2.


Sauna 400, D205

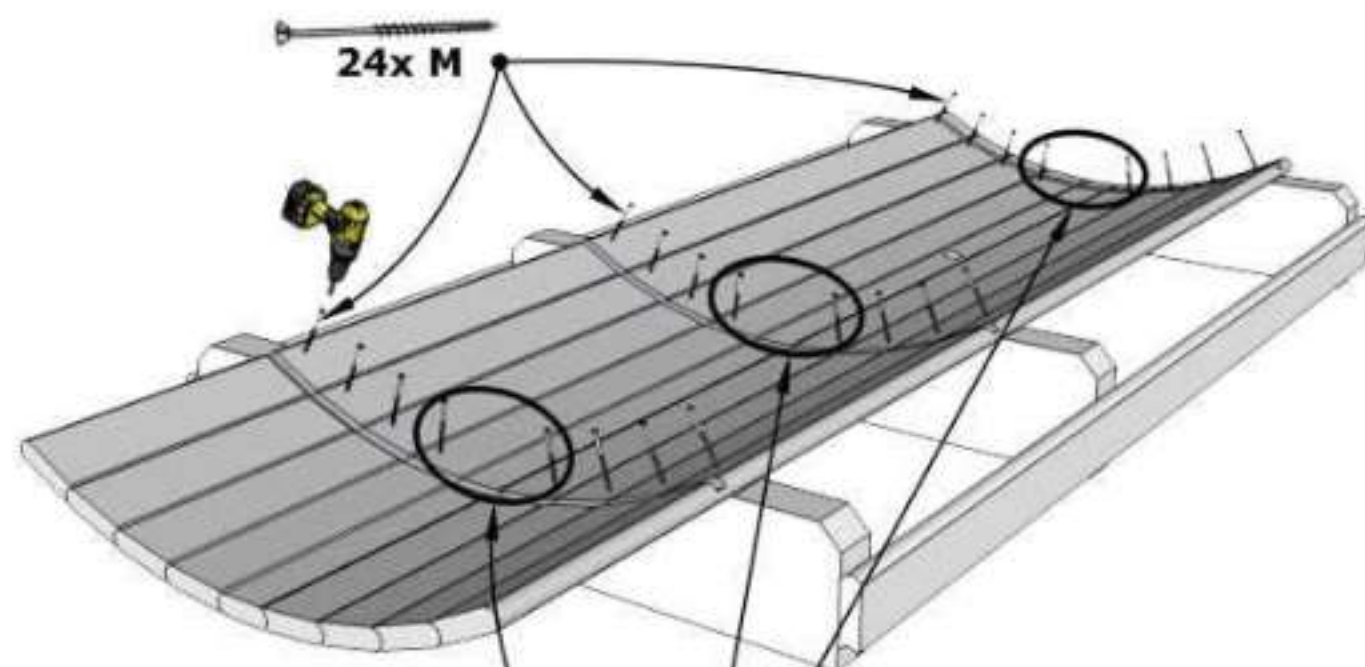

II

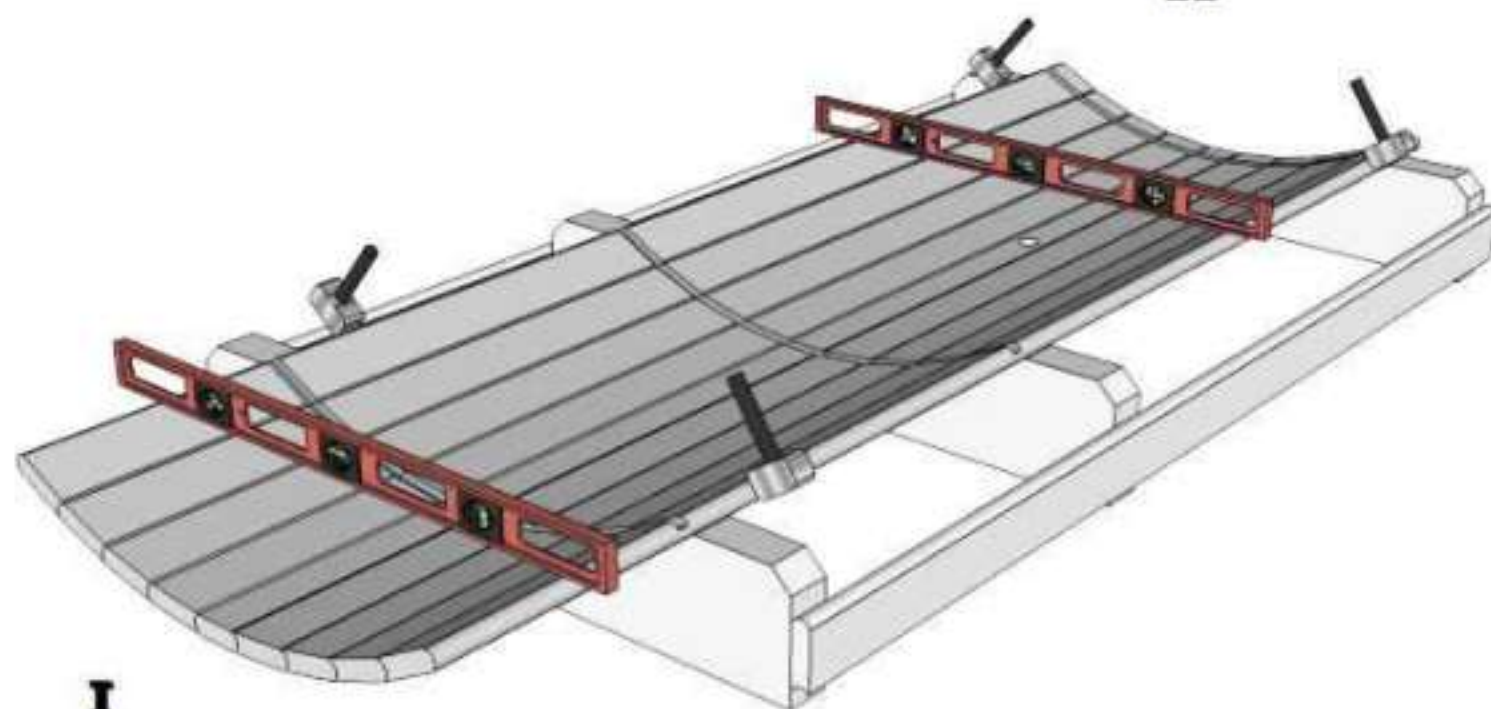


I



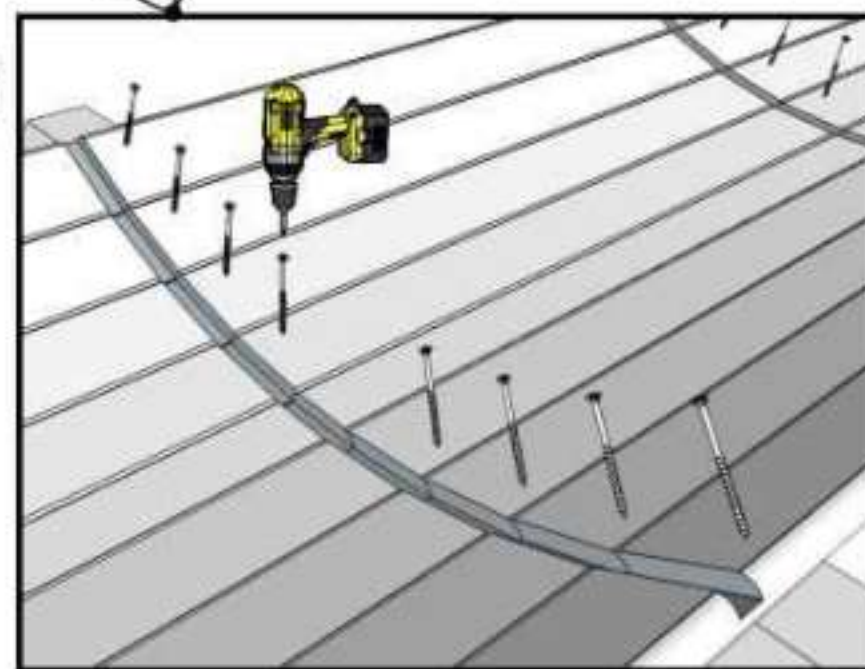


3.

Sauna 400, D205


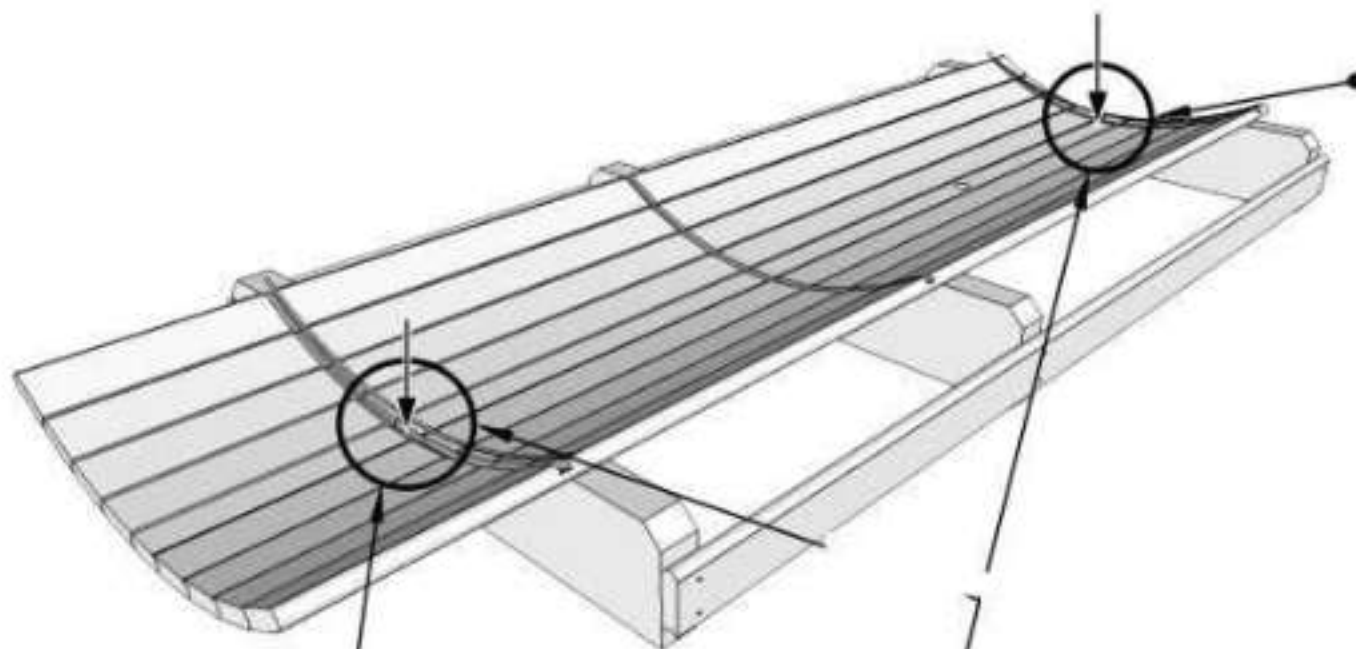


Drill 4 holes Ø10mm
in DET 2, outside

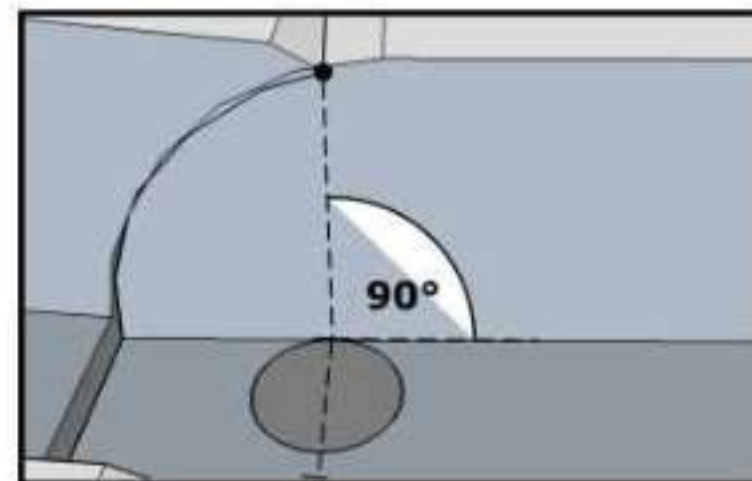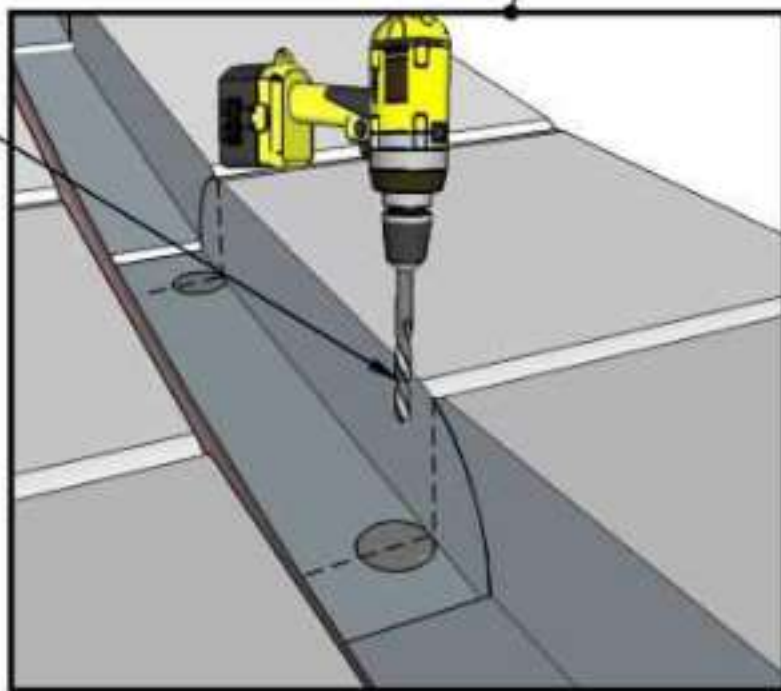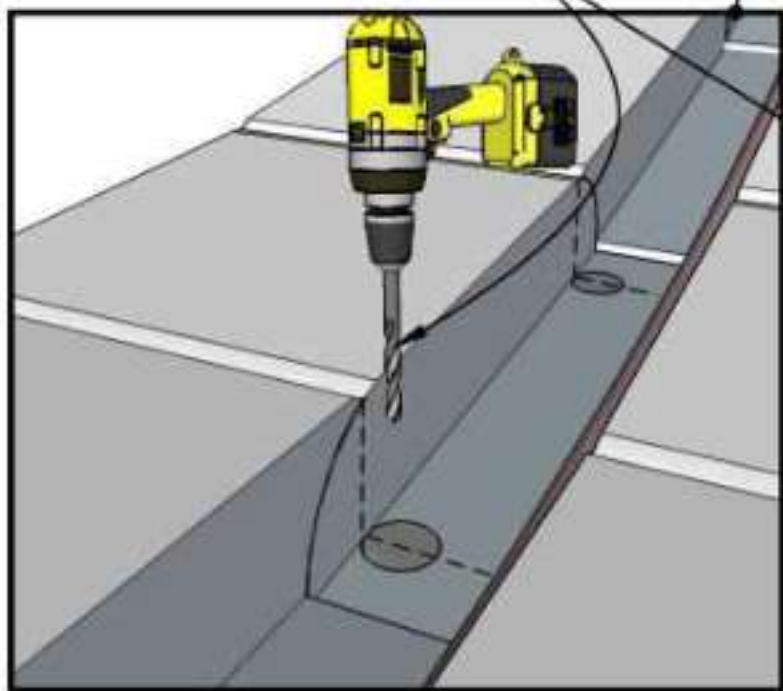


3A.


Sauna 400, D205

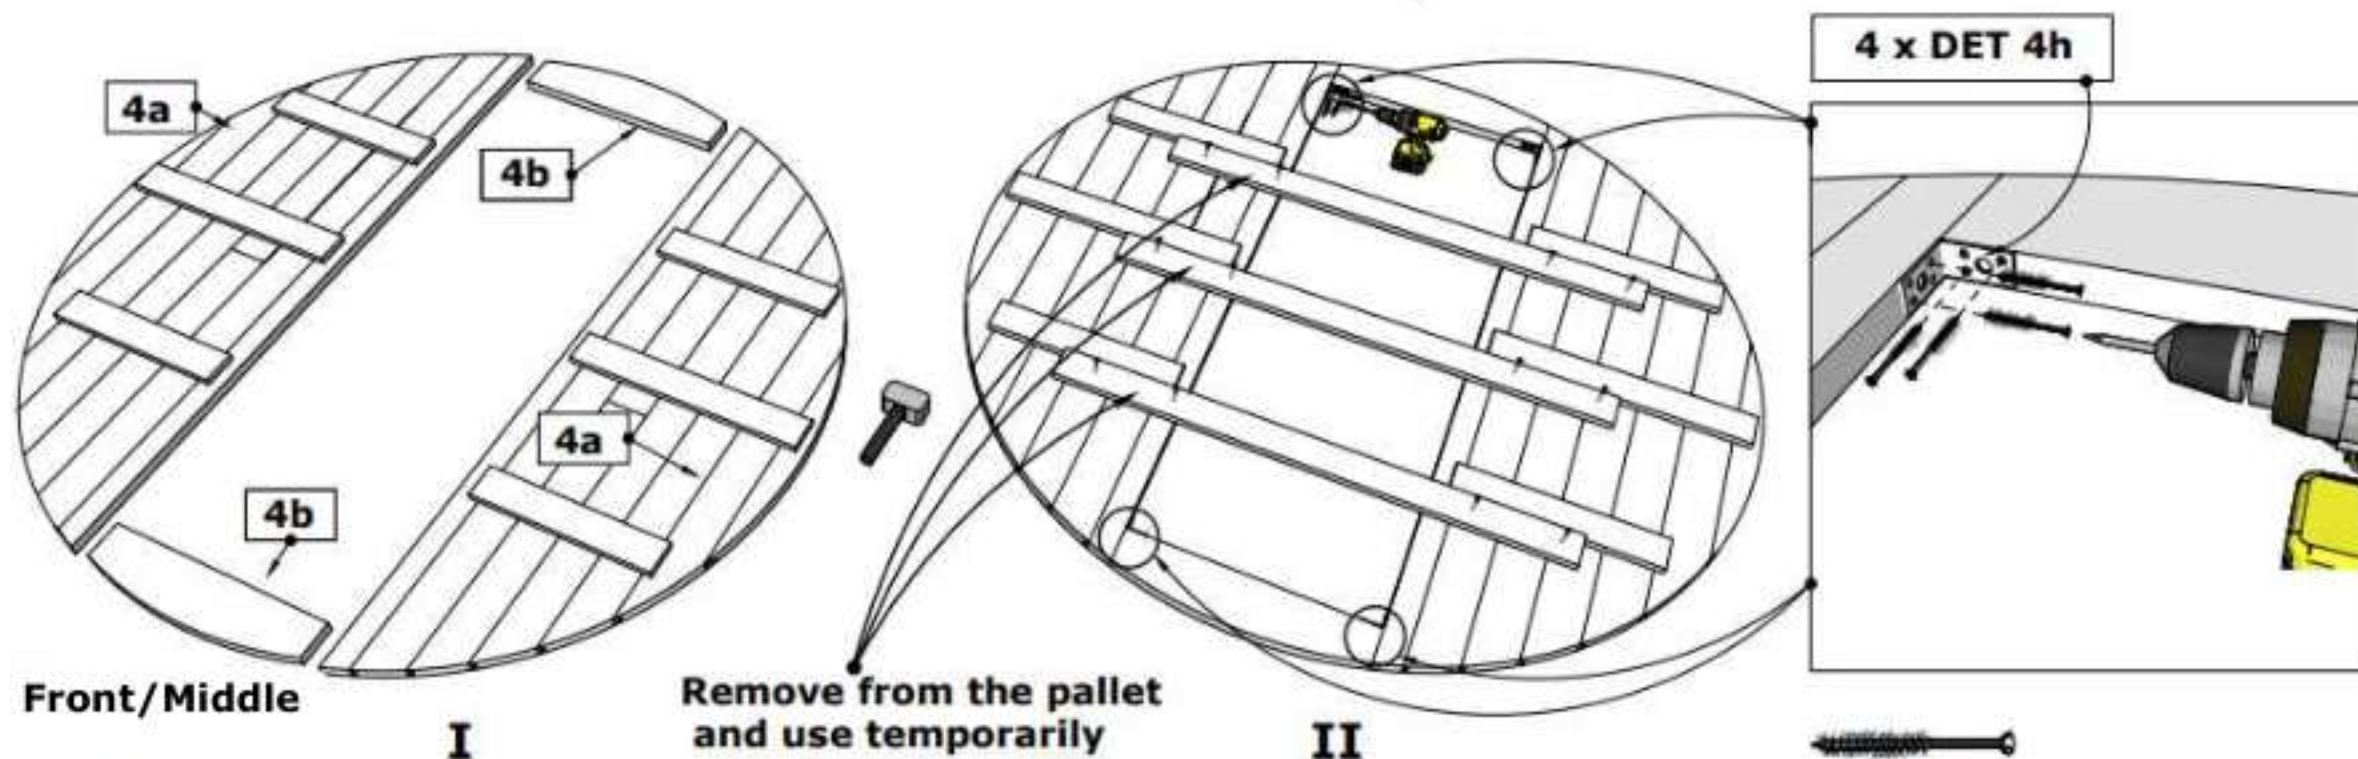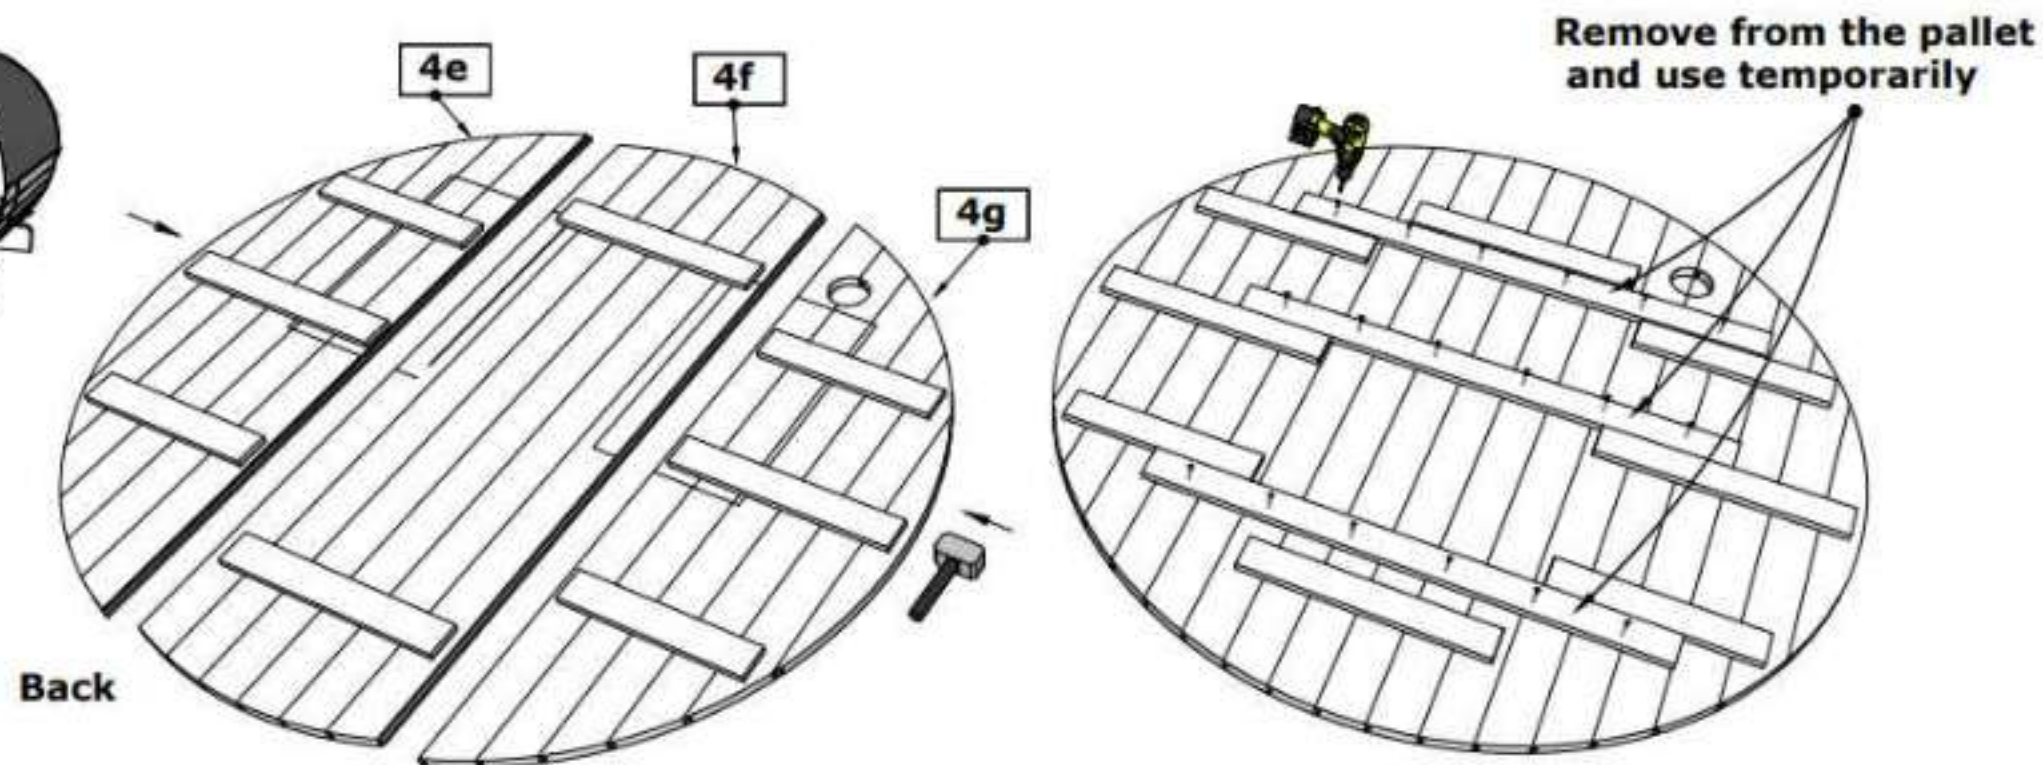

4.




Sauna 400, D205

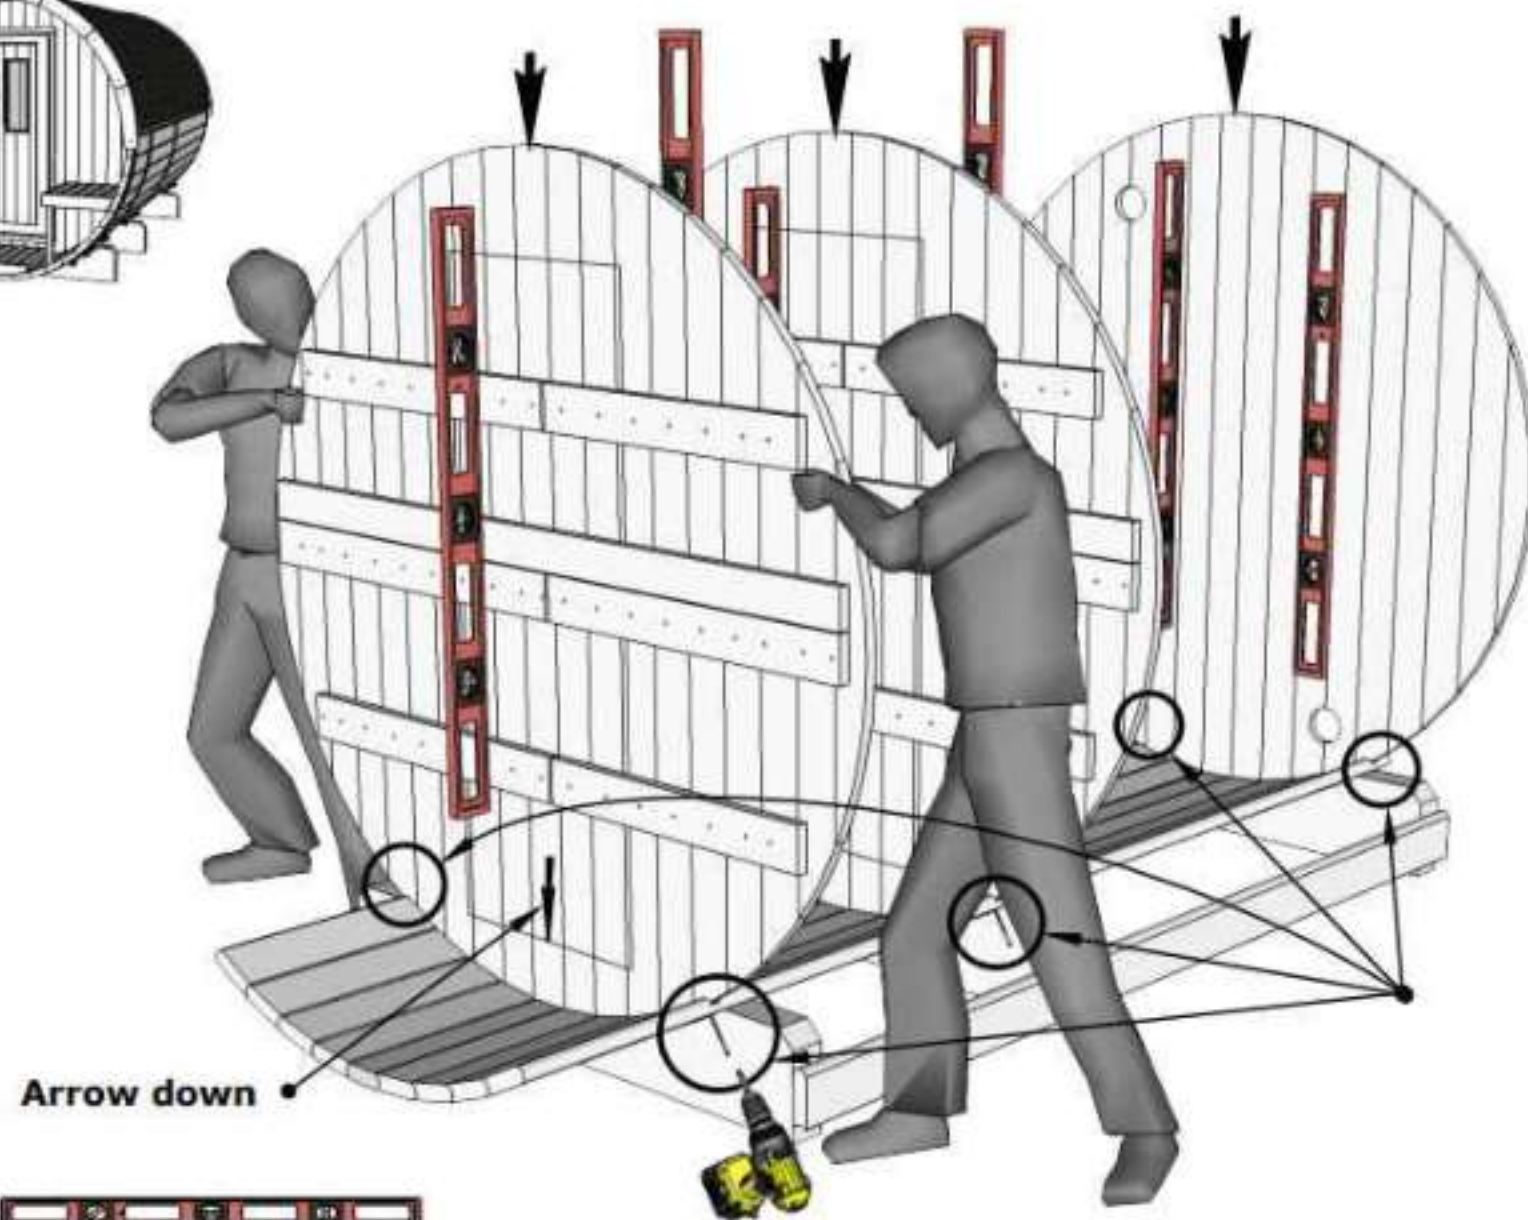

Arrow down




Use waterlevel

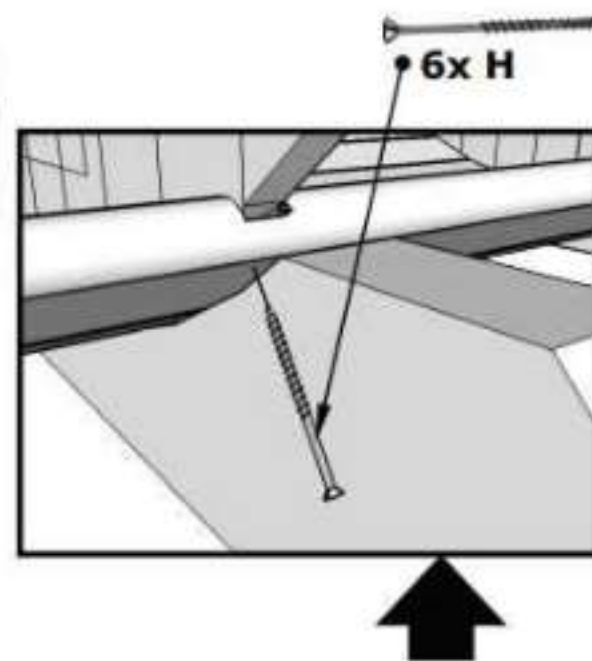


Sauna 400, D205




See page 6A

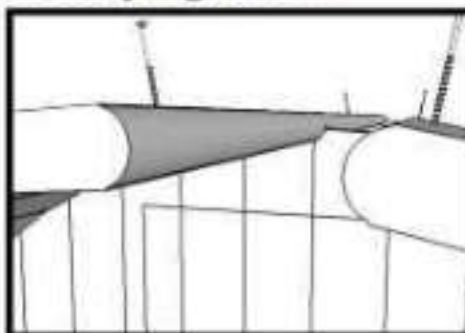

12x DET 3b
11x DET 3a

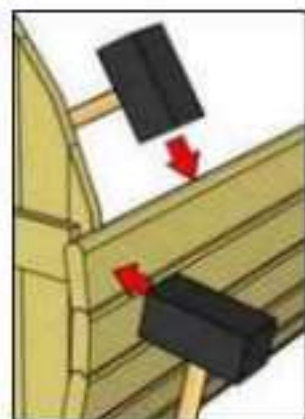

18xH

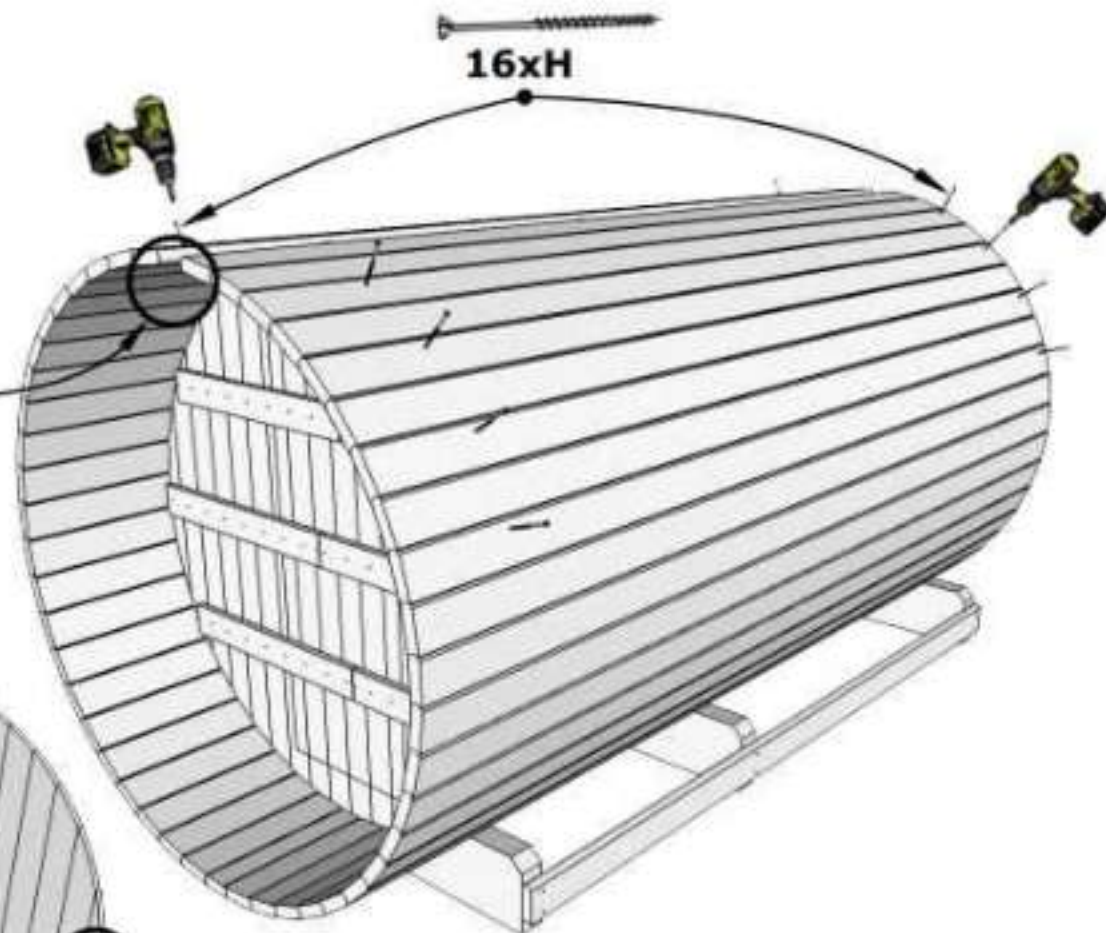

16xH


II

9x DET 3a
9x DET 3b

I







18xH

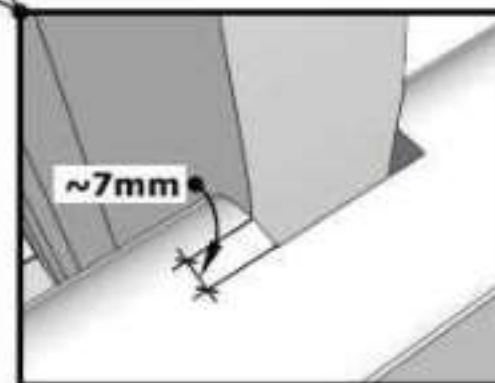


~7mm

6.



Sauna 400, D205

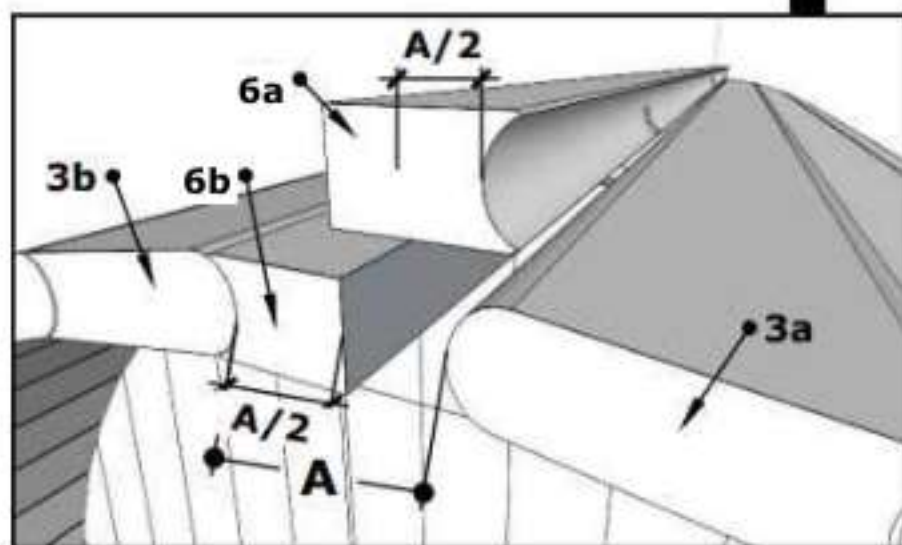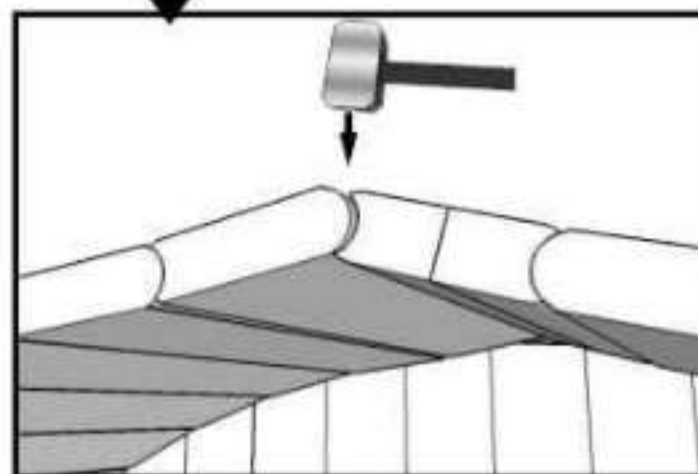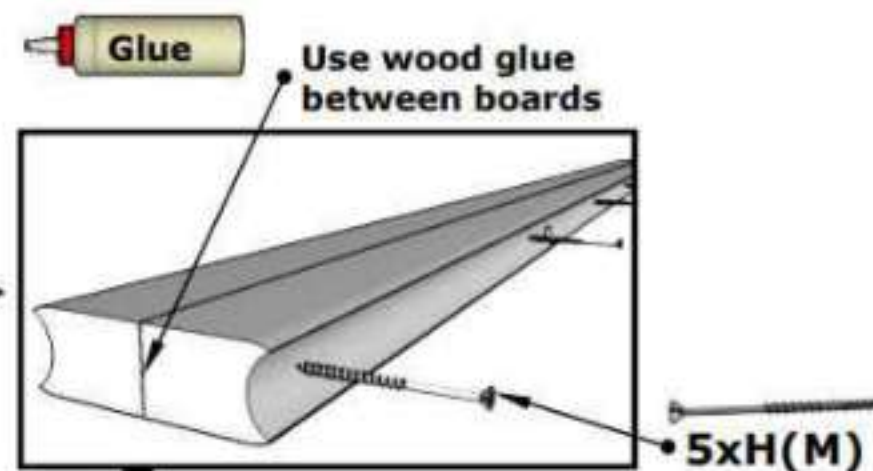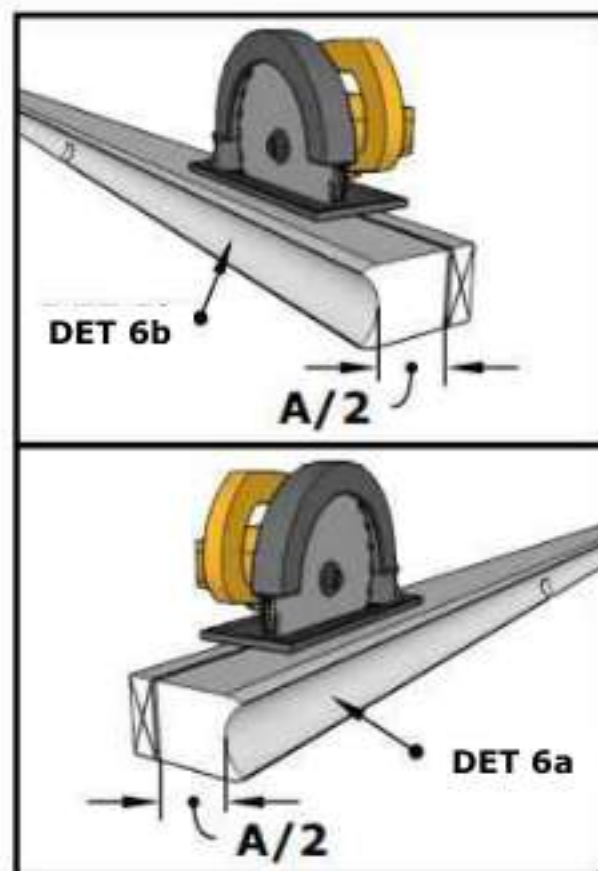


6A.

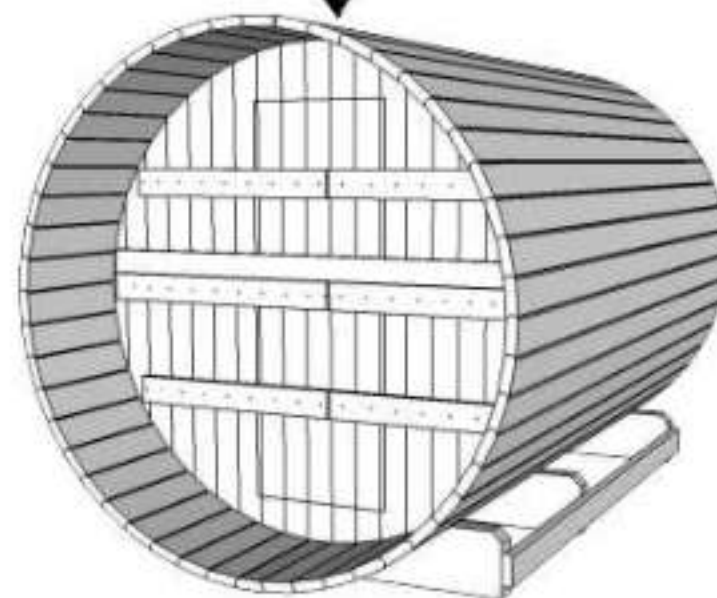

Sauna 400, D205

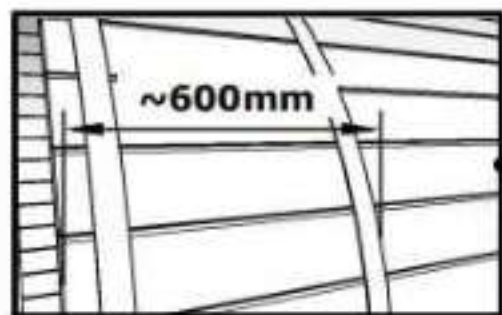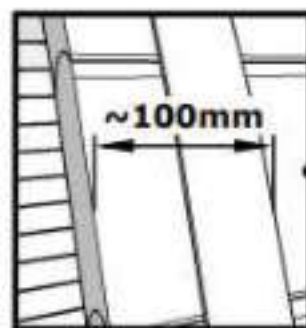


2x DET B

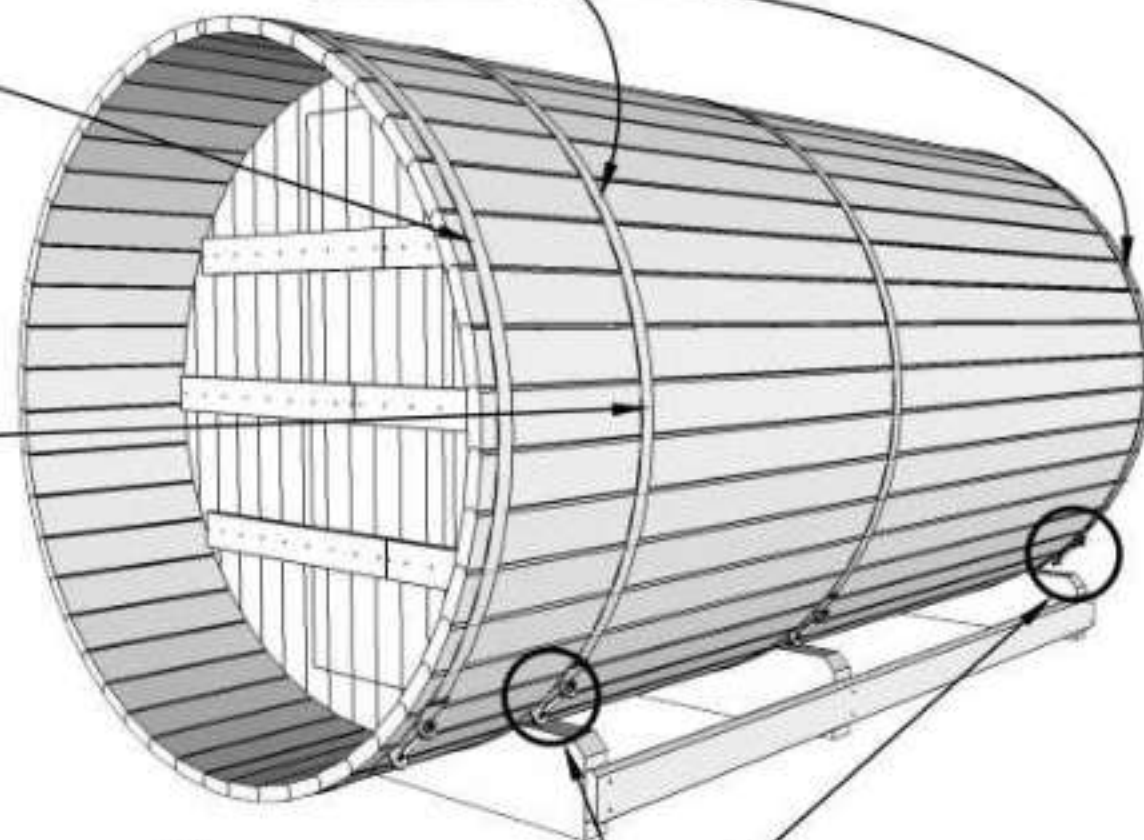


Remove screws

2x DET B

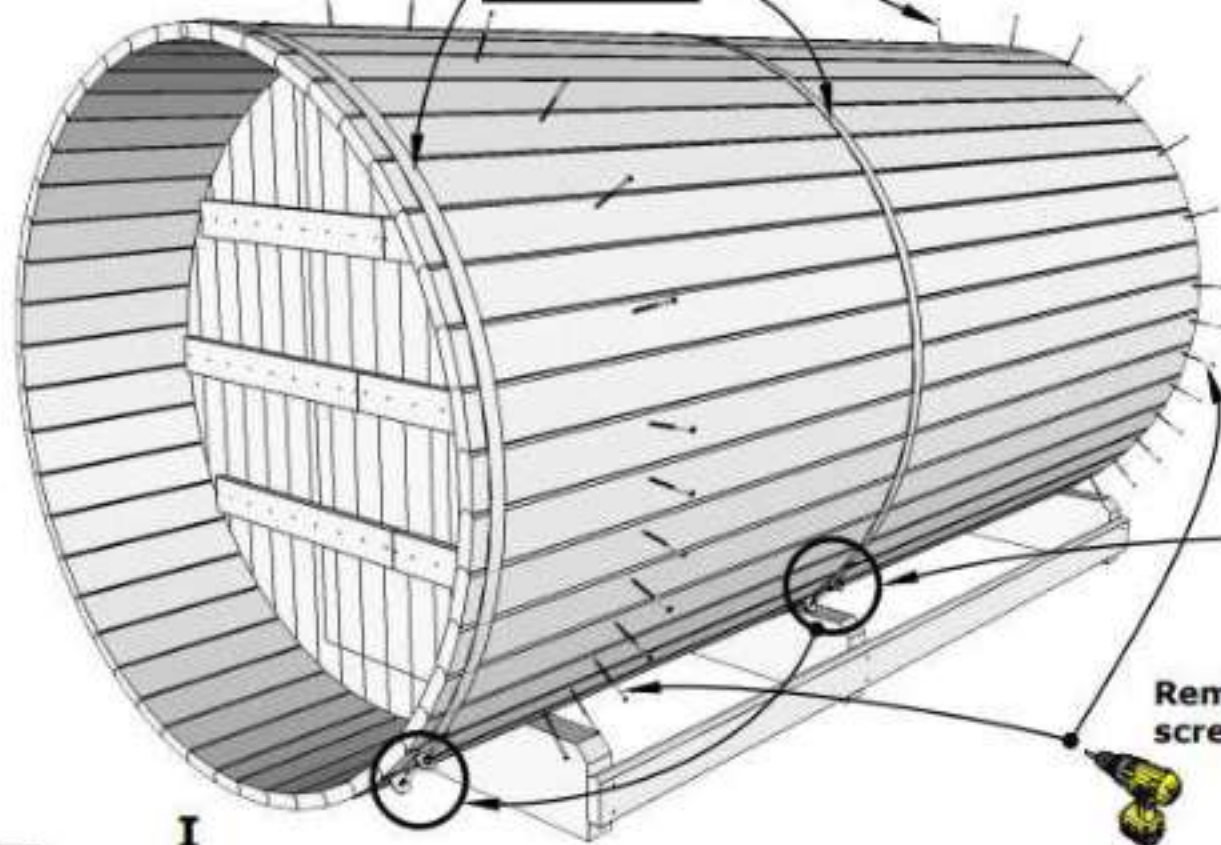

Remove screws and use them on further sauna installation.

Remove screws

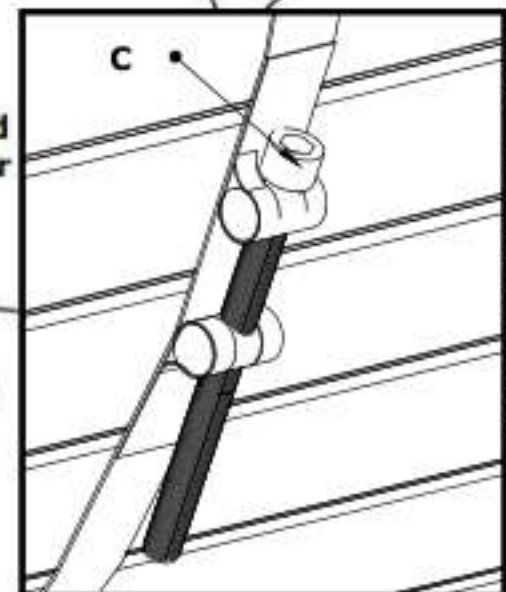


During assembly and retightening the threaded rods, use oil (Würth HPS 1400 or similar) to avoid "cold welding" and it is also easier tightening.


Sauna 400, D205




DET 8

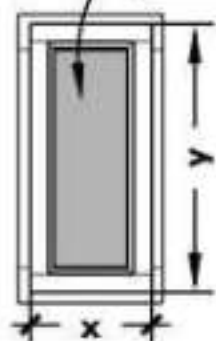



Mark windows openings.

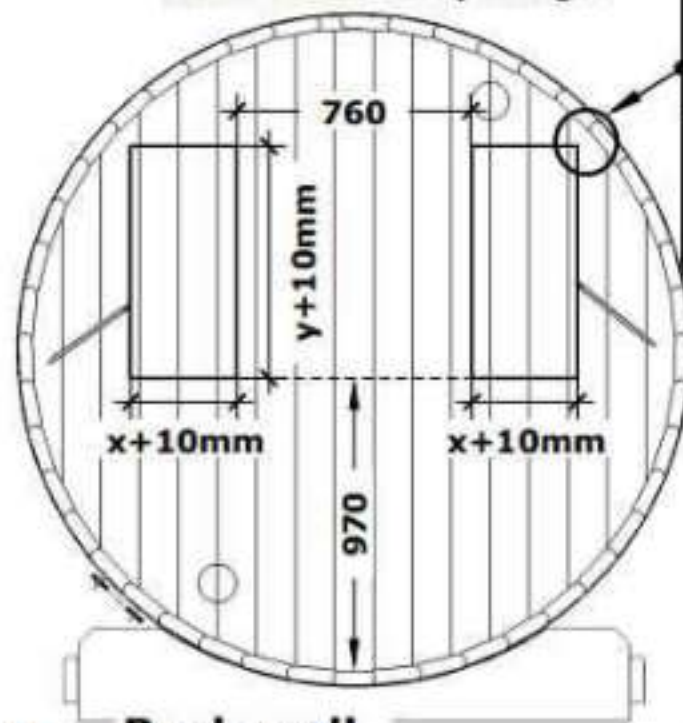

III Back wall

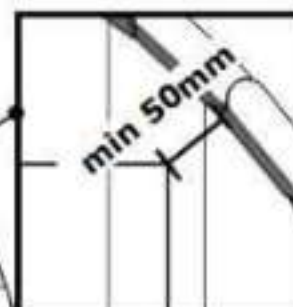


IV

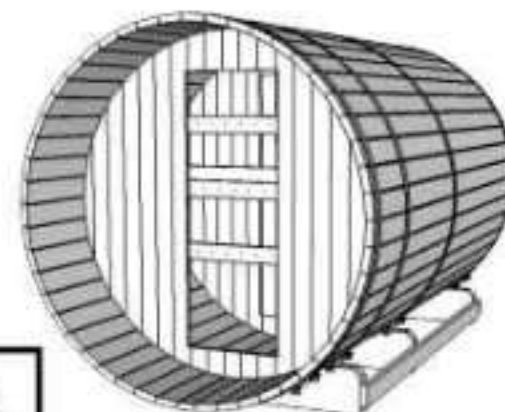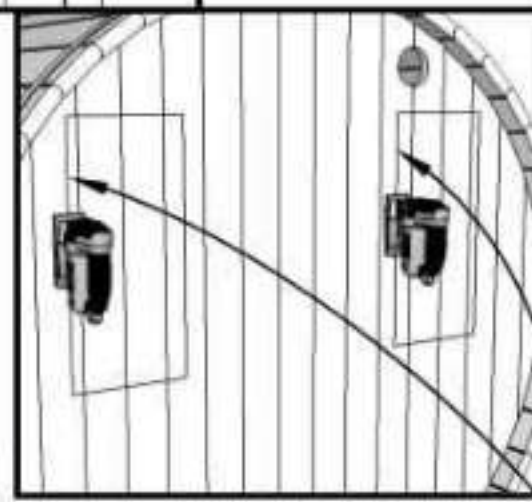


V

Cut out, follow the guidelines

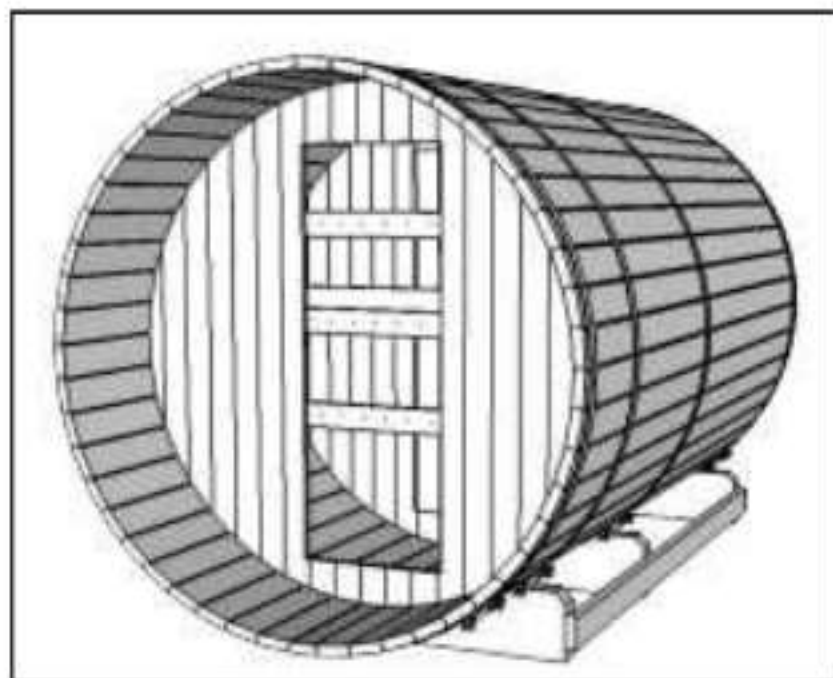

8.^I

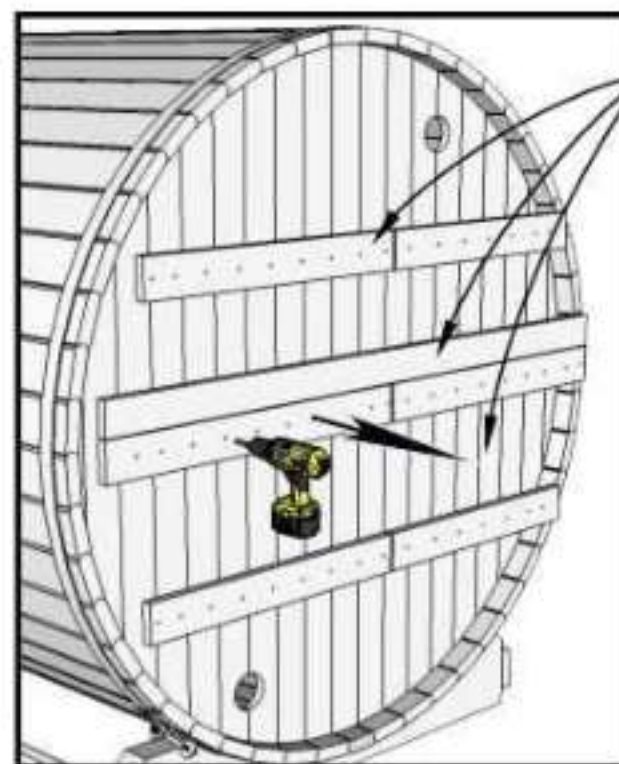

Remove all brackets

Sauna 400, D205




Use waterlevel for
windows installation


NB! Place windows
from inside.

I

2x DET 8

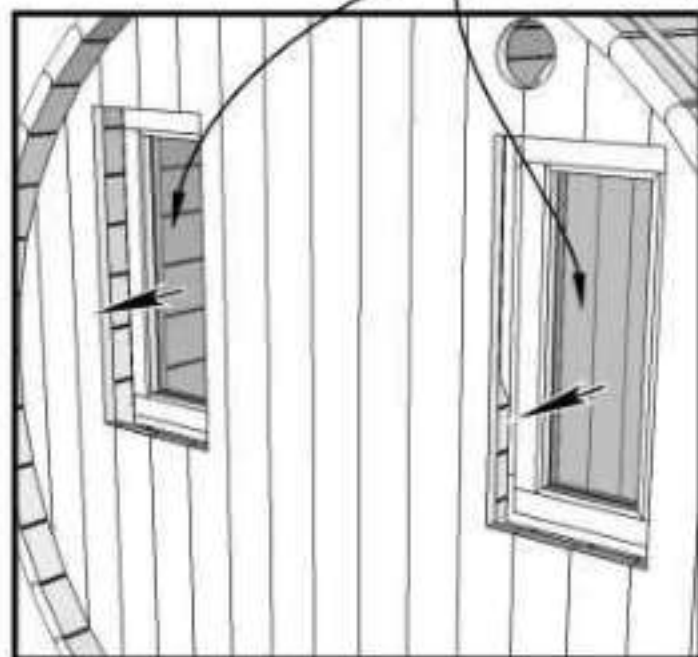


Horizontally fix screws
in every board.

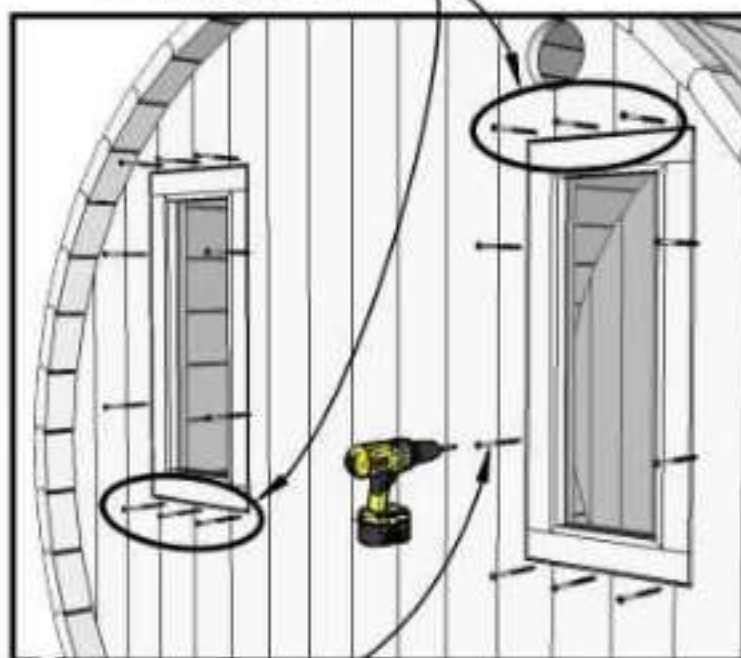


20x J




4x DET 8a
4x DET 8b

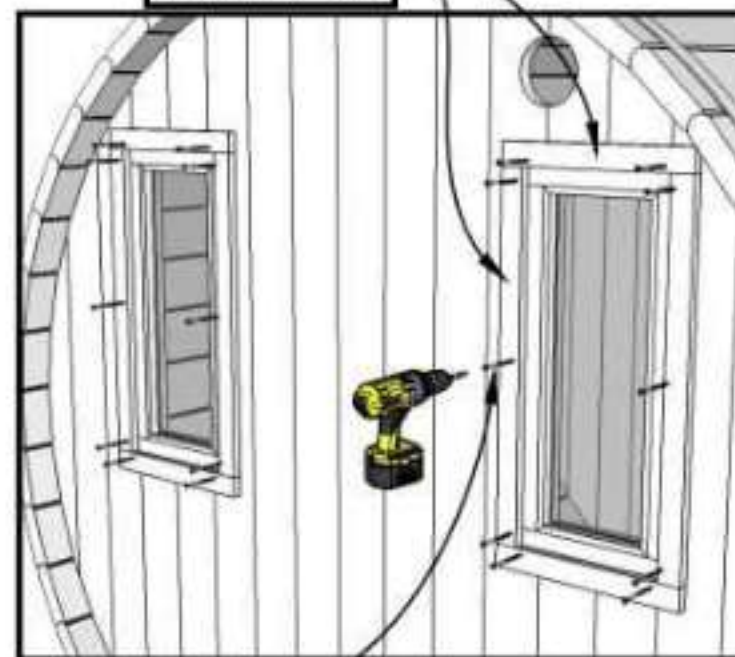



20x J



Sauna 400, D205

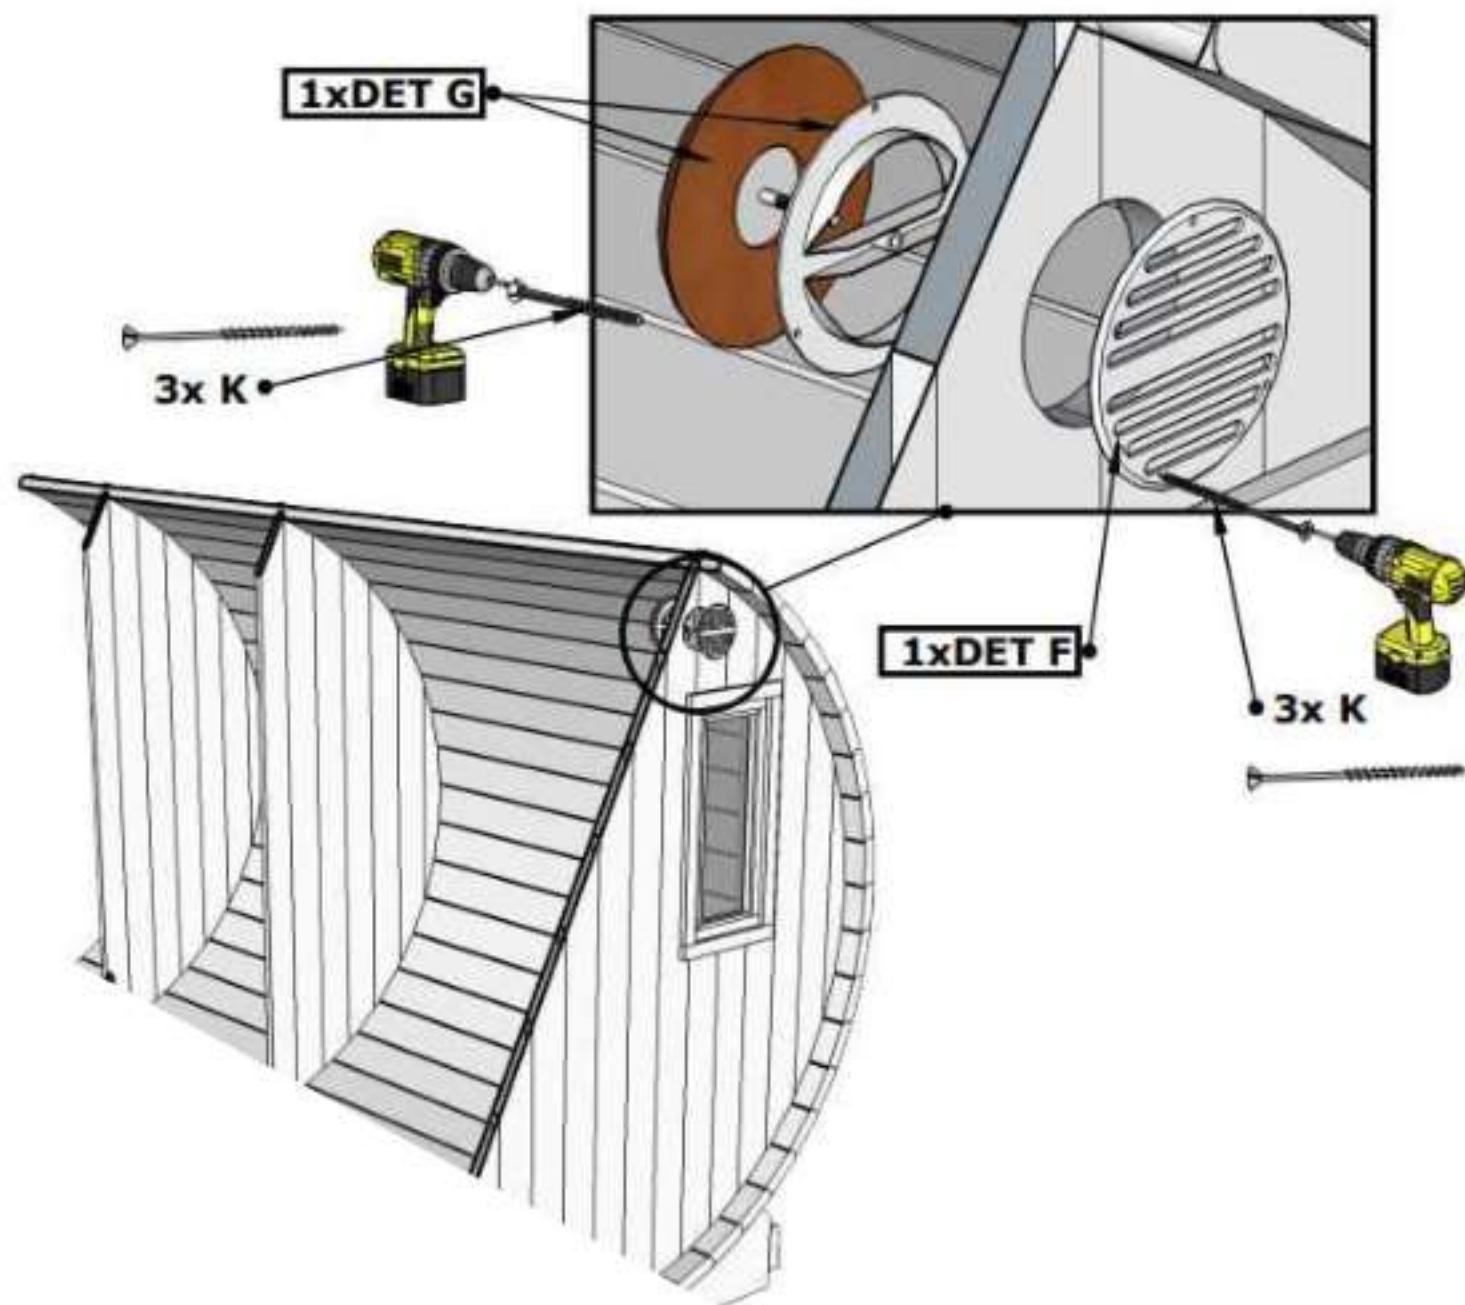


Sauna 400, D205

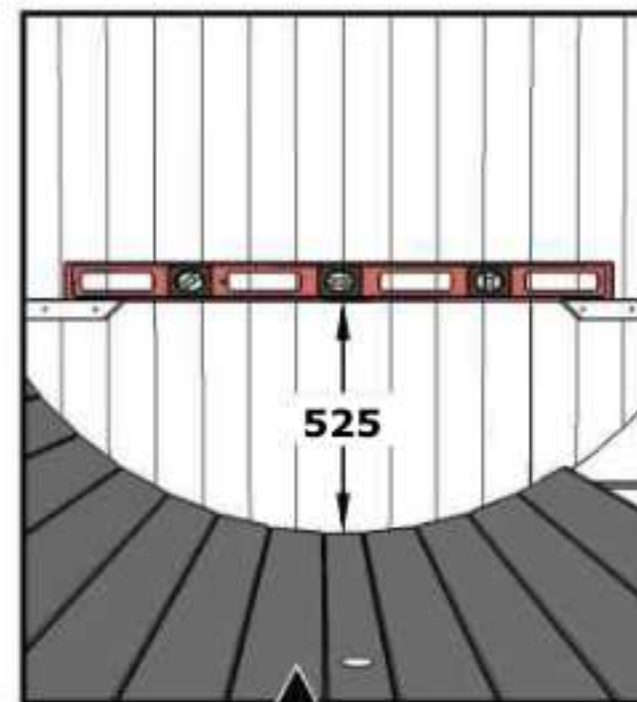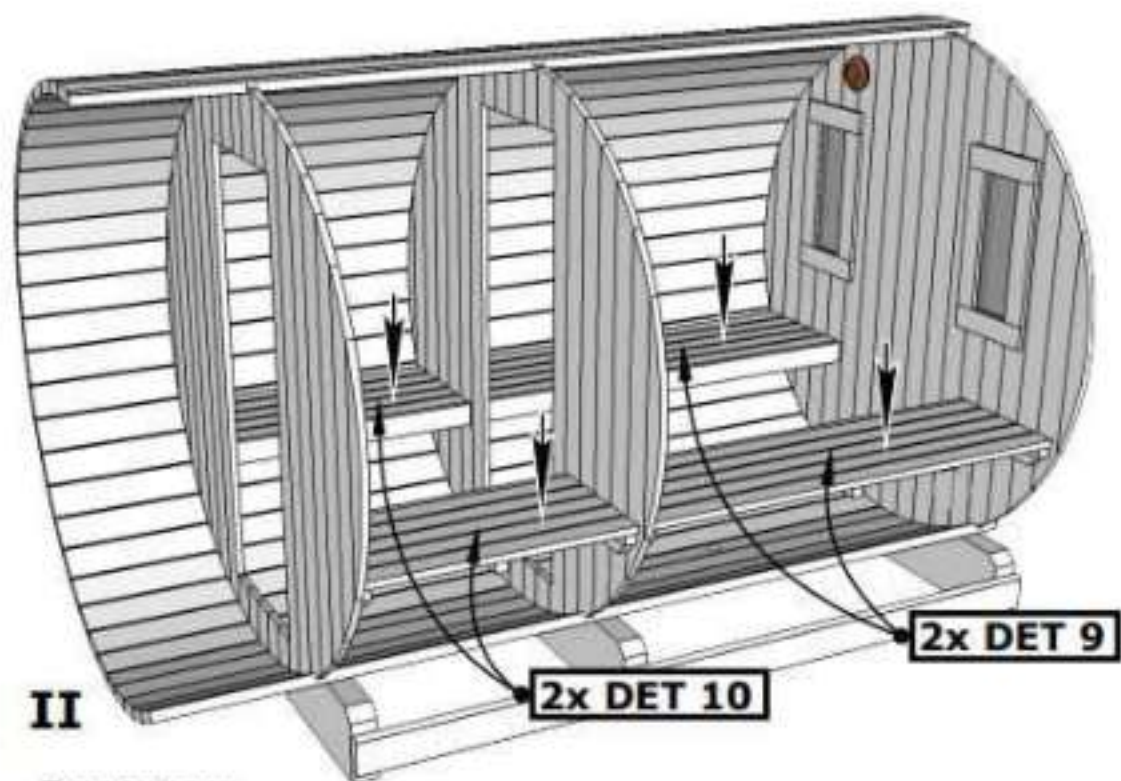

11. **I**


TU 104/ ST2054000

Sauna 400, D205

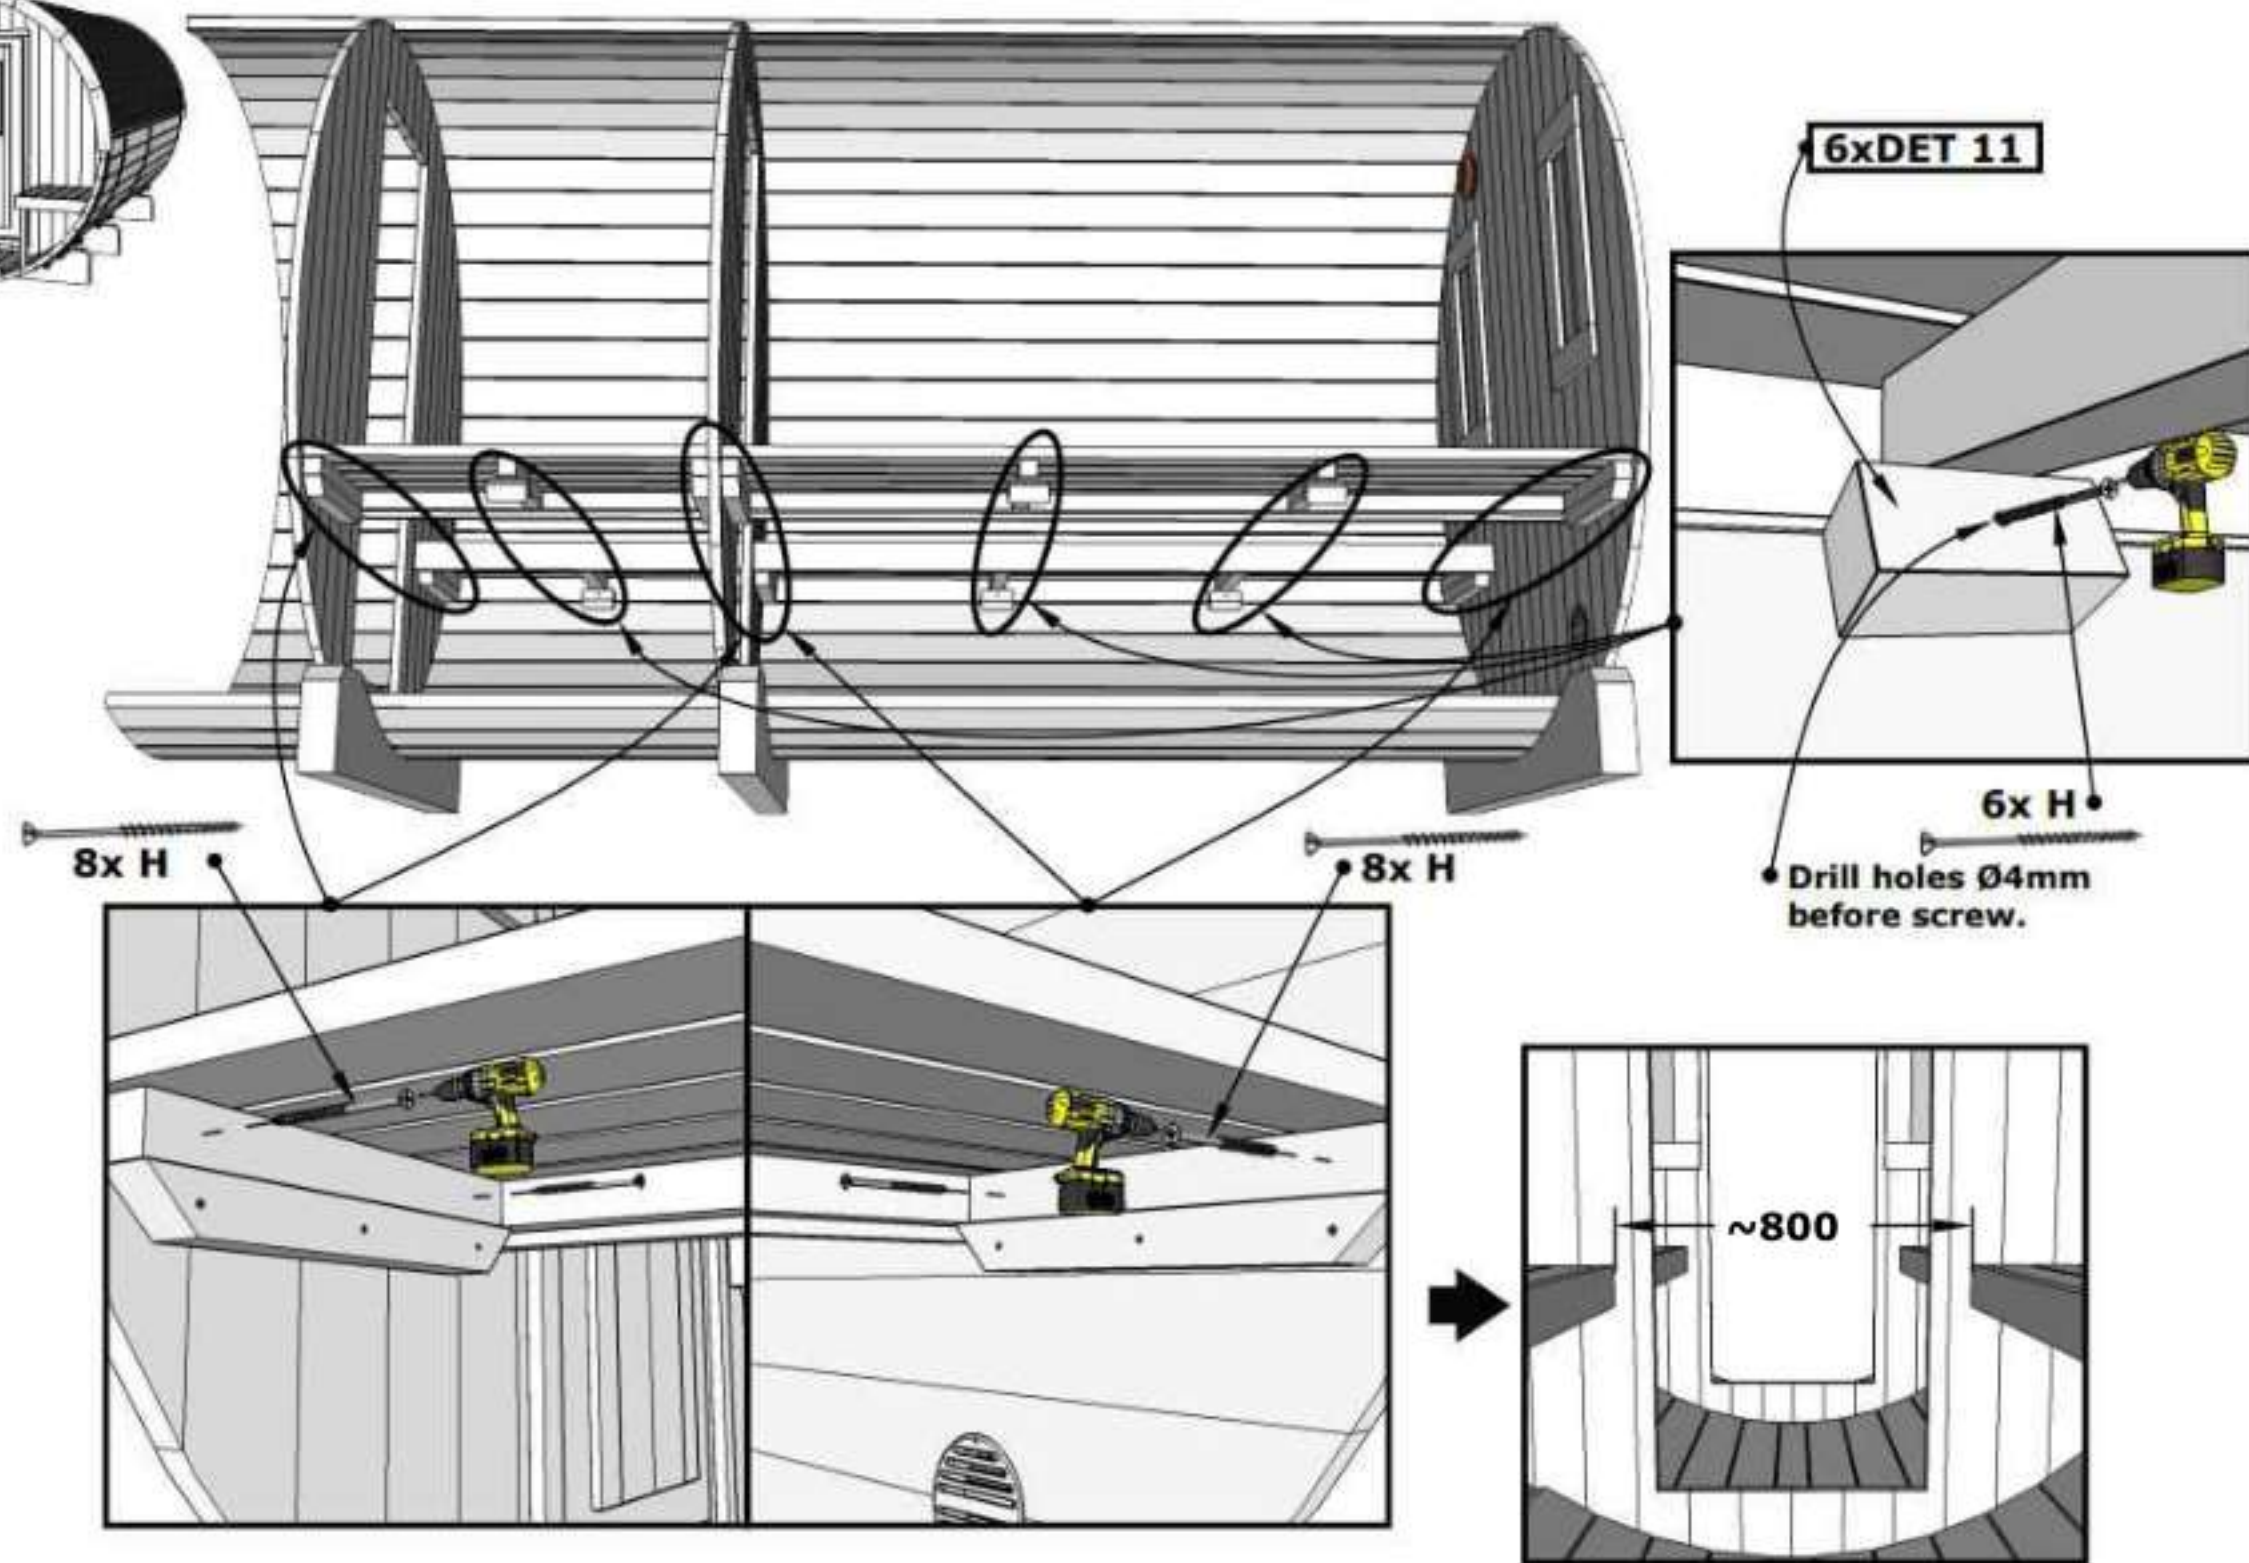

12.

Sauna 400, D205

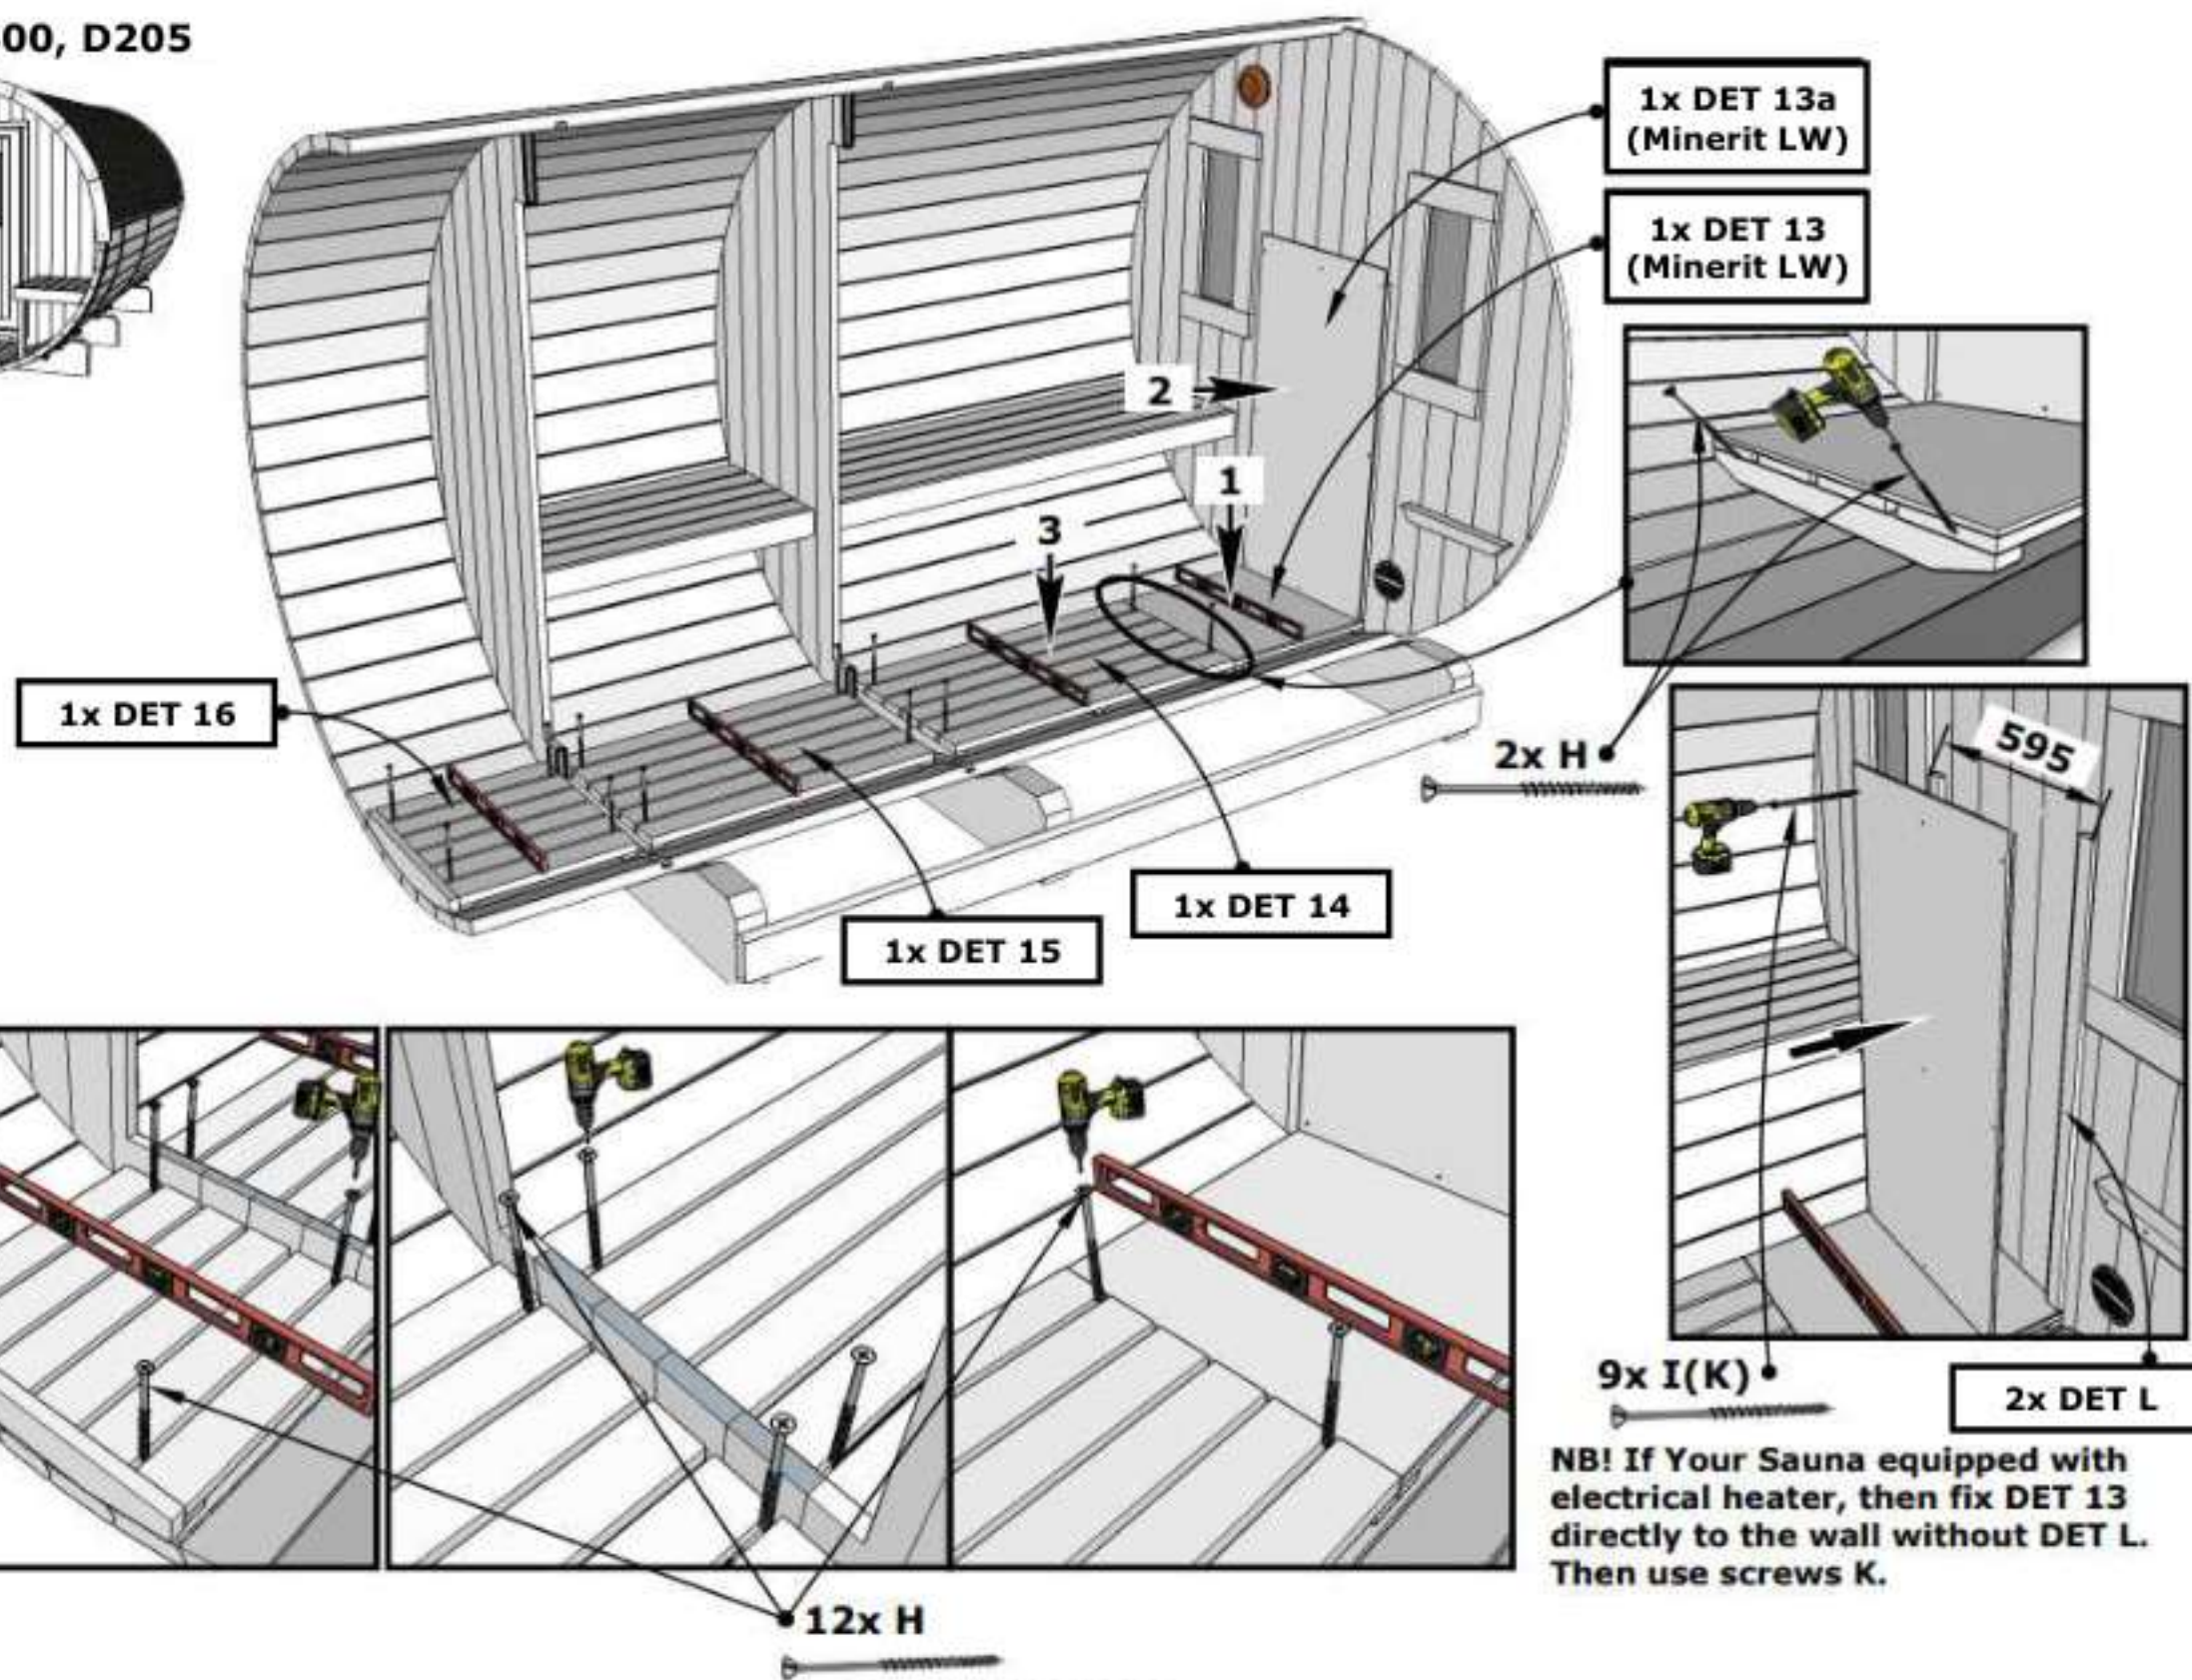


13.

Sauna 400, D205



I

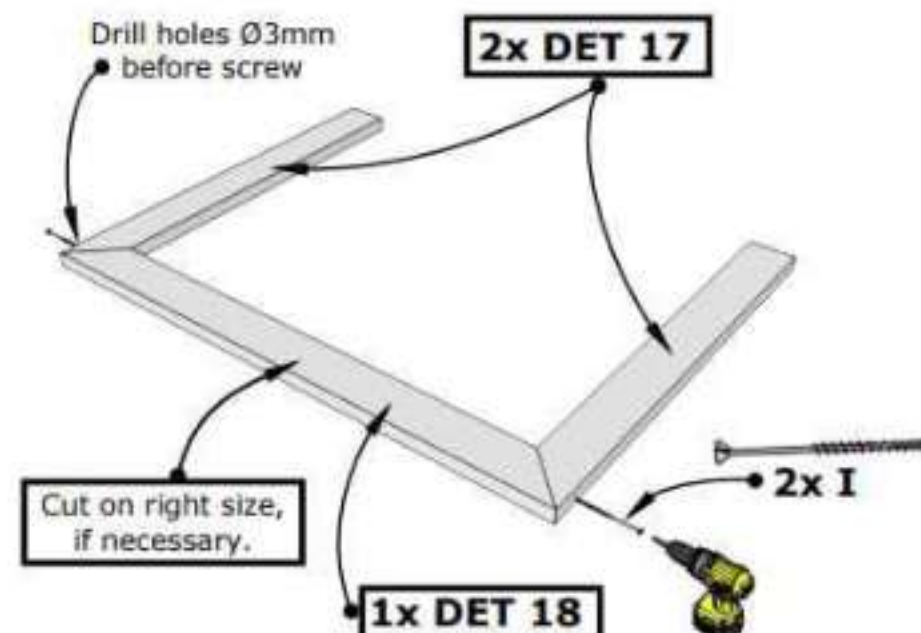

II

NB: Place sauna heater first

Drill holes Ø4mm before screws







III

14.

Sauna 400, D205



Use waterlevel!
NB! Place doors
from inside!

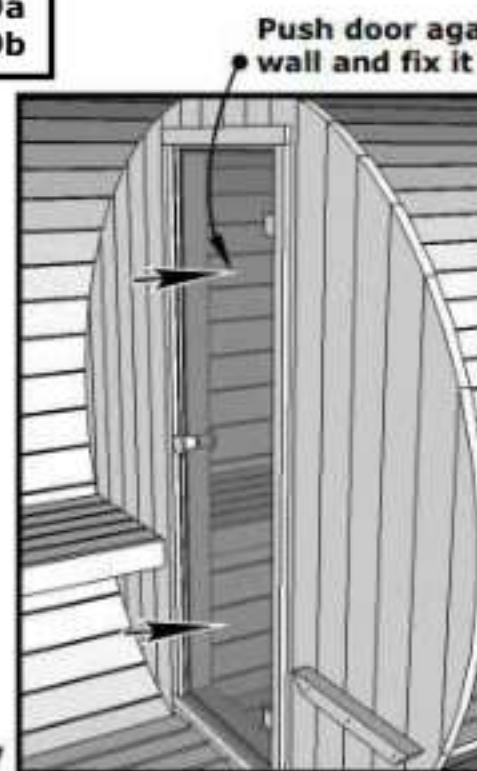
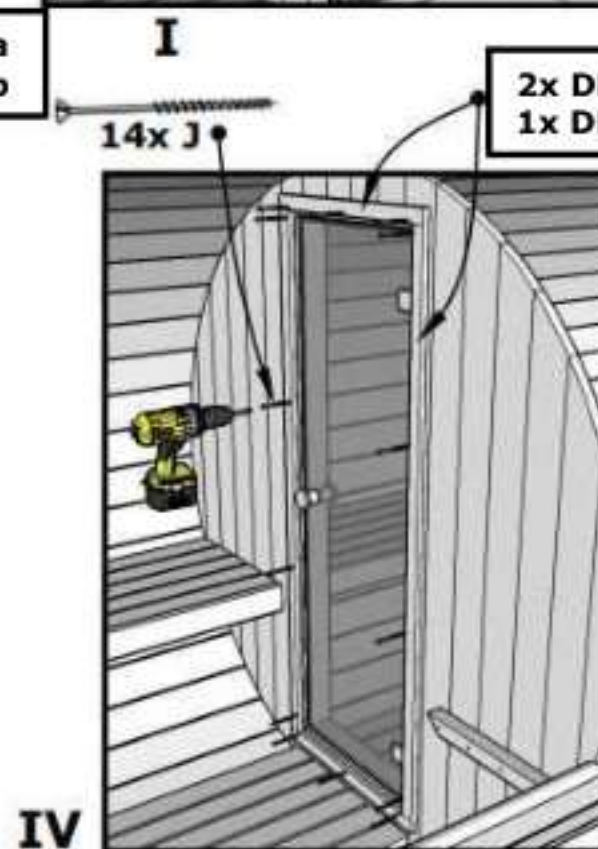
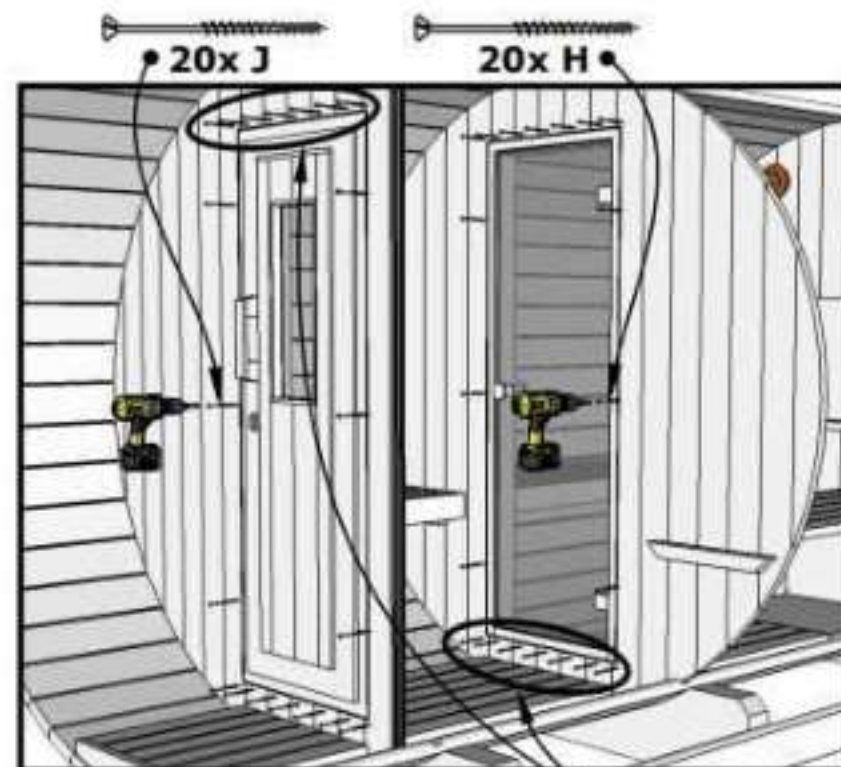
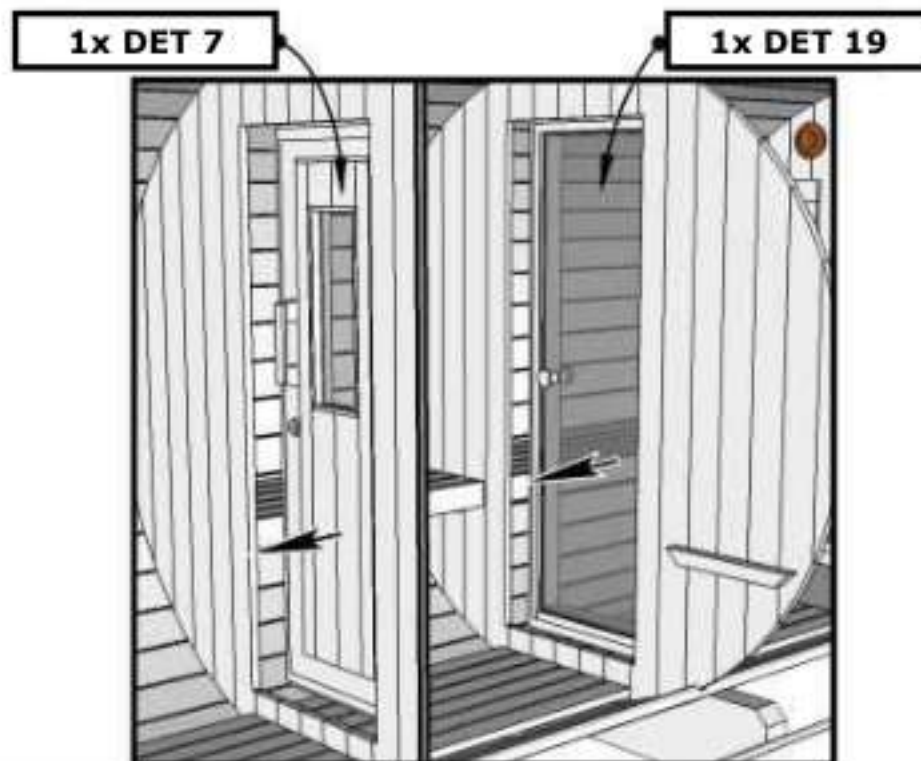


15. III


Sauna 400, D205




Drill holes Ø4mm
before screw.

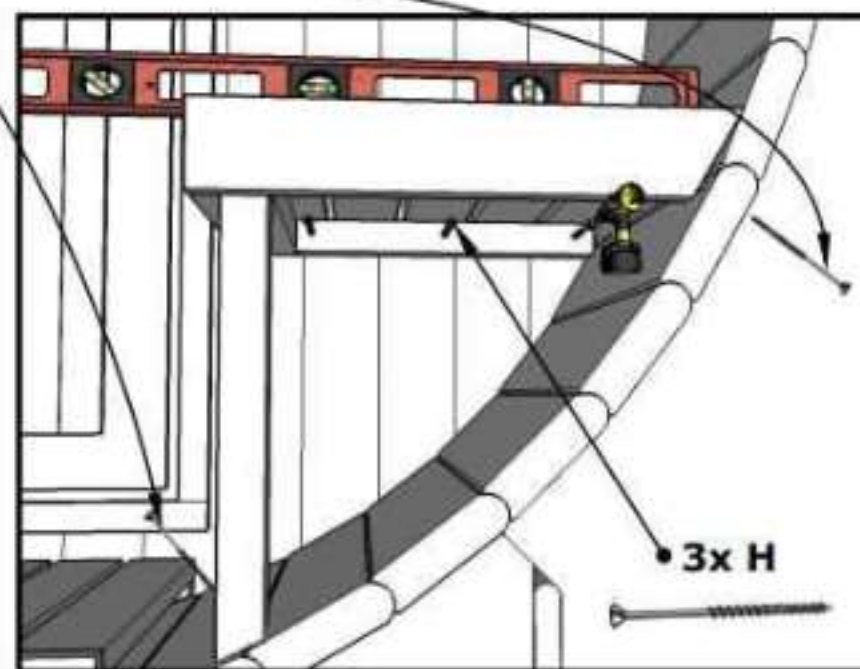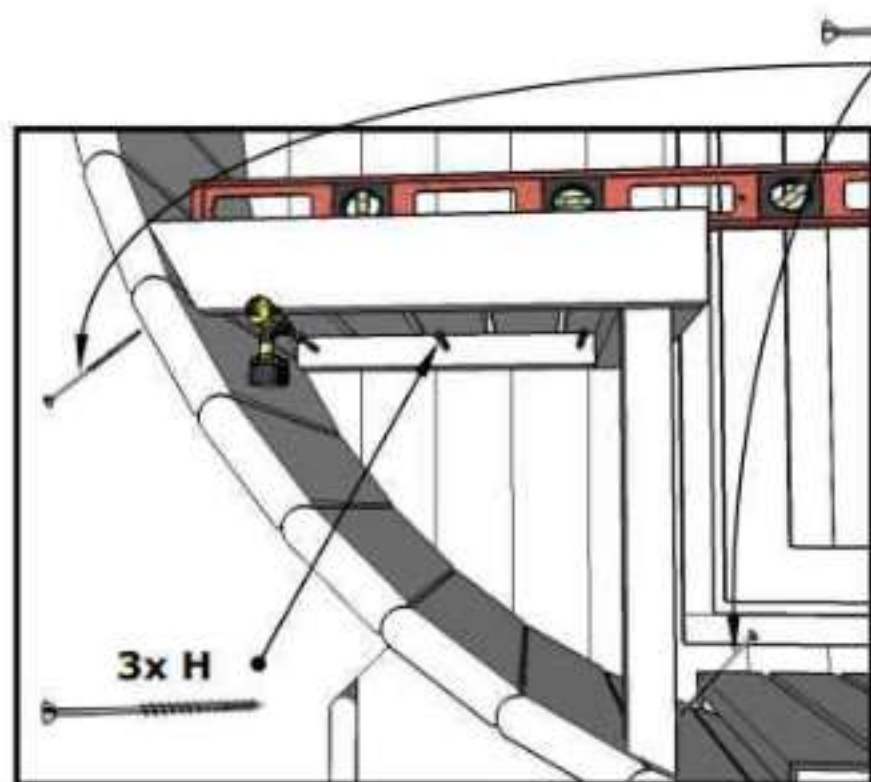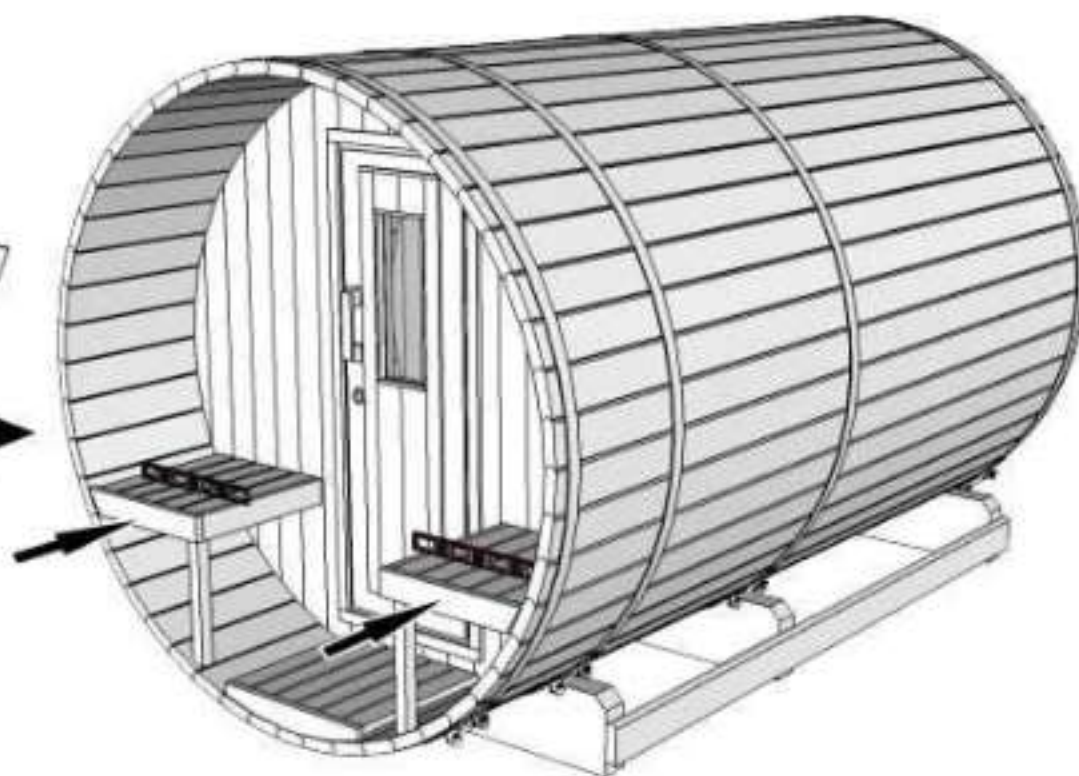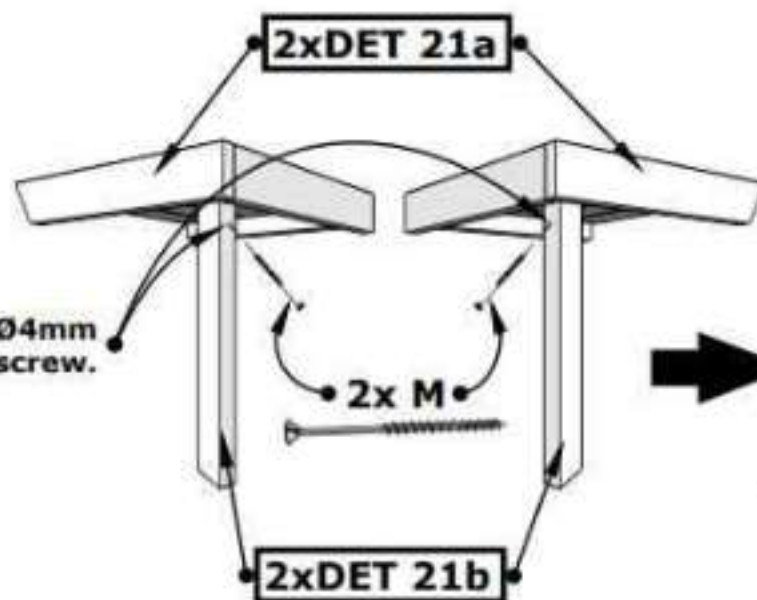

Sauna 400, D205

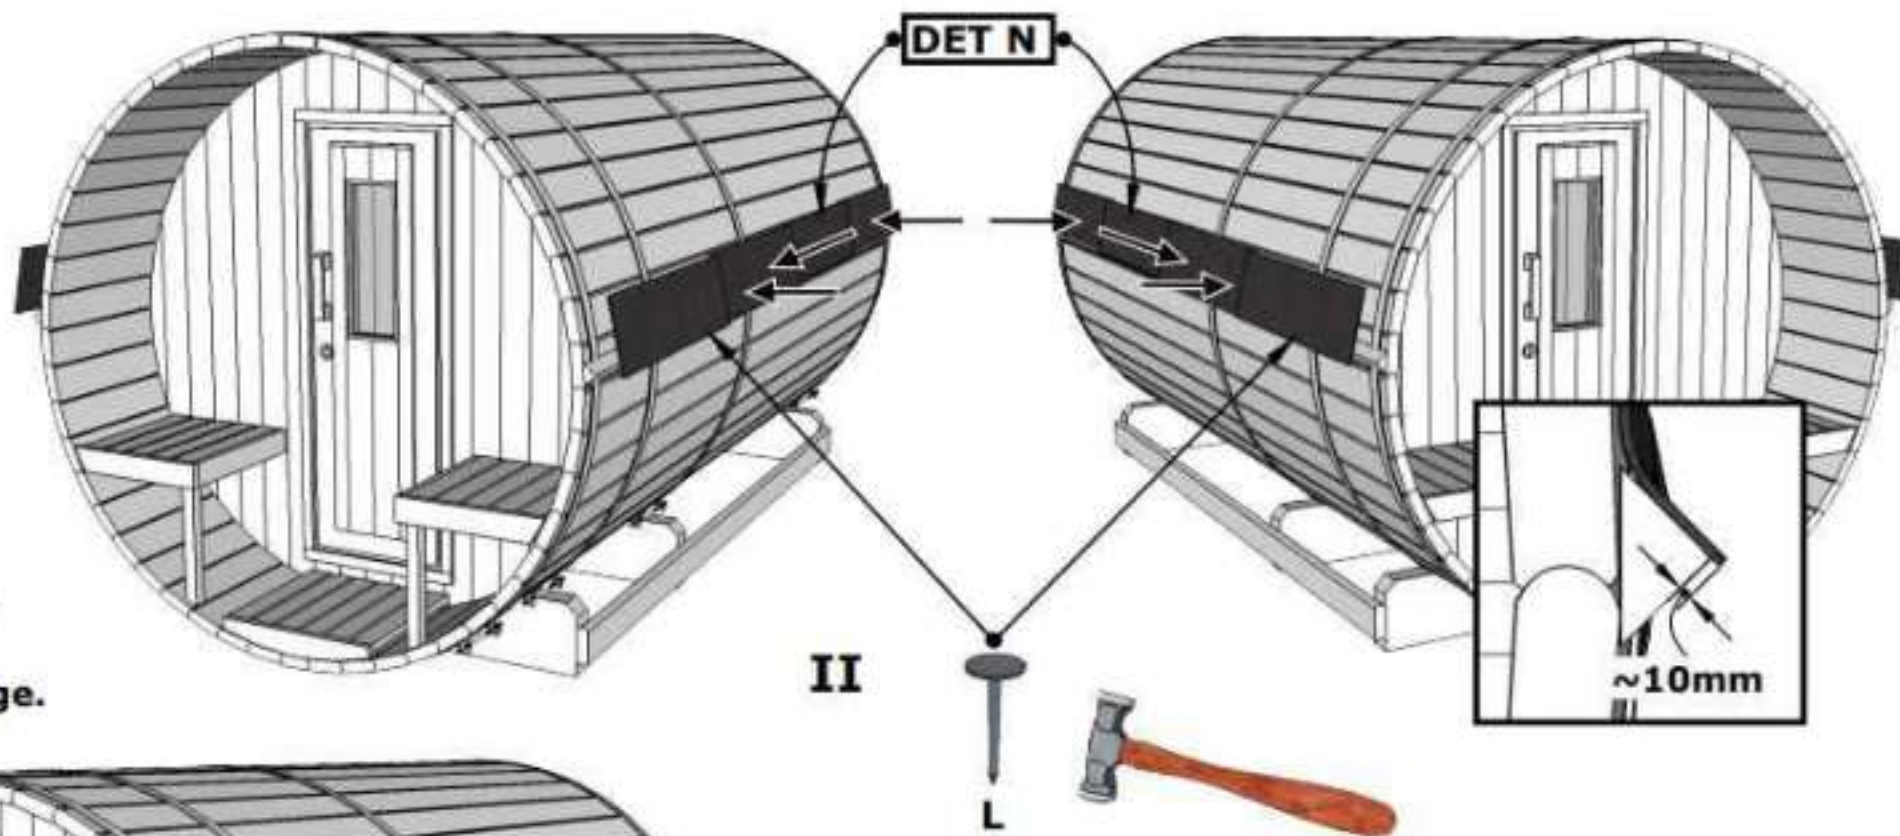

NB! See also shingles installation manual inside shingles package.



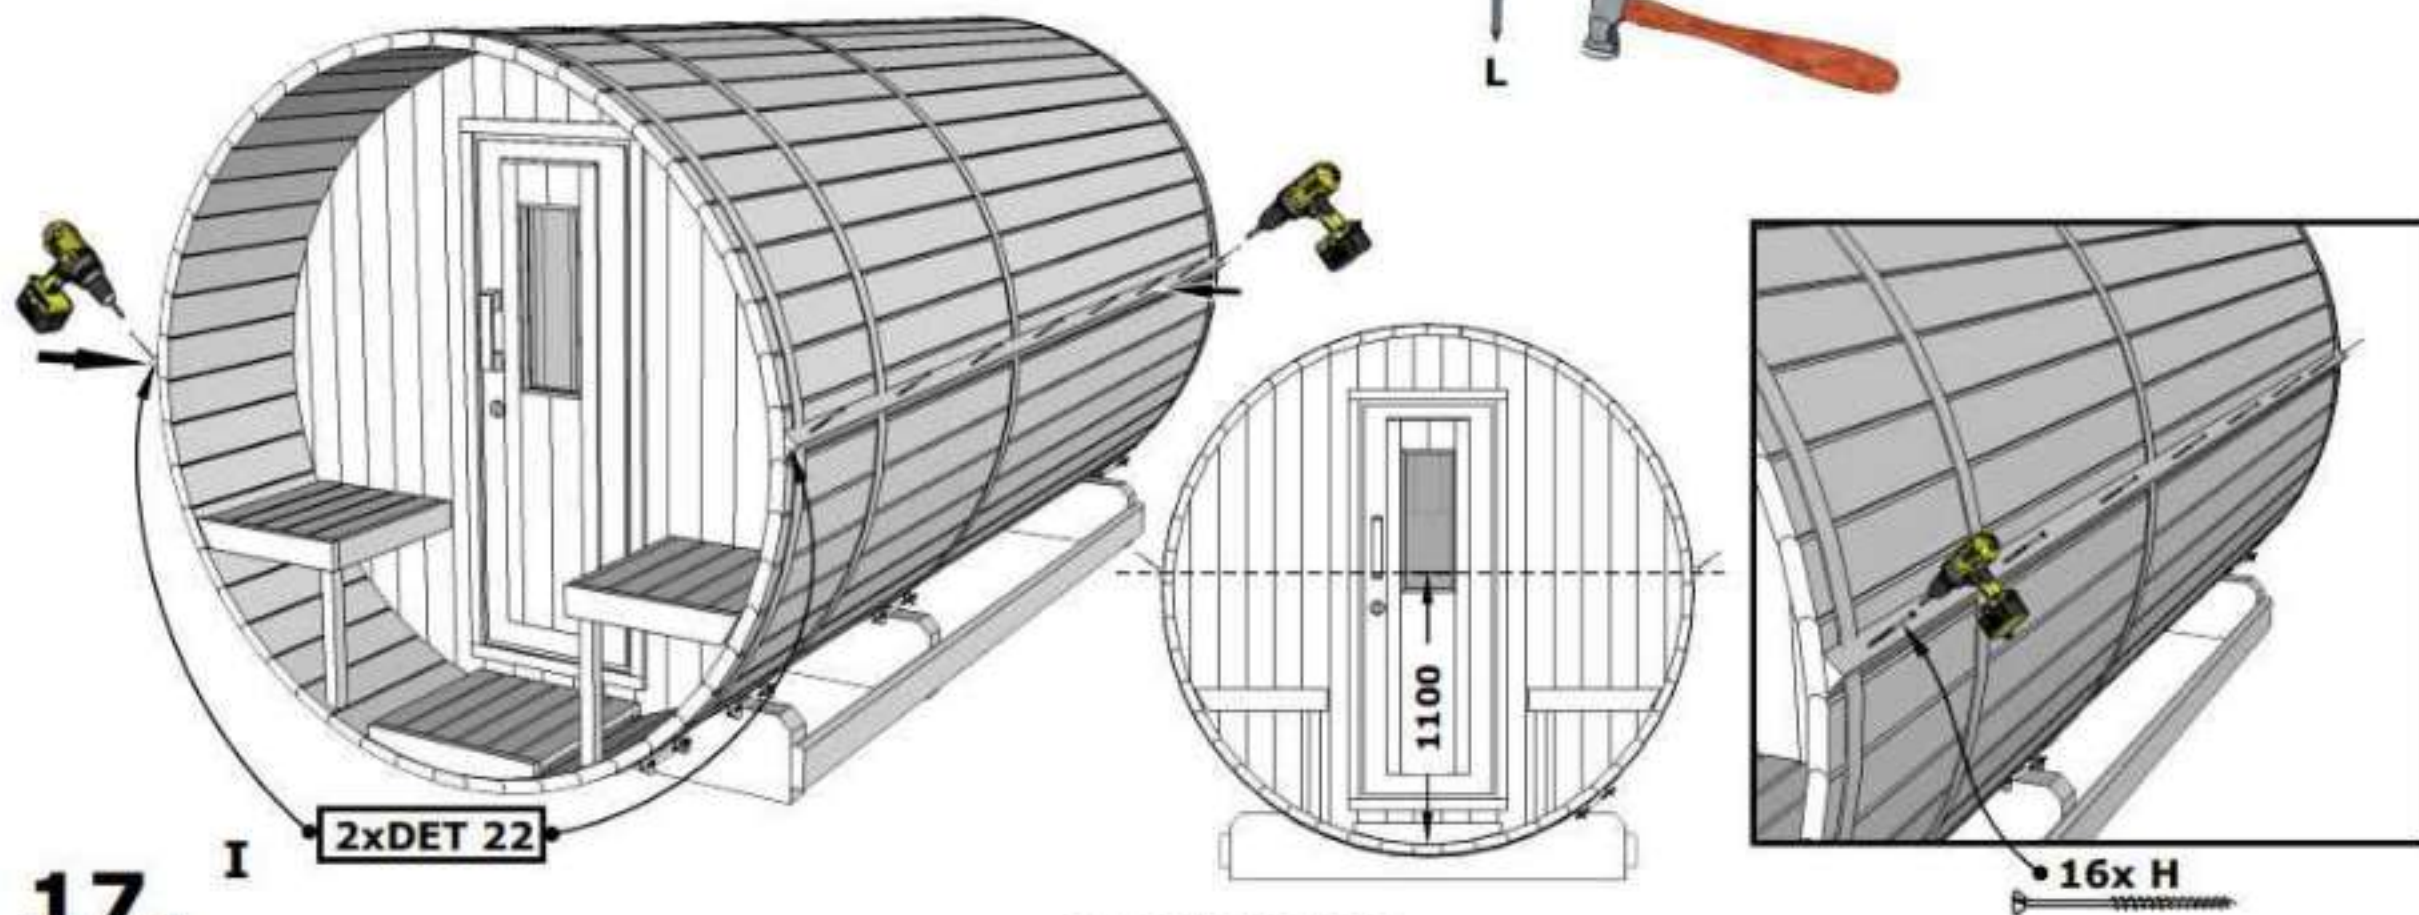


17.

Sauna 400, D205



NB! See also shingles installation manual inside shingles package.

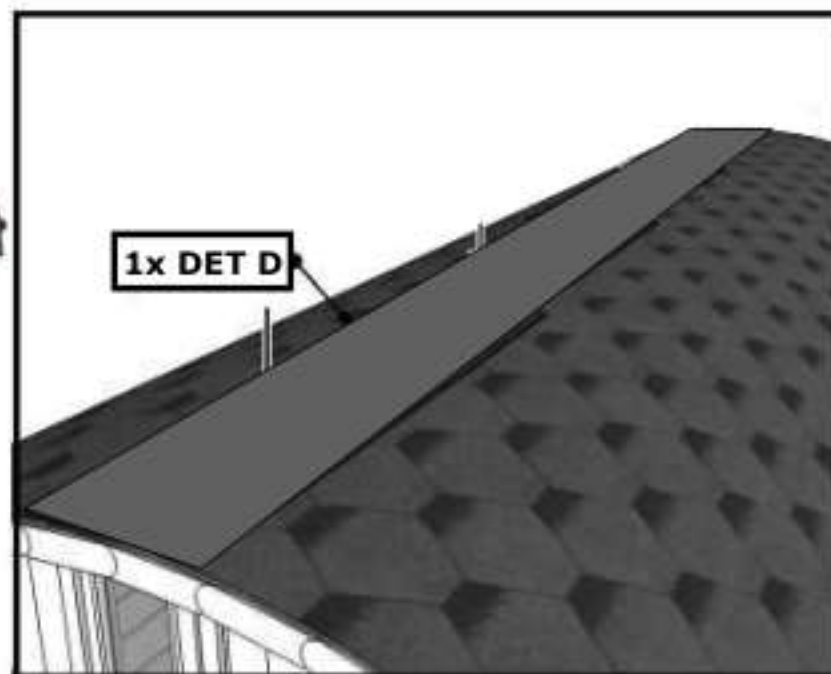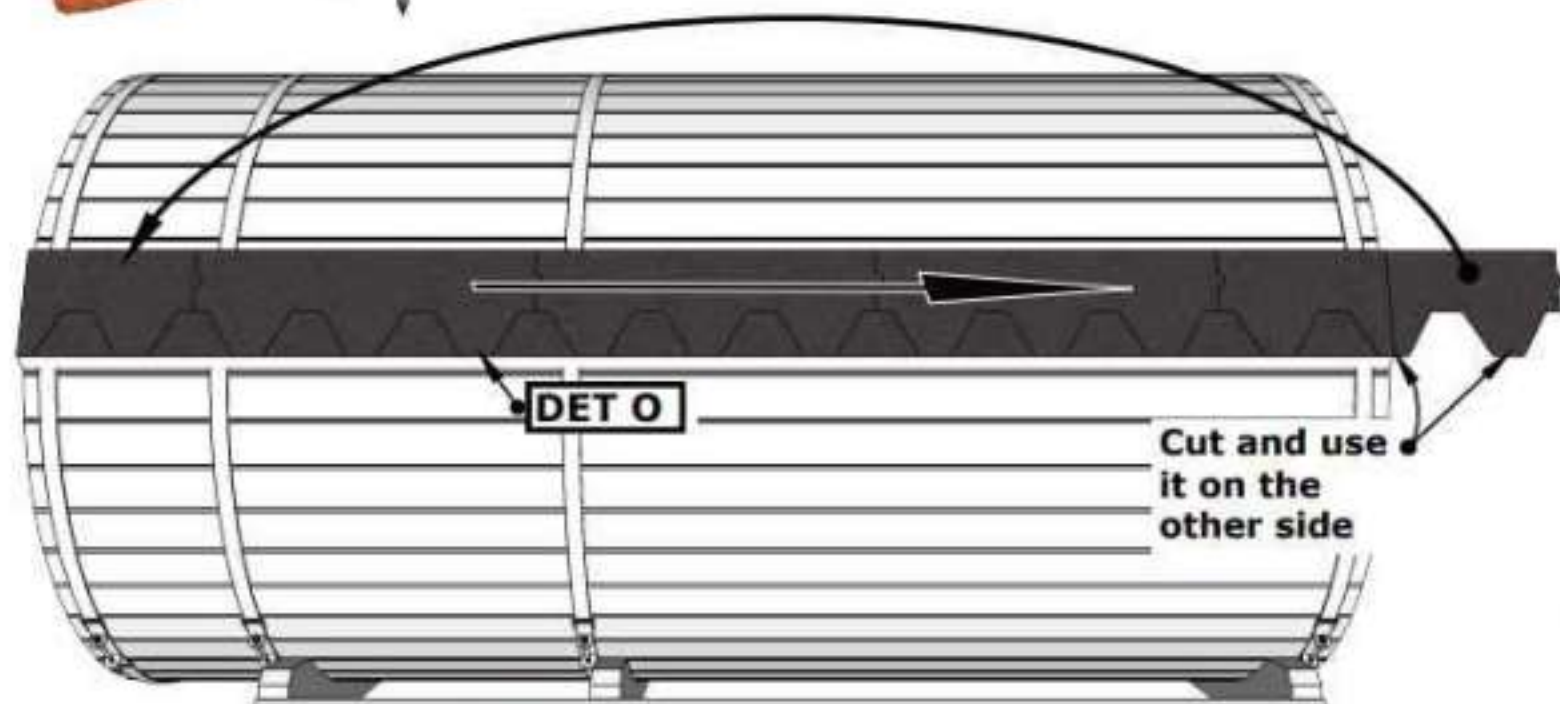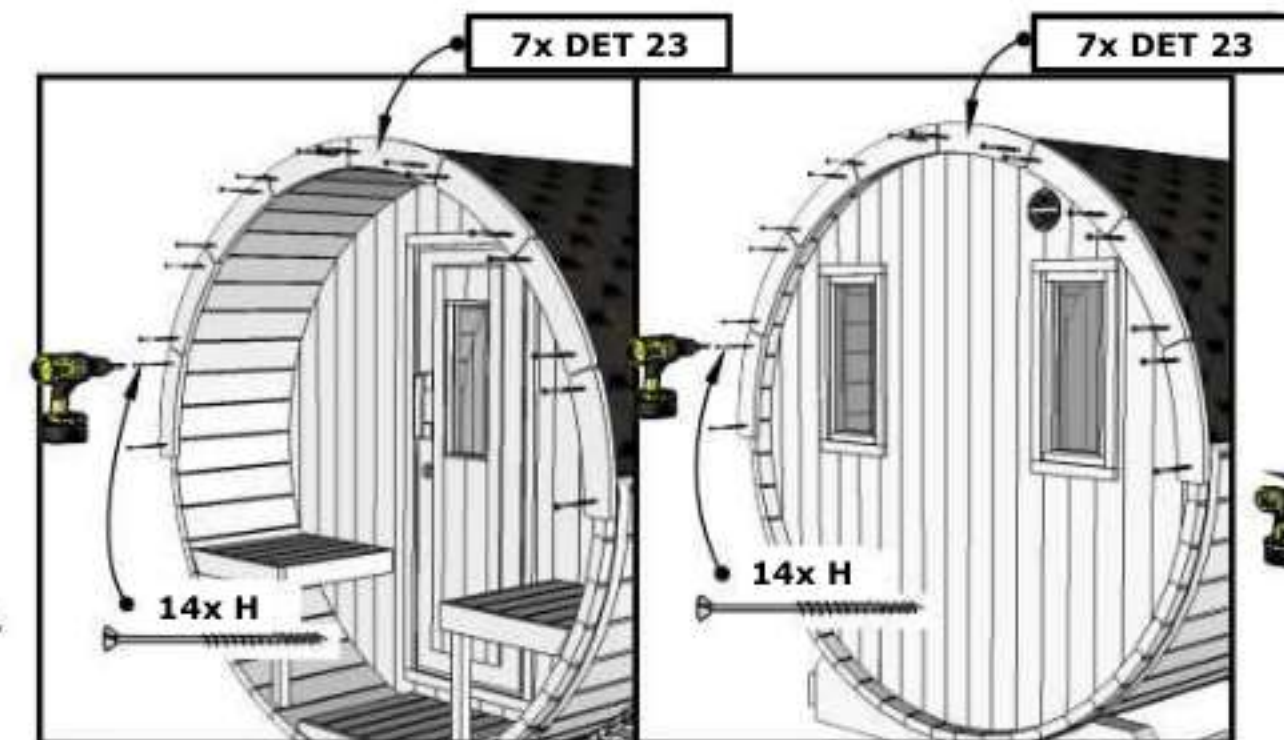

18.

I



II